

FINELINE®

LANDING AND CAR DOOR

Code	GM.2.001049.EN
Version	Q
Date	17.04.2025


Ty 01-02/C



Ty 4S Ty 4AS



Ty 11-12/R-L

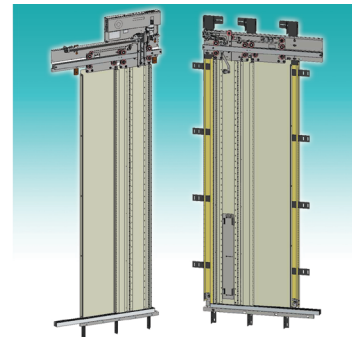

COMPLIANCE
EN81 20/50

No part of this publication may be reproduced or translated, even in part, without prior written permission from WITTUR.

Subject to change without notice!

© Copyright WITTUR 2025



INSTRUCTION HANDBOOK LANDING AND CAR DOORS

Code GM.2.001049.EN
Version Q
Date 17.04.2025

EN English from Pg. 1 to 78 / INSTRUCTION HANDBOOK LANDING DOOR (LD)


EN English from Pg. 79 to 156 / INSTRUCTION HANDBOOK CAR DOOR (CD)

LANDING DOOR (LD)
CAR DOOR (CD)

Mod. →

P	Updated pages 28 - 30, 93, 97, 98	18/04/25
N	Bar Code replaced at end of document	06/10/17
M	General up-dating	08/06/17
MOD.	DESIGNATION	DATE

LANDING DOOR

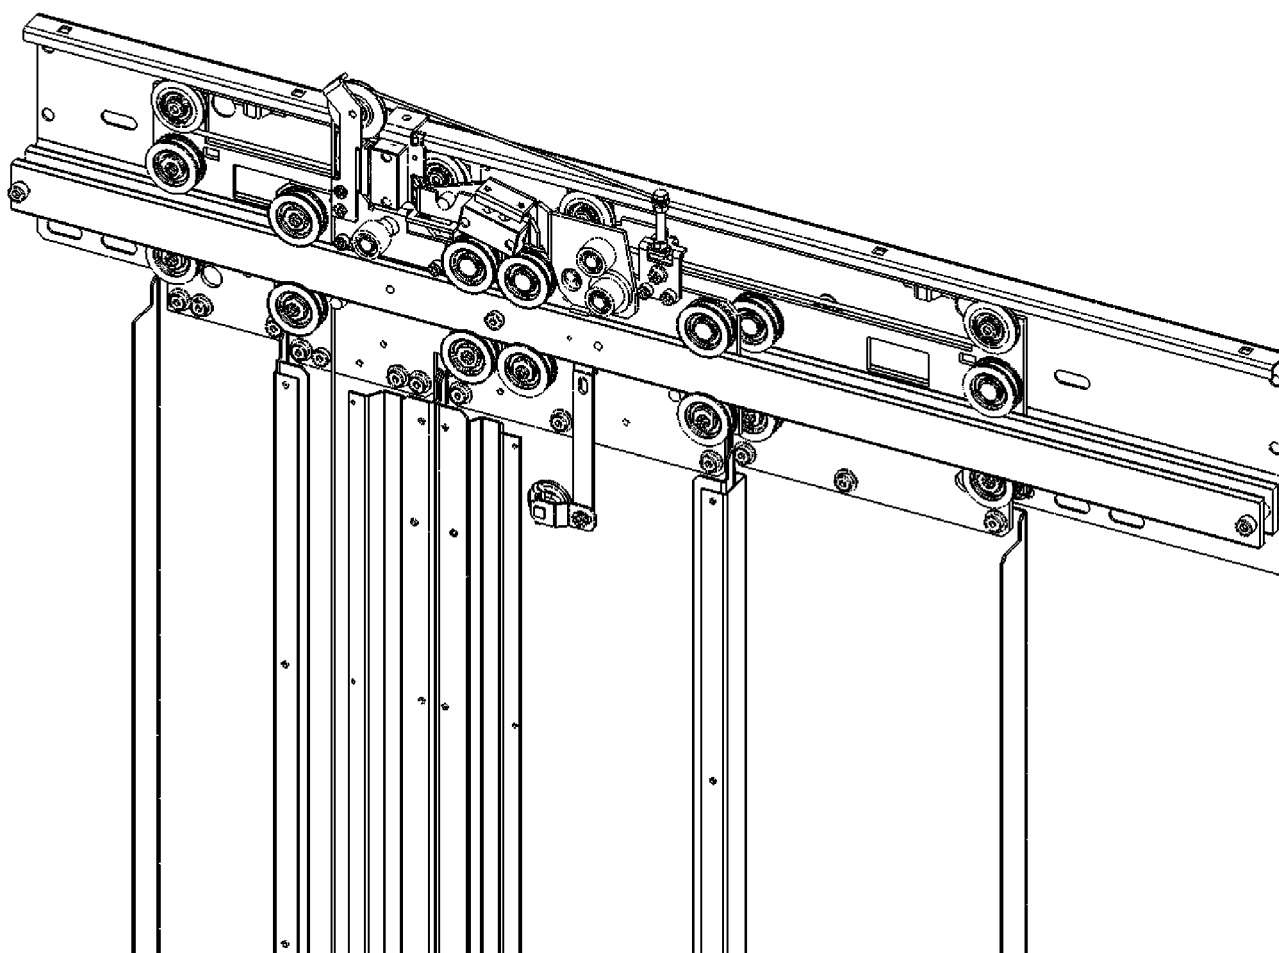

Mod. INDEX

Symbols used	Pag. 2
Foreword and Warnings	Pag. 3
Suggestions, Installation tools and Delivery	Pag. 4
1. Installation	Pag. 5
1.1 General description: Ty 4AS, Ty 4S.	Pag. 5
1.2 General description: Ty 01/C, Ty 11/R-L	Pag. 6
1.3 Landing door alignment with car door.	Pag. 7
1.4 Identification	Pag. 9
1.5 Positioning of the landing door.	Pag. 10
1.6 Assembly of the sill	Pag. 13
1.7 Assembly of the frame.	Pag. 16
1.8 Assembly of the sill for door with frames DF= 10 or DF=25.	Pag. 19
1.9 Assembly of the mechanism cover	Pag. 25
Mod. 1.10 Assembly of the top track.	Pag. 26
1.11 Assembly of door panel.	Pag. 47
1.12 Assembly of the emergency opening device	Pag. 52
1.13 Emergency opening contact (optional)	Pag. 53
1.14 Pit Egress Device (optional)	Pag. 54
1.15 Assembly of the closing weight rope	Pag. 55
1.16 Toe guard assembling	Pag. 57
1.17 Placing the mechanisms on the thresholds	Pag. 58
1.18 Assembly of the panel buffers	Pag. 59
1.19 Assembly of the lintel	Pag. 61
1.20 Door contact cable.	Pag. 64
1.21 Instruction on how to keep the doors in good operating conditions	Pag. 65
1.22 Testing the functions	Pag. 66
2. Maintenance.	Pag. 70
2.1 Replacement of the sliding shoes	Pag. 70
2.2 Replacement of the roller	Pag. 71
2.3 Replacement of the synchronisation rope	Pag. 73
2.4 Checking the locking device	Pag. 75
2.5 Top track - and panel fixation	Pag. 80
2.6 Checking the door gap.	Pag. 80

The points that are important under the safety viewpoint and danger warnings are indicated with these symbols:



Danger general



Important warnings



Risk of personal injury (e.g. sharp edges, protruding parts)



Risk of damage to mechanical parts (e.g. incorrect installation)



Live parts

Congratulations on choosing a **WITTUR** product!

Before starting the installation of this product, read the information contained in this document.

Before installation work begins, it is in your own interests to clarify what structural and spatial conditions are available for installation work, so that you can see which installation procedures should/must be carried out. Therefore it is recommended that all circumstances be taken into consideration, and to mentally plan the installation sequence before any rash or badly planned work is carried out. Check the goods or parts for correct and full delivery upon receipt.

You will find important warnings on how to assemble and maintain your **WITTUR** product in good operating conditions and to get the maximum of your investment.

You will also find important information concerning the product care and maintenance which are an important factor to ensure safety at all times.

WITTUR has long been involved in research aimed at reducing noise level and in design that takes into due consideration the product quality and the conservation of environment.

 This document is an integral part of the supply and must be available in the lift power room at all times.

All products are provided with identification type label and in case with certification marks in accordance with the current rules.

In case of need concerning the product, the identification data on the label must be always communicated to us.

We hope you will get full satisfaction from this **WITTUR** product. Yours faithfully.

WITTUR

WARNINGS

- **WITTUR** will not be held liable for any damage caused by tampering of the packing material by thirds.
- Before starting assembly, check that the product received corresponds to the order and to the packing list and that no damage has occurred in transit.
- Within its policy of continual research, **WITTUR** reserves to make changes to its products without notice. The figures, descriptions and data contained in this manual are intended as purely indicative and not binding.



- To ensure the safety of the product, avoid any alteration or tampering.
- **WITTUR** liability will be limited to the original components only.

- **WITTUR** product is intended for use in the lift sector only, therefore **WITTUR** liability shall be limited to such use.
- This product is intended for professional use. Any improper use, including for hobby or DIY, is prohibited.



- In order to prevent any injury to persons and damage to property, the handling, installation, adjustment and maintenance must be carried out by suitably trained personnel, using appropriate clothing and equipment.
- Any masonry work connected with the correct installation of the product must be executed in a workman-like manner according to the applicable laws.
- The connection of the electric/electronic units to the local power supply must be executed in a workman-like manner according to the applicable laws.
- All metal parts supporting the electric/electronic units must be connected to an earth system in a workmanlike manner according to the applicable laws.
- Before connecting the product to the power supply check that the product's requirement corresponds with the power supply available.
- Before starting any work on the electric/electronic components disconnect power from the system.
- **WITTUR** shall have no responsibility on the execution of masonry works or the connection of electric/electronic components to the power supply.
- **WITTUR** shall not be liable for damages/injury to property/persons caused by improper use of the emergency opening devices.

INSTRUCTION HANDBOOK LANDING DOOR

Code	GM.2.001049.EN
Version	Q
Date	17.04.2025
Page	4.161

**SUGGESTIONS**

- Keep the material in the original packing, protected from bad weather and direct exposure to sun during the storage period in order to avoid the accumulation of water/condensation inside the packing material.
- Never dispose of packing material in the environment.
- Once dismantled, the product should be conveniently disposed as provided for by the local laws; never dispose of in the environment.
- Whenever possible, re-cycling is preferable to disposal in dump sites.
- Before re-cycling check the nature of the various materials and re-cycle in the appropriate way.

**INSTALLATION TOOLS**

Following tools are needed:

- hexagon keys 3mm, 5mm and 6mm
- Screw drivers (flat and crossheaded)
- Ratchet + extension; sockets 10mm and 13mm
- box spanner 17mm
- circlip plier

The landing toptrack is preadjusted at the factory. No other mechanical adjustments other mentioned in this instruction are required at site!

**DELIVERY**

- toptrack
- panels
- sill
- closing weight
- emergency opening device
- fixings

Only to be stored in the original package (plastic wrap).

The components must not be unpacked until the installation begins.

INSTRUCTION HANDBOOK LANDING DOOR


Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 5.161

1. INSTALLATION

1.1 GENERAL DESCRIPTION: TY 4AS, TY 4S


Fineline Landing Door Asymmetric

Ty 4AS

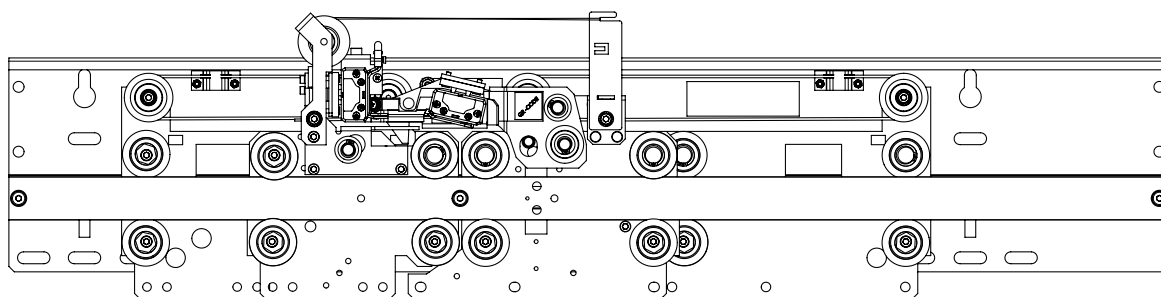

Fineline Landing Door Symmetric


Ty 4S

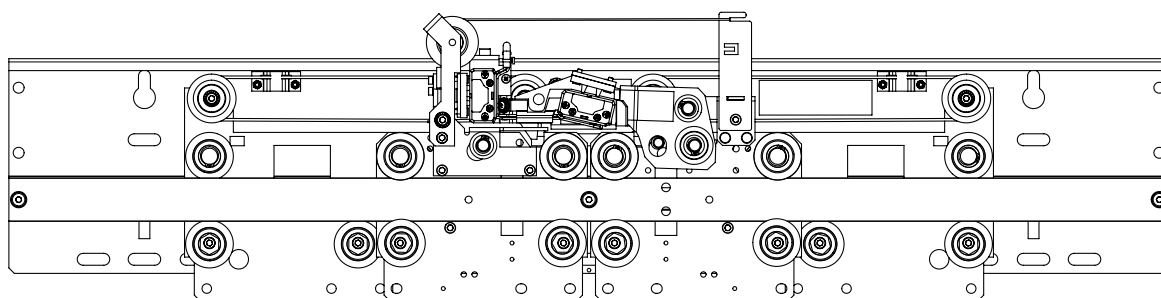

1.2 GENERAL DESCRIPTION: TY 01/C, TY 11/R-L


Fineline Landing Door Central Opening

Ty 01/C

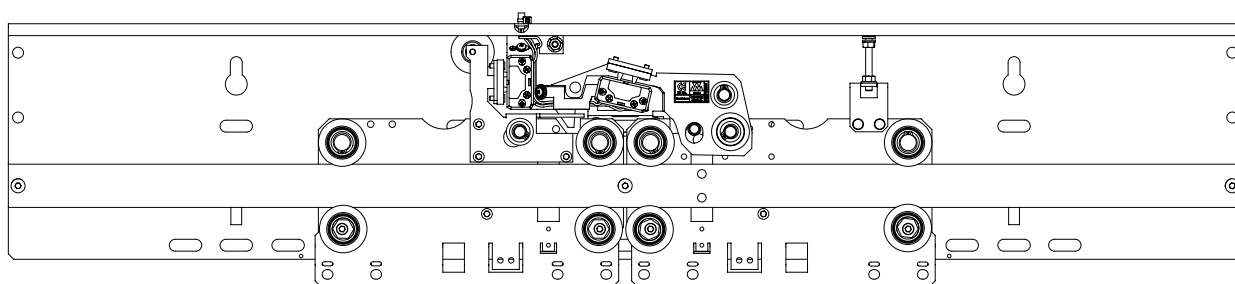

Fineline Landing Door Side Opening

Ty 11/R-L


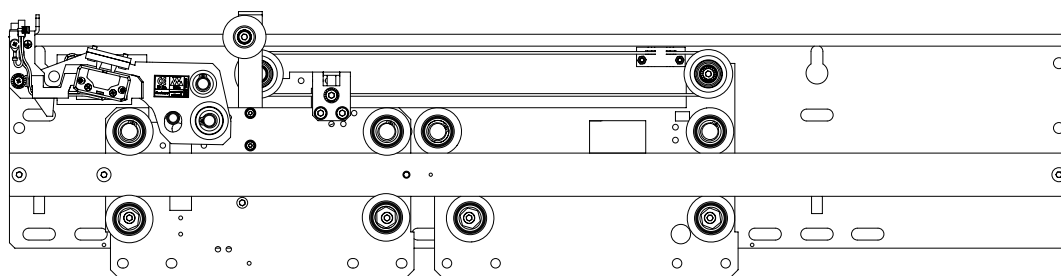


1.3 LANDING DOOR ALIGNMENT WITH CAR DOOR

Each landing door has a mark in the top track area which is representing the center of the clear opening. While for the symmetric door the hexagon screw indicates the door's clear opening line, for asymmetric doors a hole with a diameter of 3mm indicates the center of the clear opening line.



FLL symmetric

Ty 4S

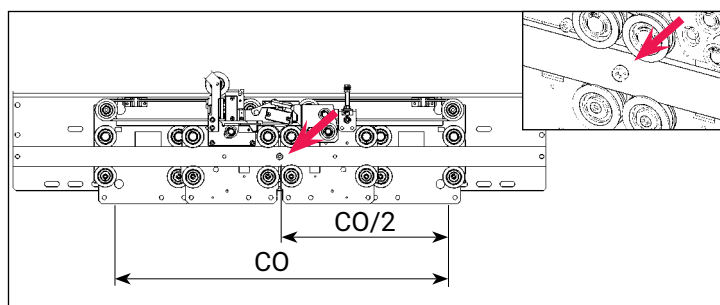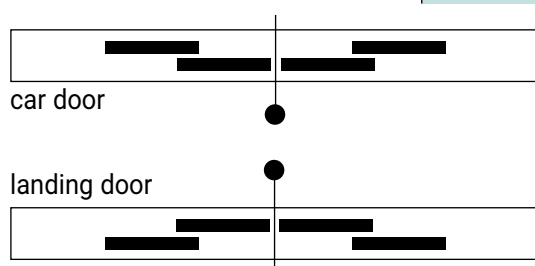



FLL asymmetric - left opening

Ty 4ASL

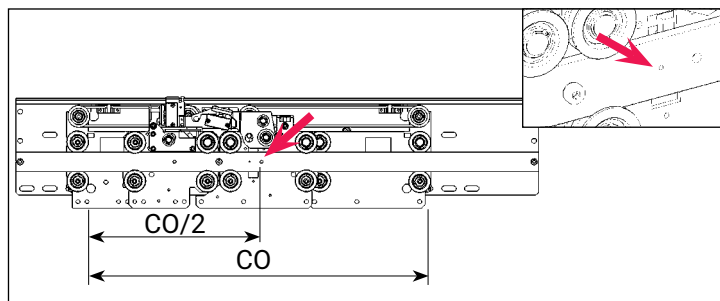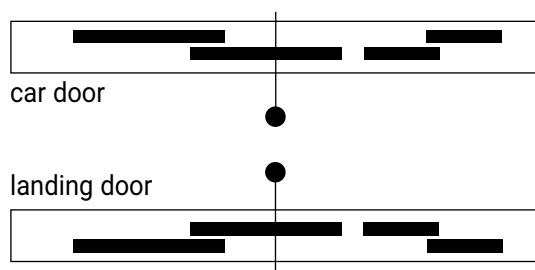

FLL asymmetric - right opening



Ty 4ASR

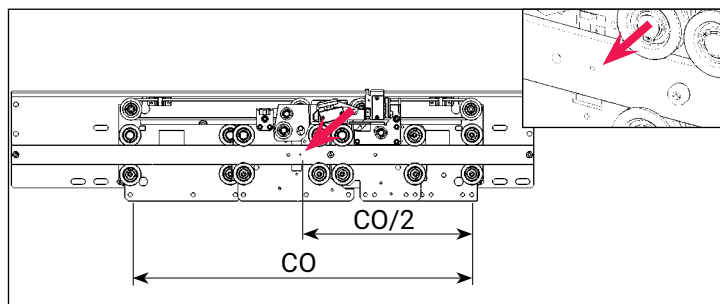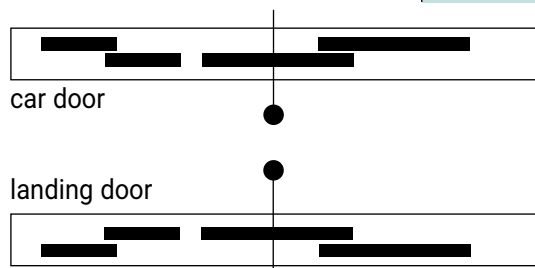

Each car door has a mark in the operator area which is representing the center of the clear opening.
While for the central opening and side opening door the hexagon screw indicates the door's clear opening line.



FLL

Ty 01/C

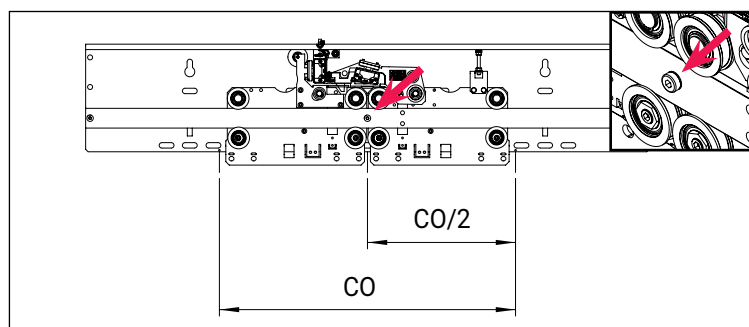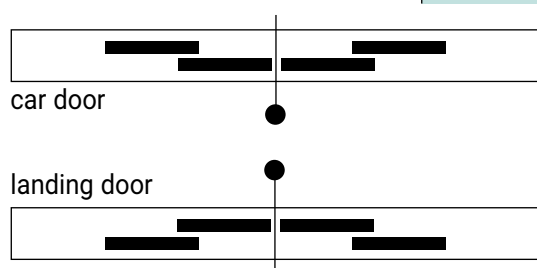


FLL - left side opening

Ty 11/L

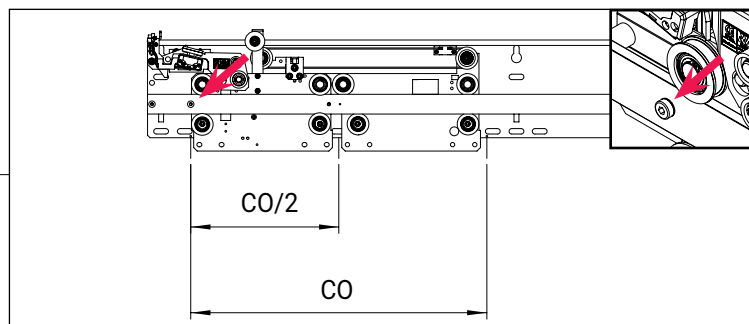
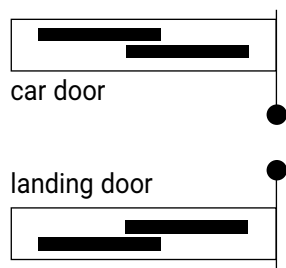


FLL - right side opening



Ty 11/R

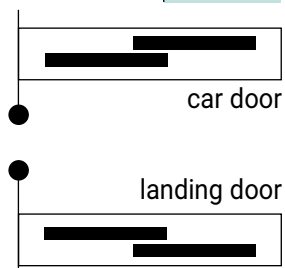

1.4 IDENTIFICATION

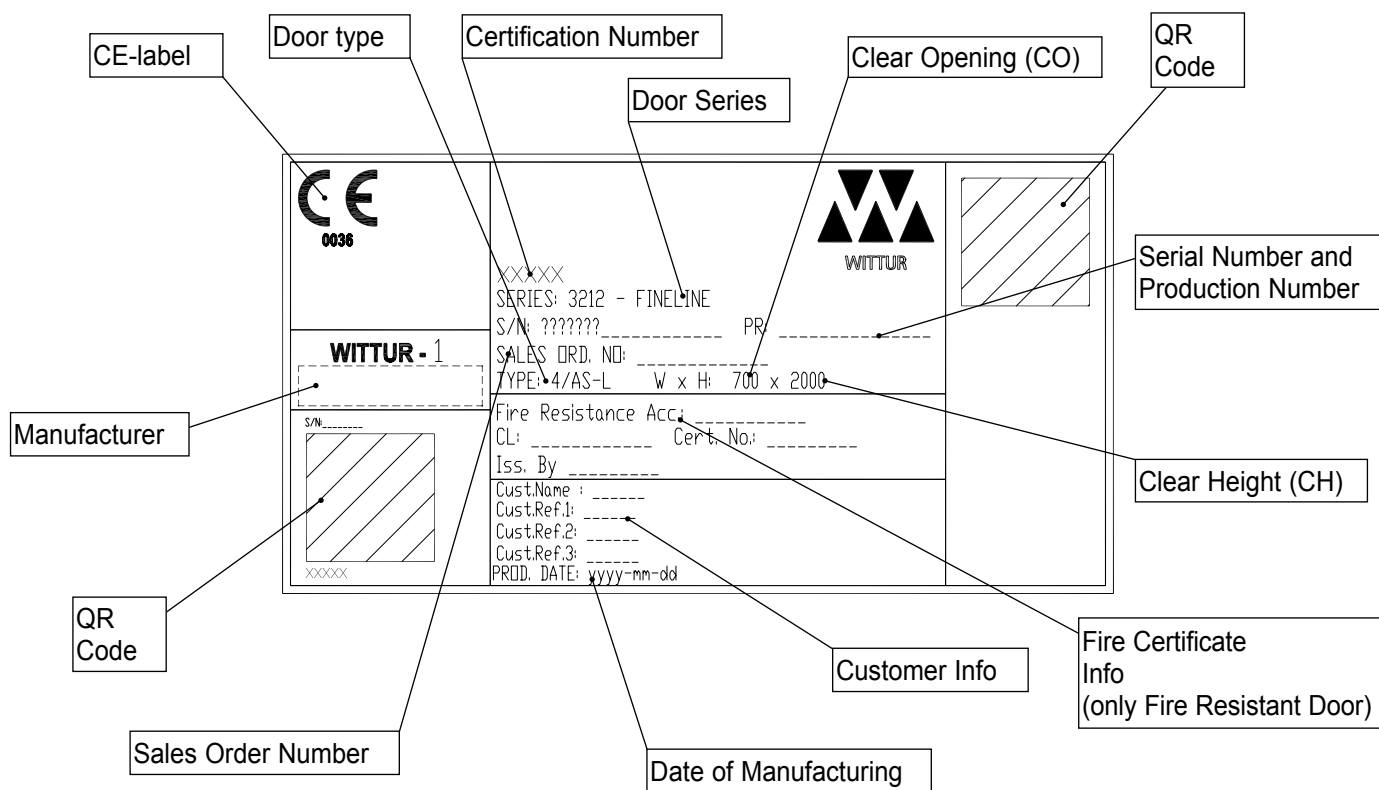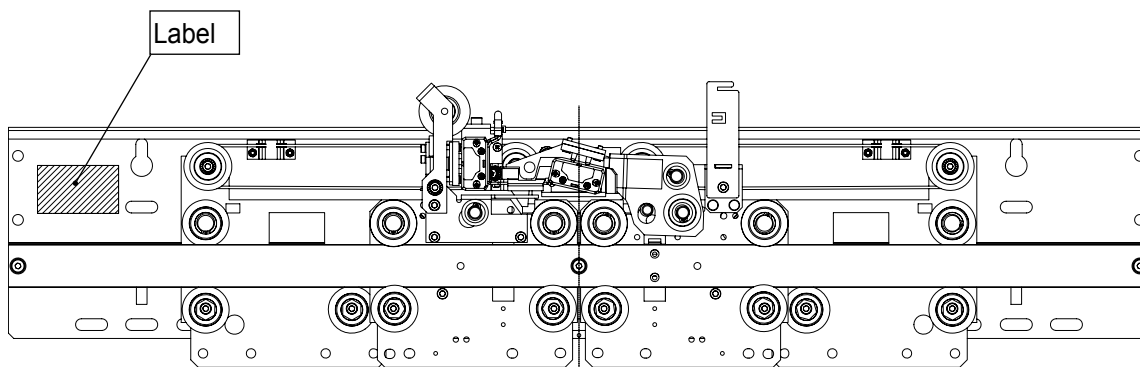

 1.5 POSITIONING OF THE LANDING DOOR

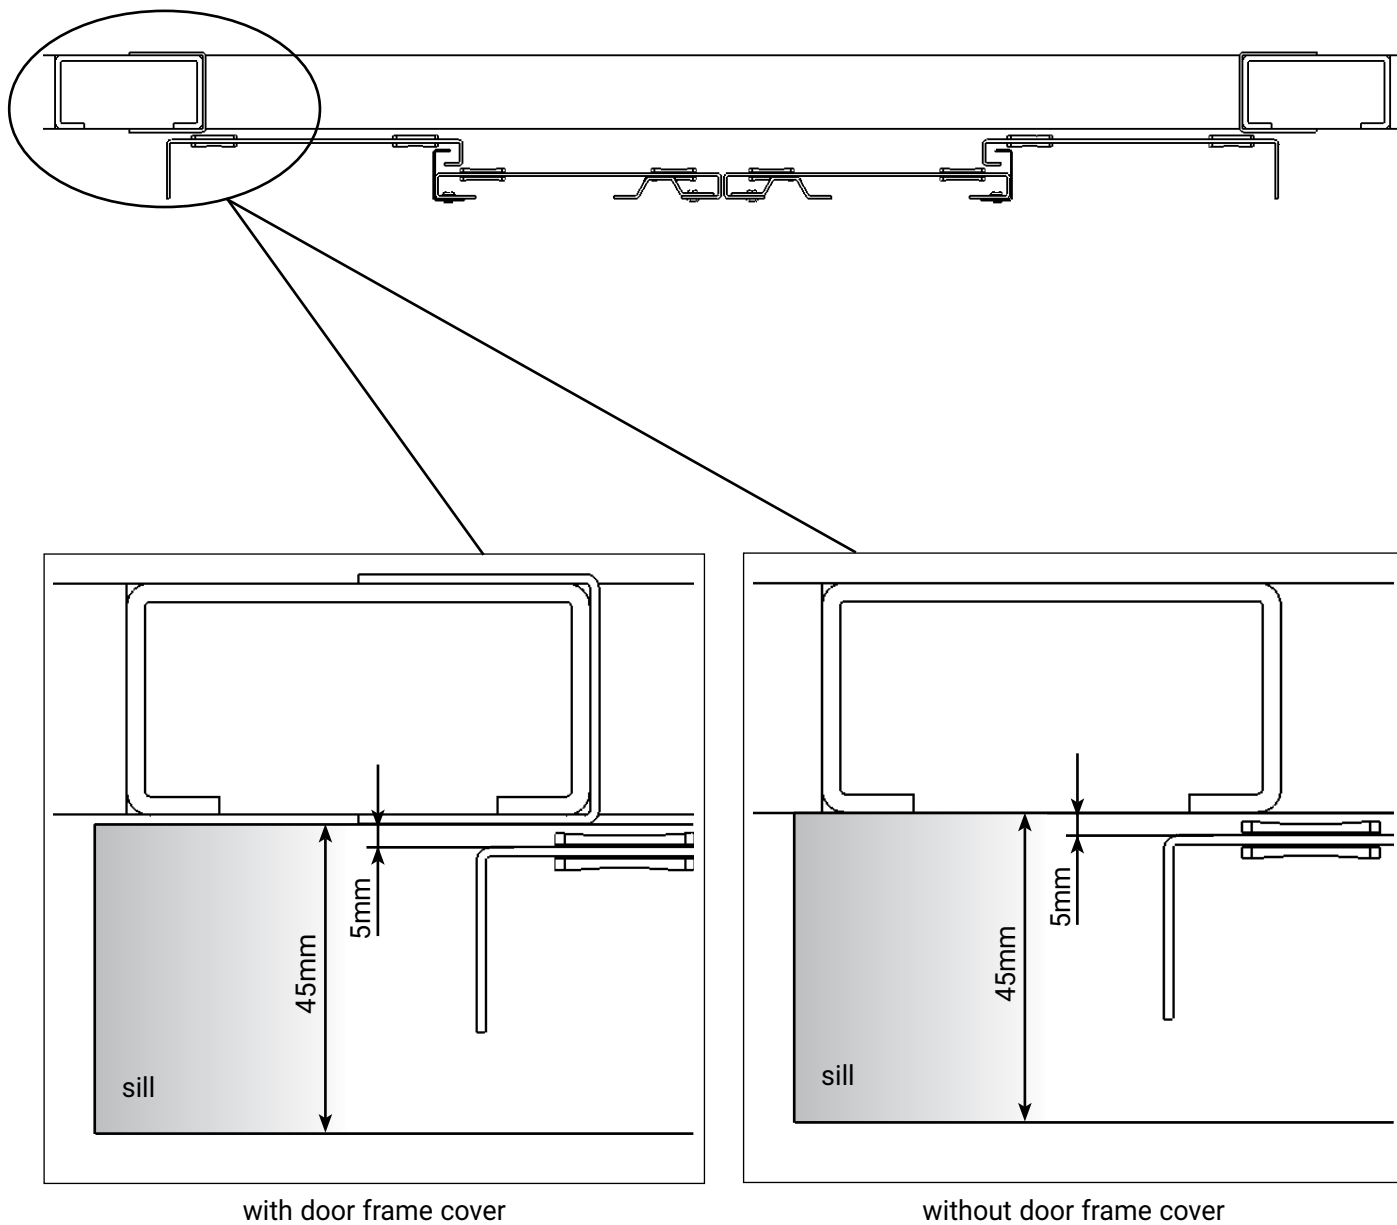



INSTRUCTION HANDBOOK LANDING DOOR


Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 11.161

Ty 01/C


Ty 11/R-L

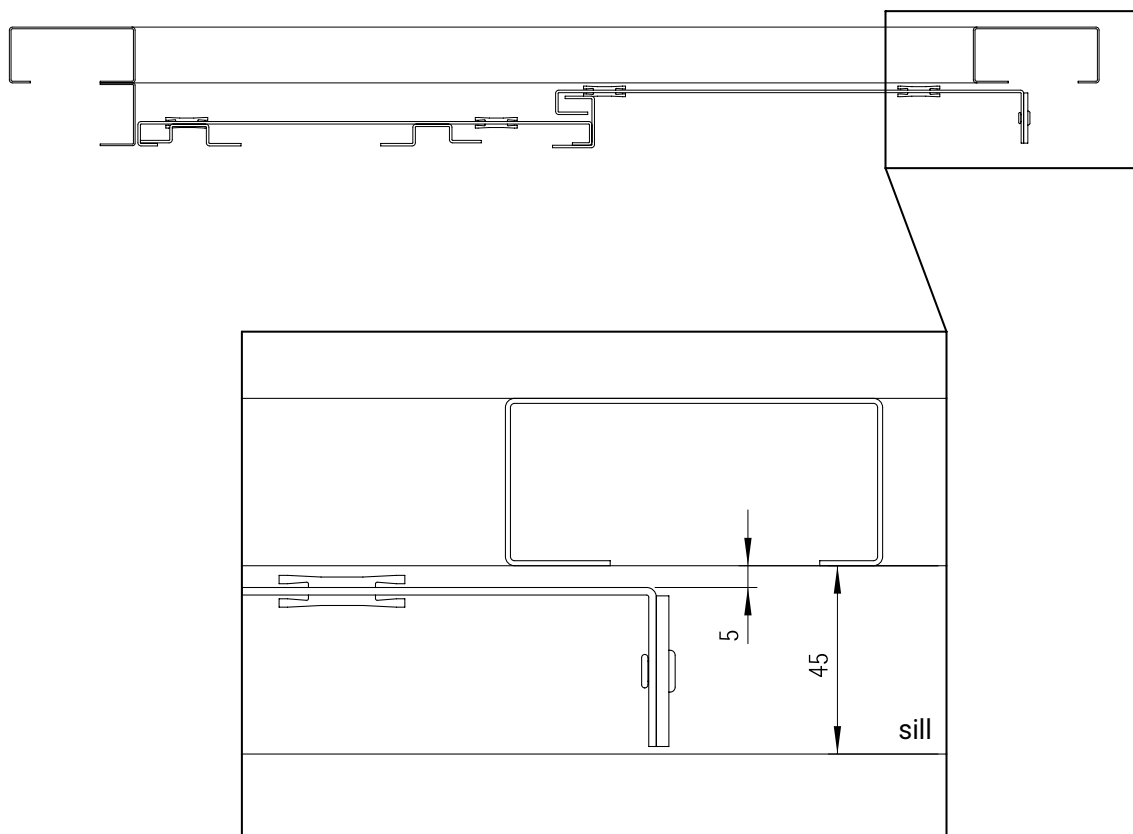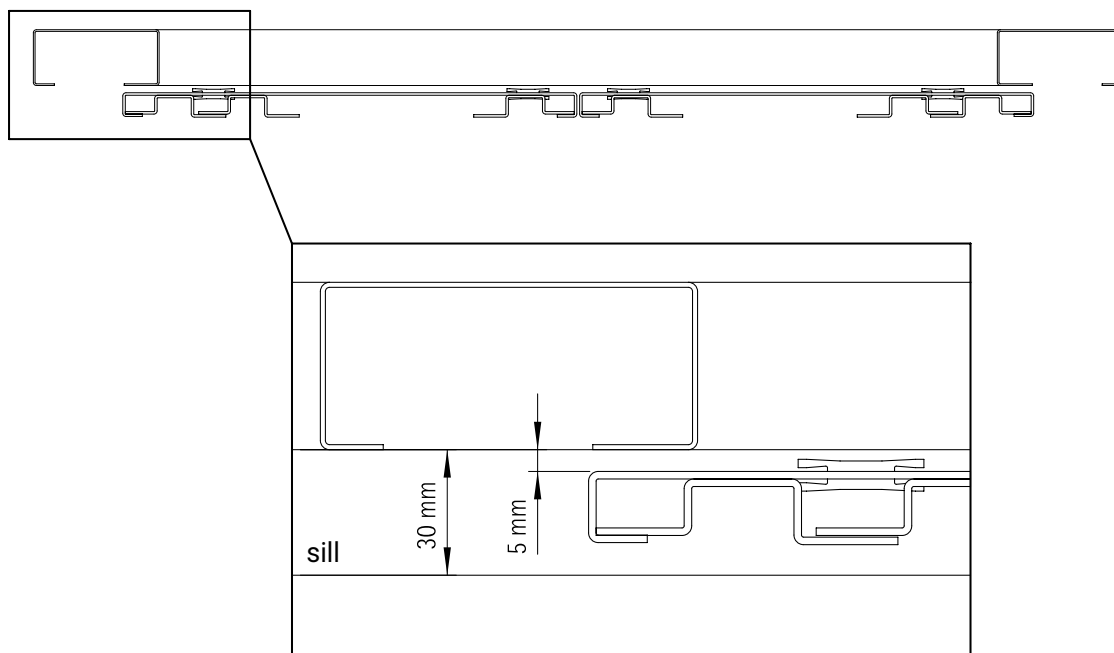

ADJUSTMENT OF THE LANDING DOOR IN THE SHAFT

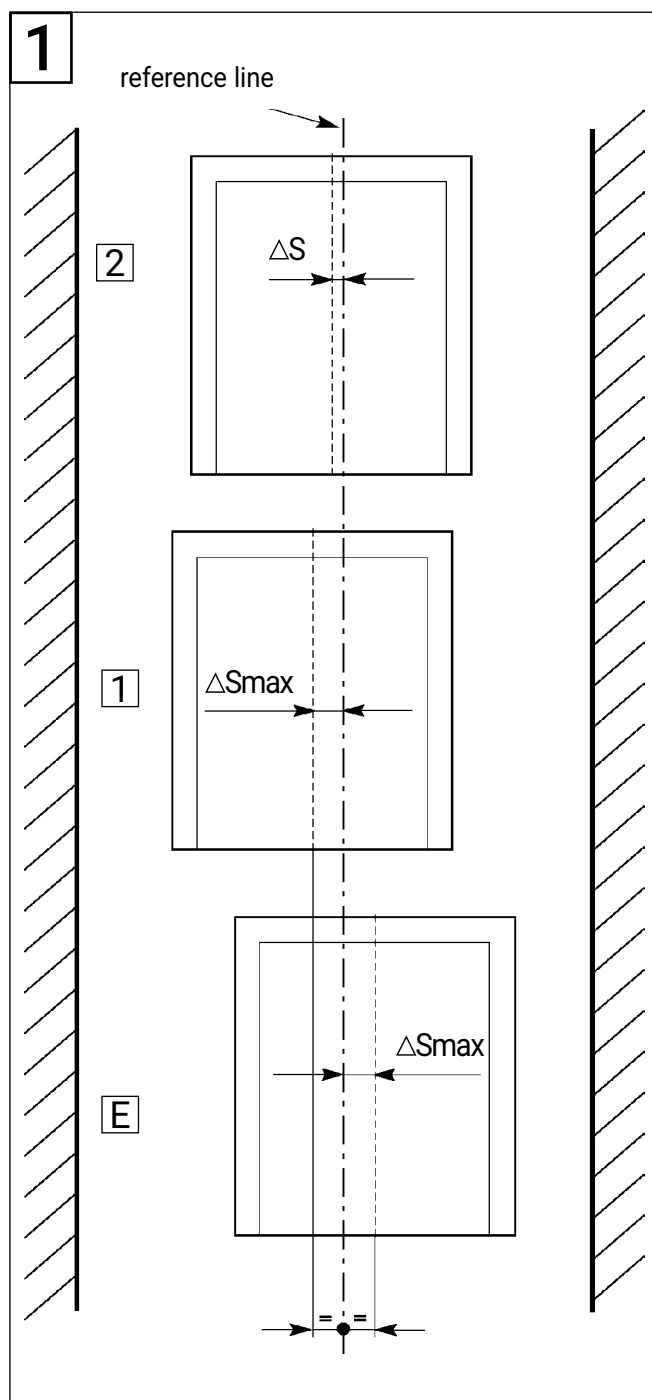


Fathom of the reference line in the shaft according image.


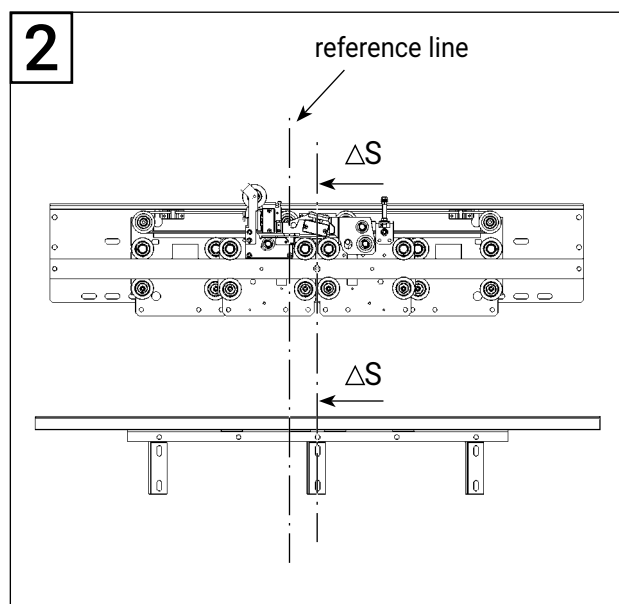


Adjustment of the Top Tracks to the reference line.




1.6 ASSEMBLY OF THE SILL



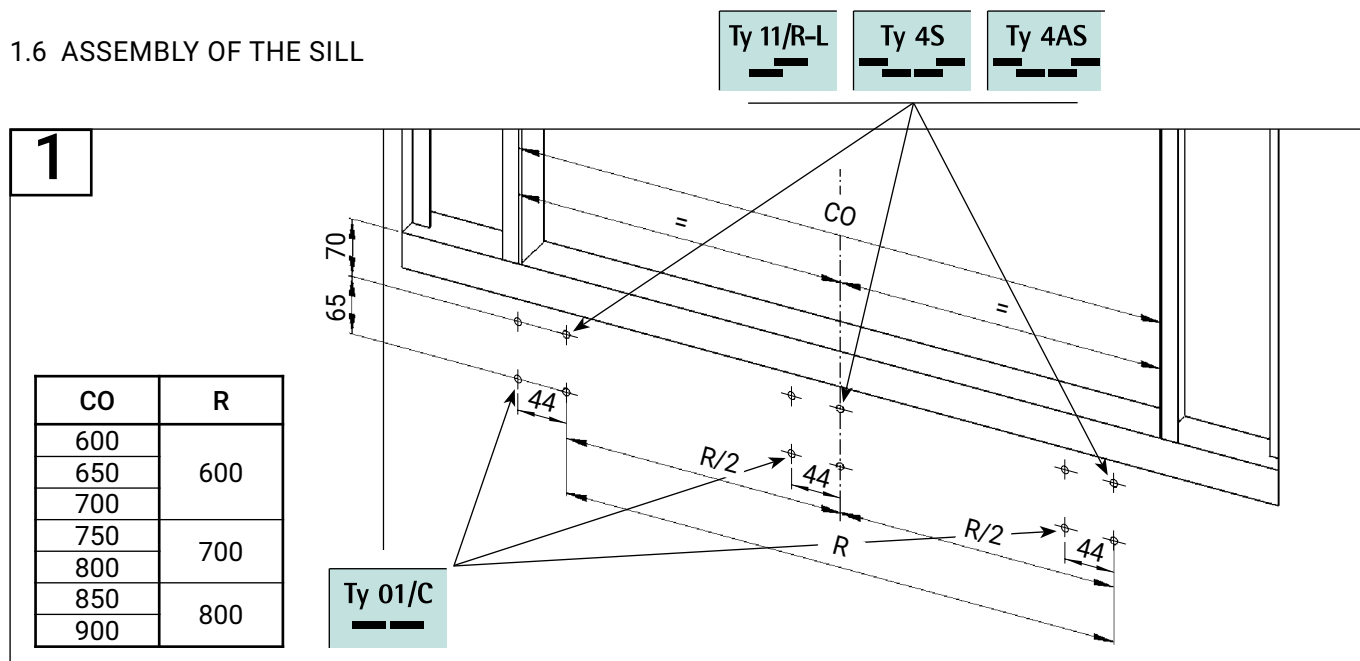


 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

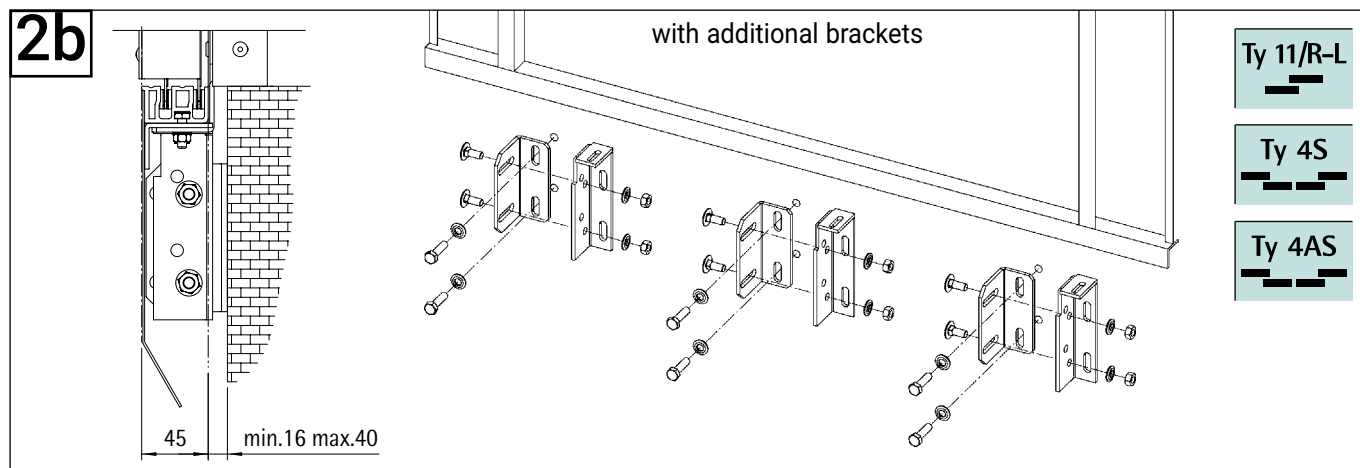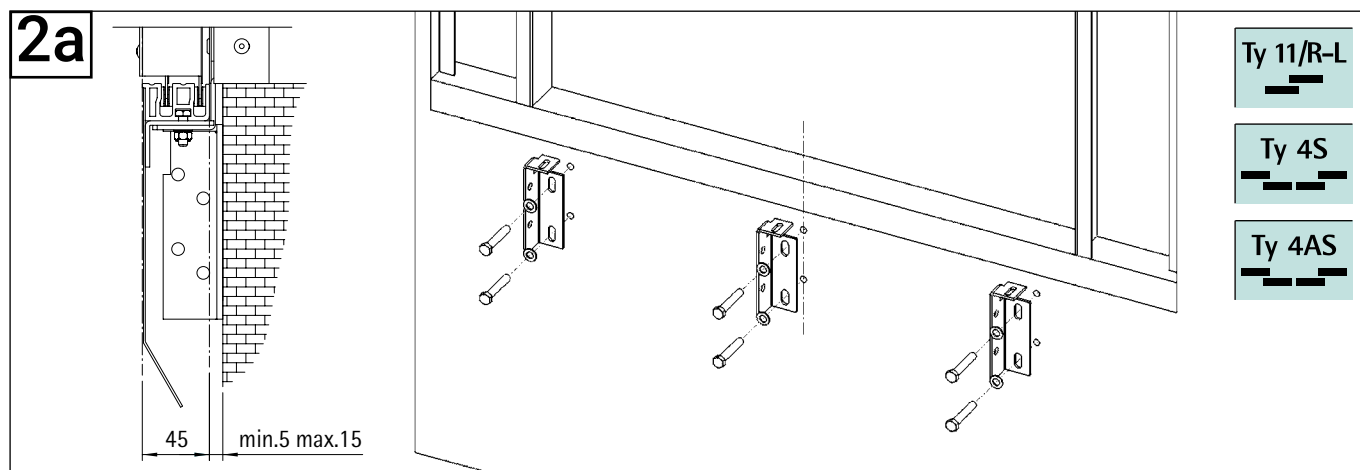

Subject to change without notice!

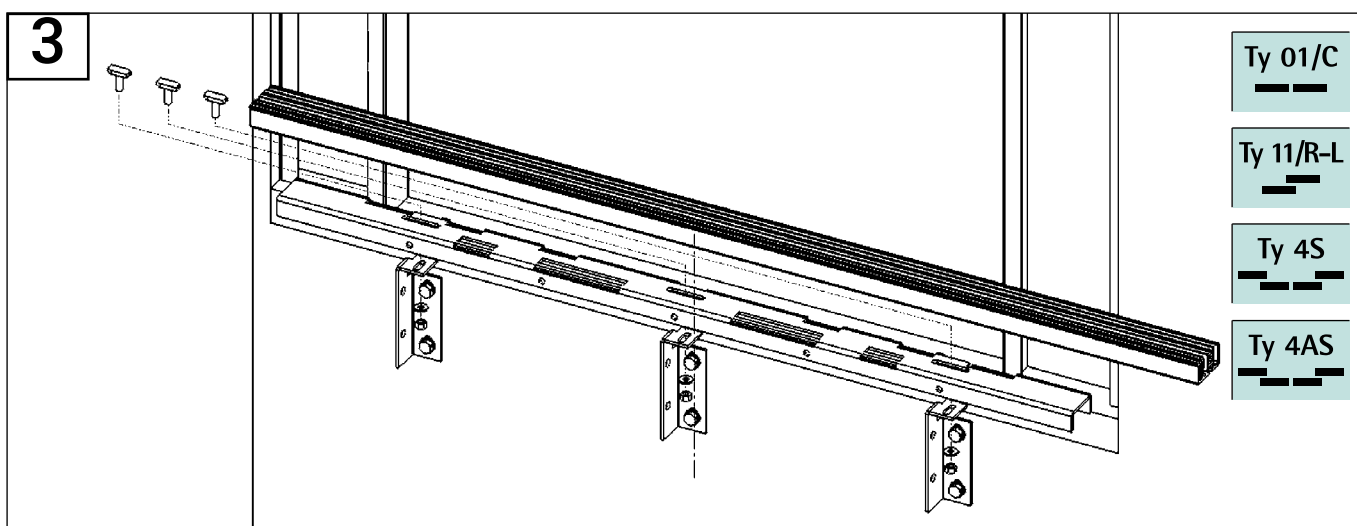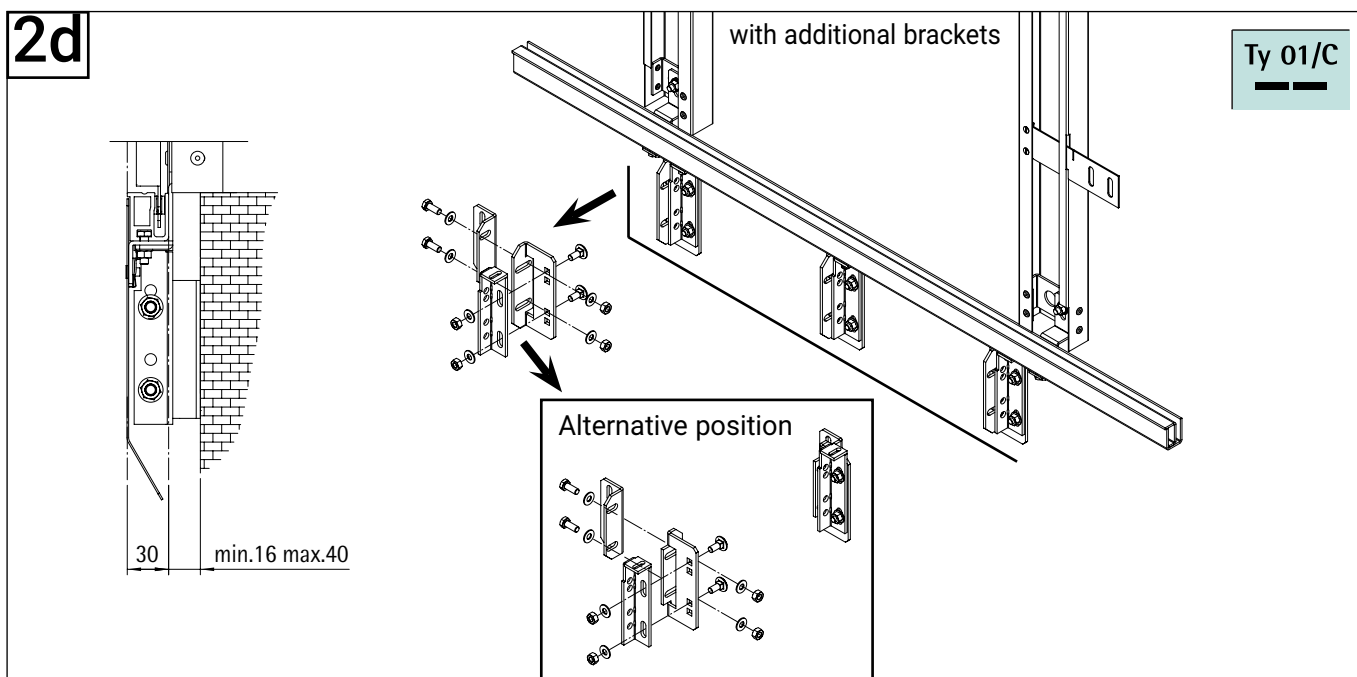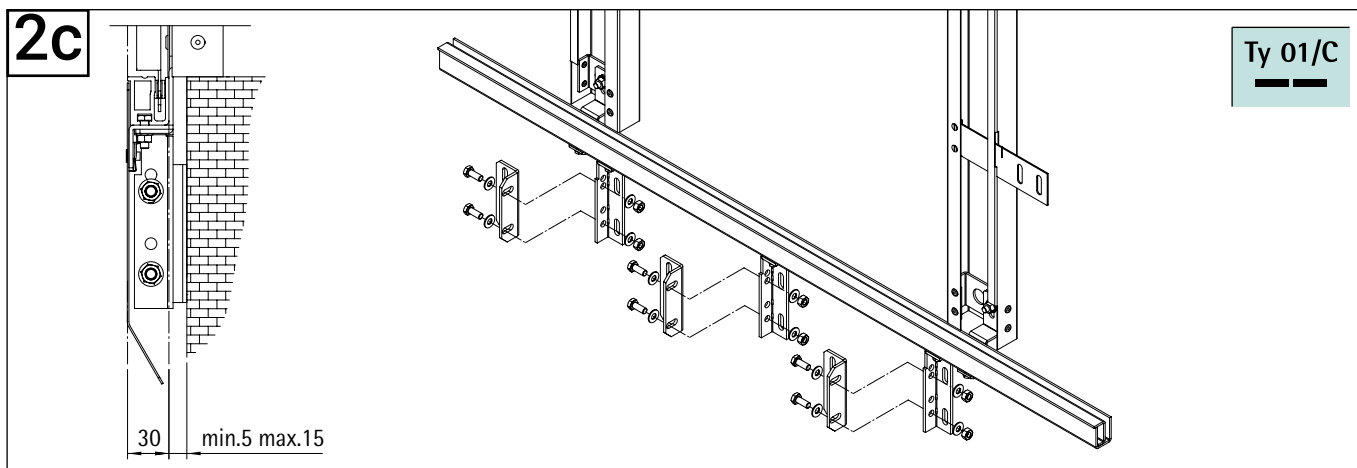

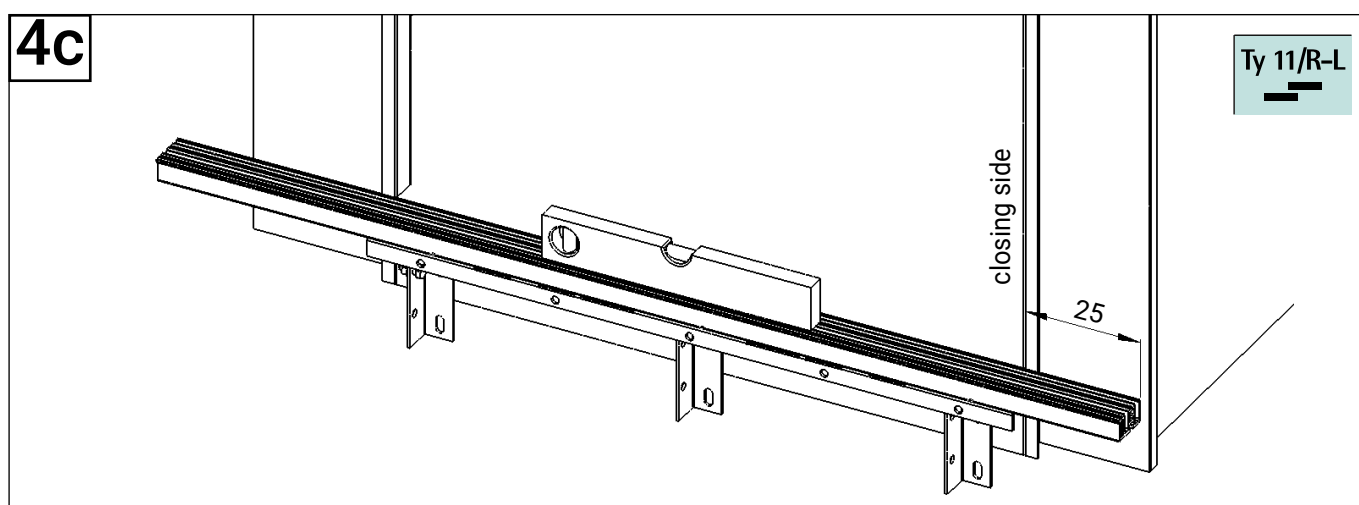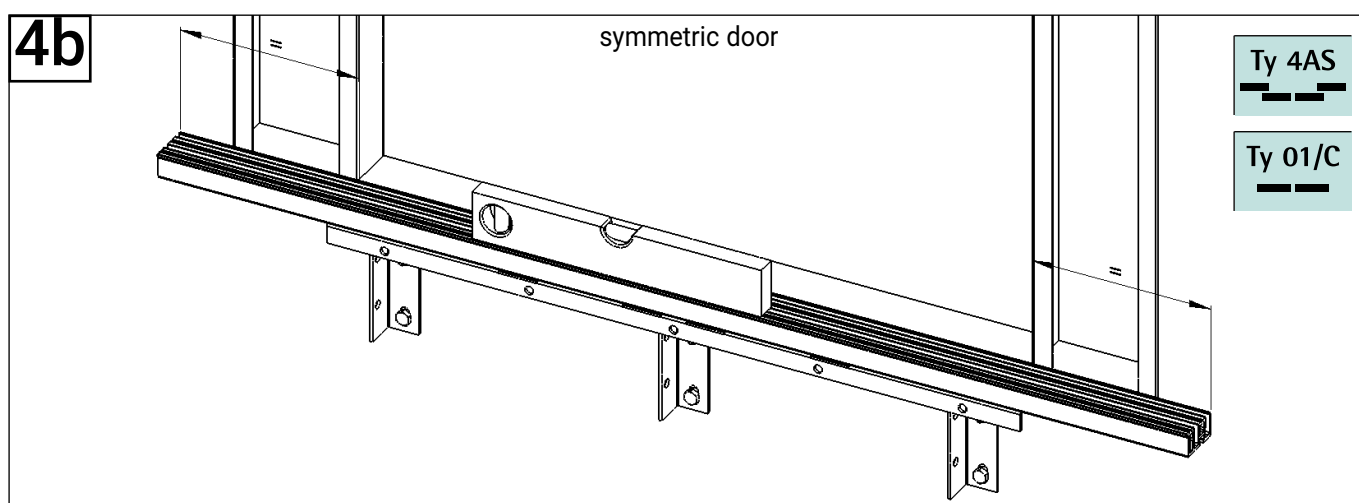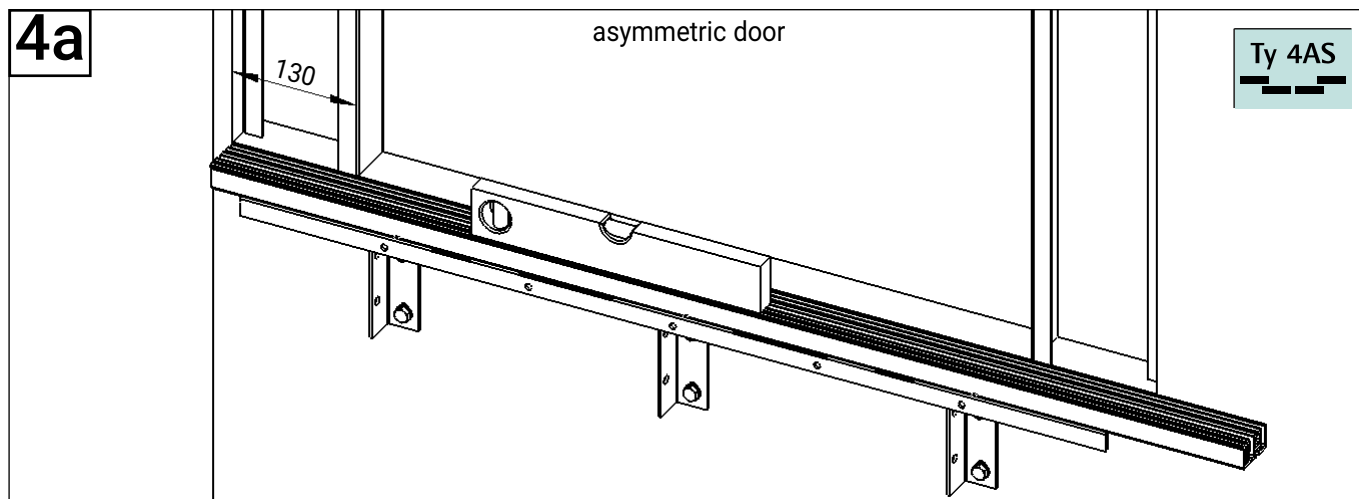

INSTRUCTION HANDBOOK LANDING DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 16.161






1.7 ASSEMBLY OF THE FRAME

Ty 01/C




Ty 11/R-L





Ty 4S

Ty 4AS

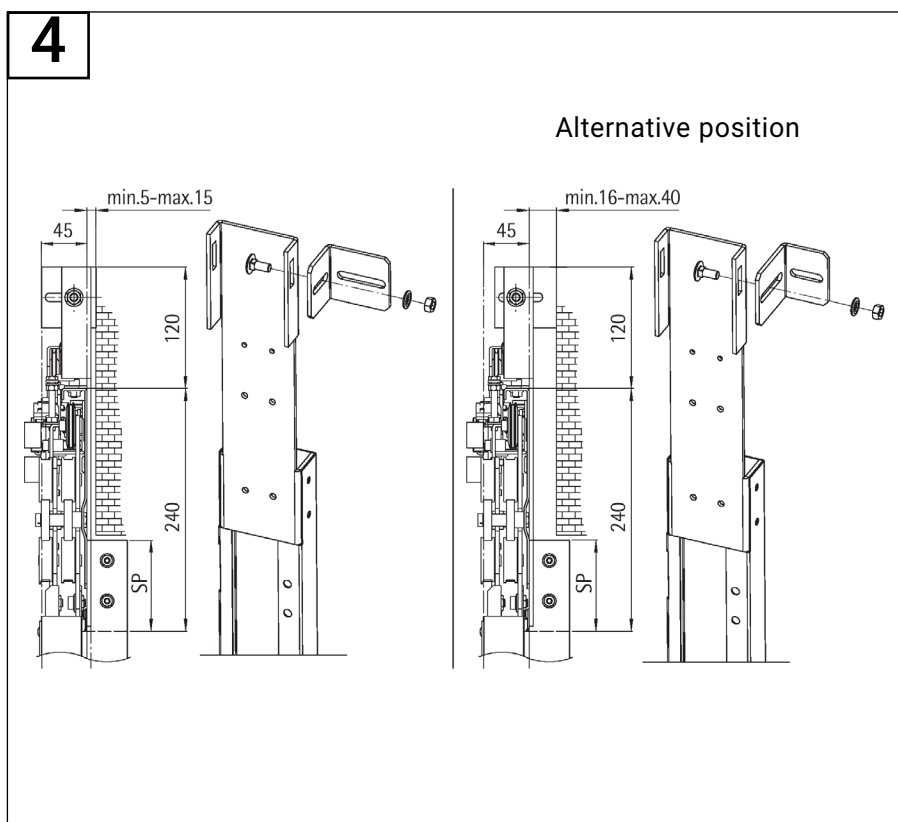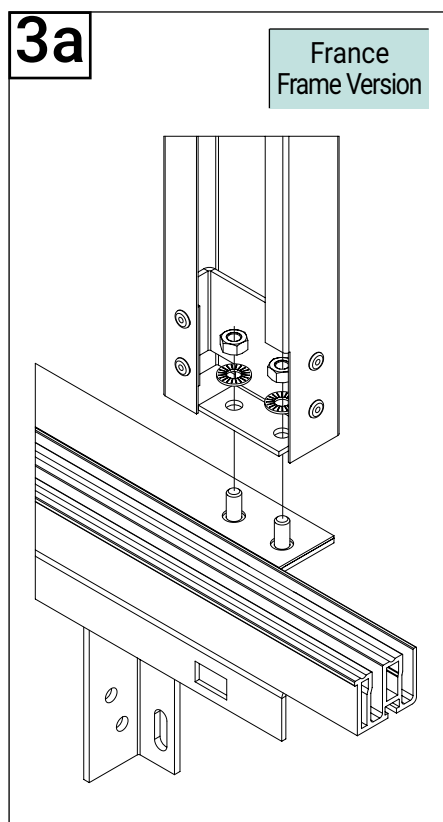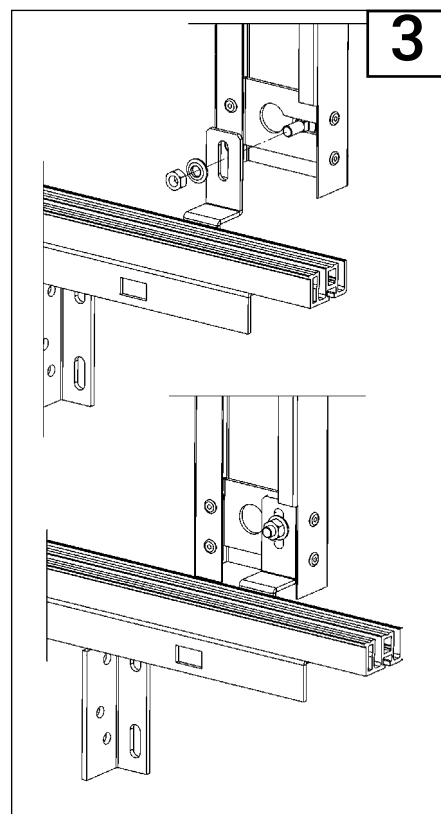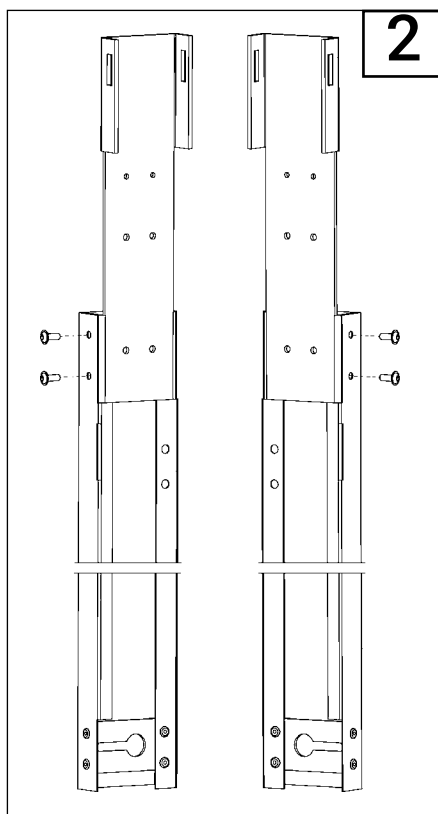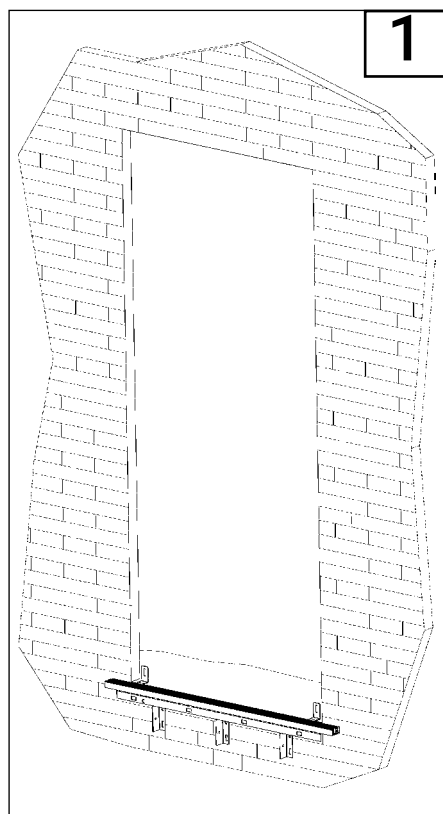


Subject to change without notice!

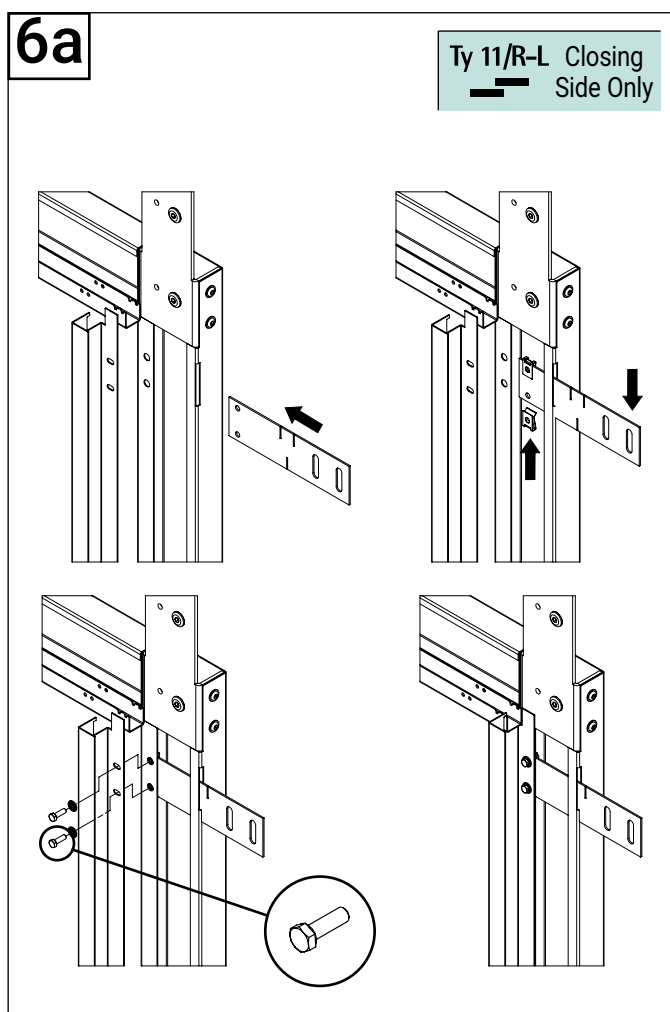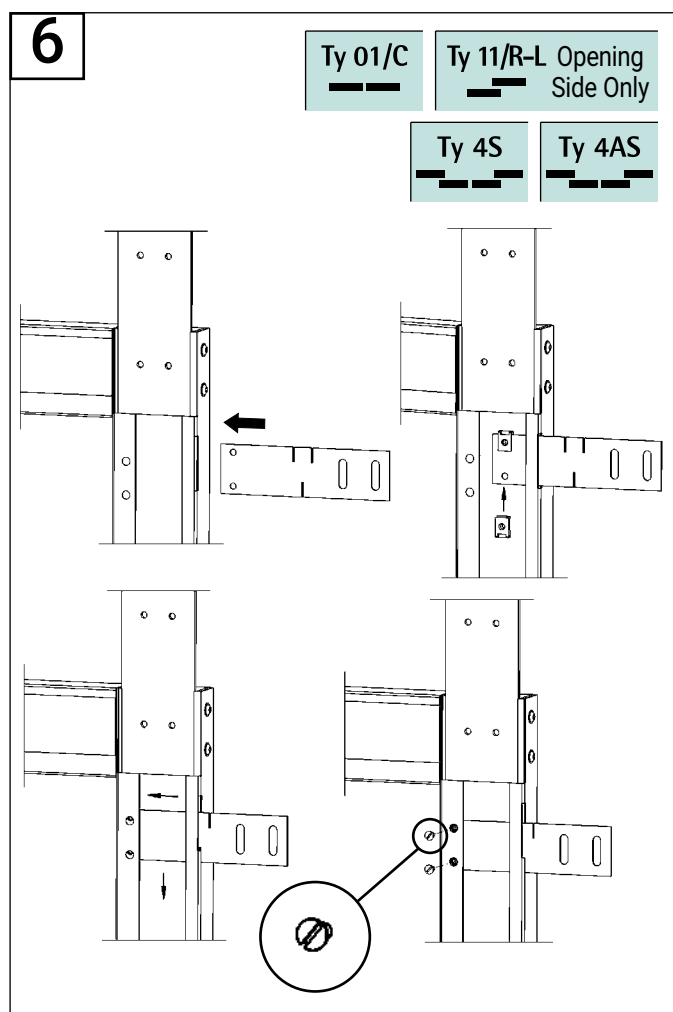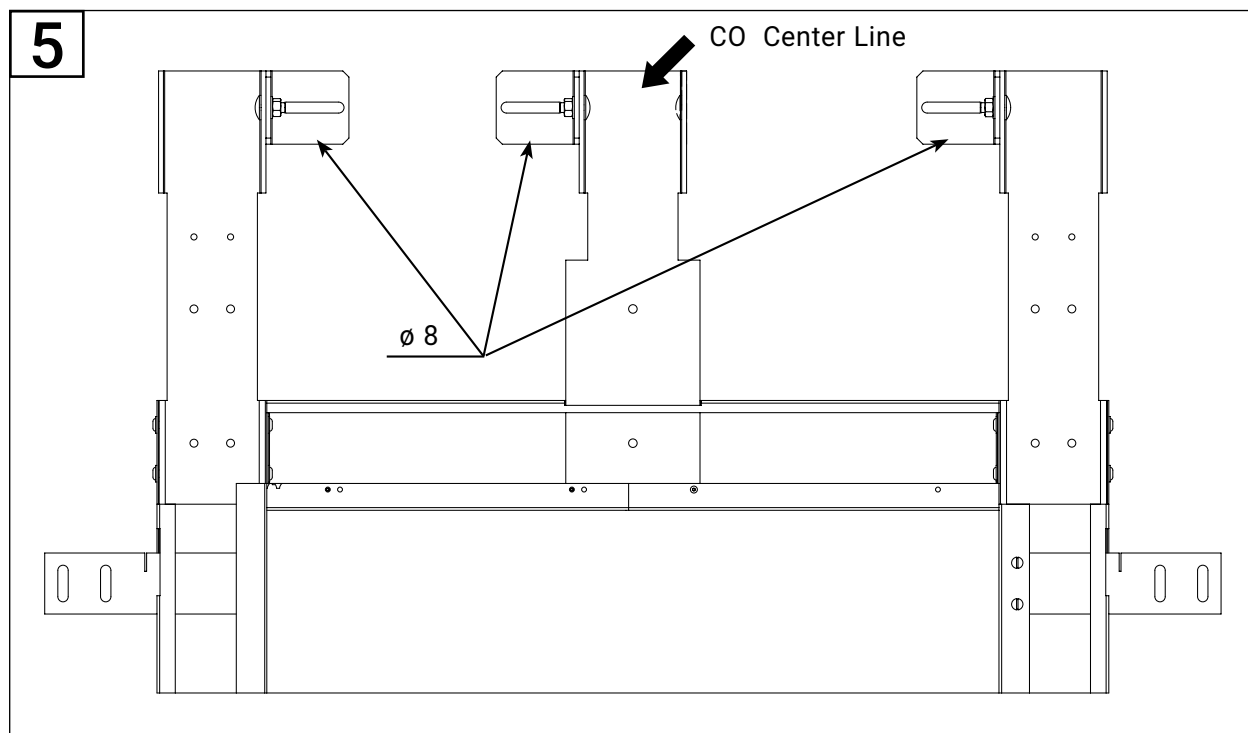

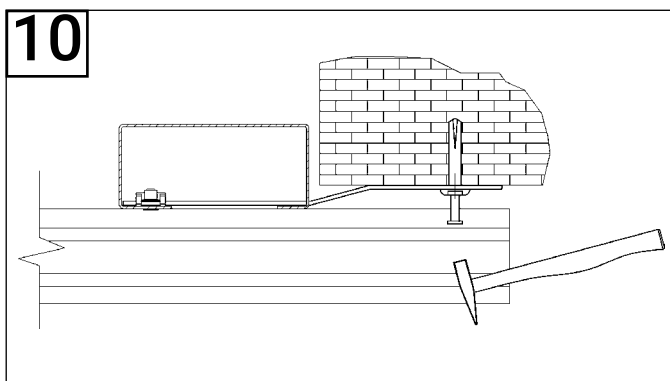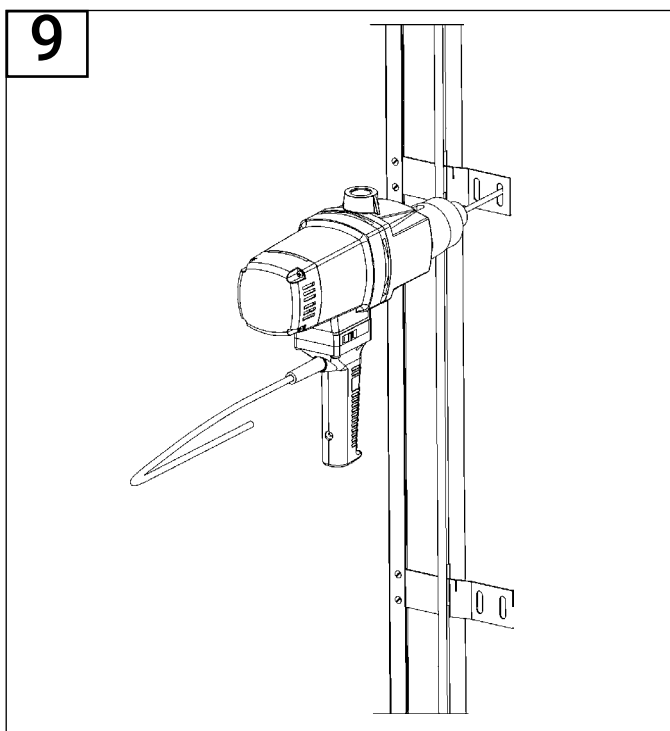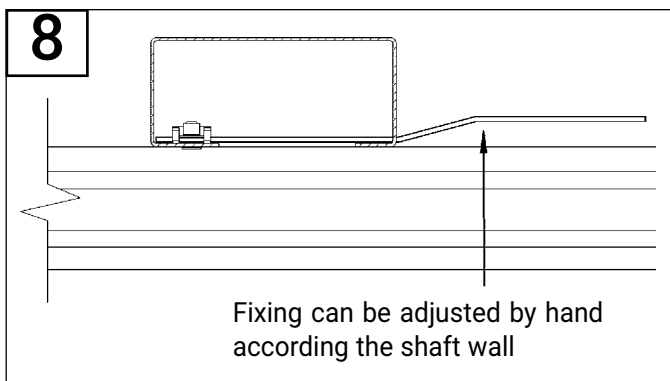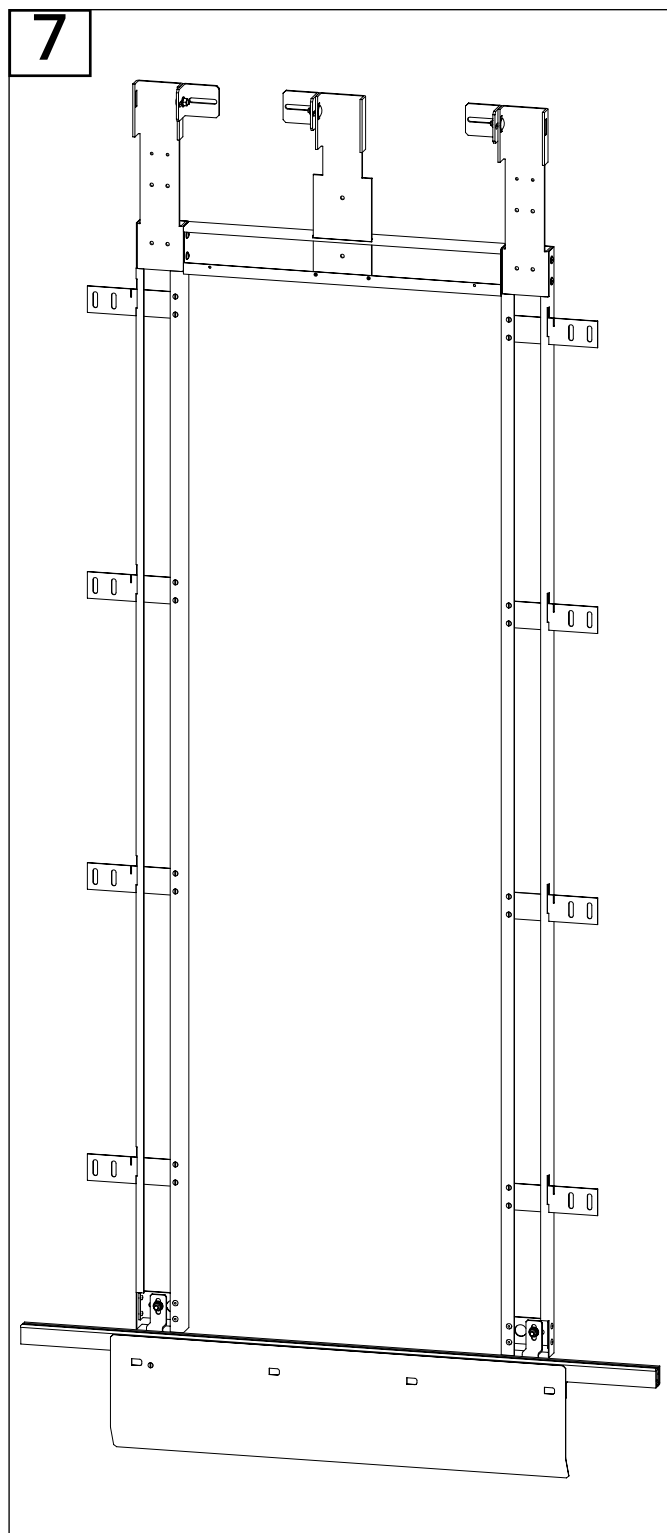


1.8 ASSEMBLY OF THE SILL FOR DOOR WICH FROMES DF= 10 OR DF=25

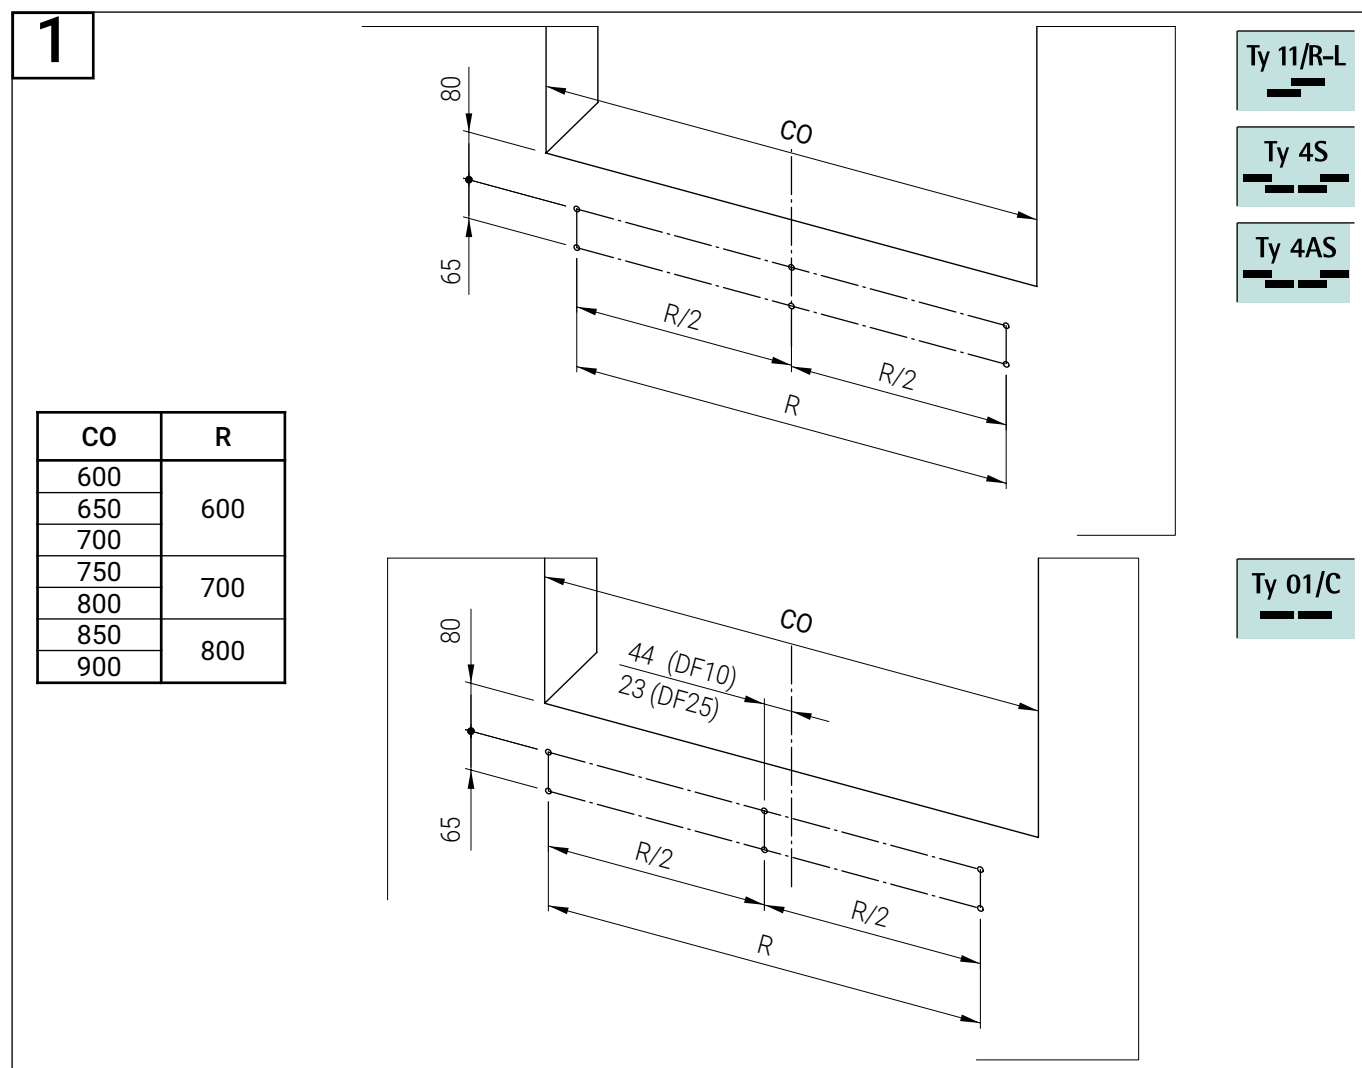


 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

2a

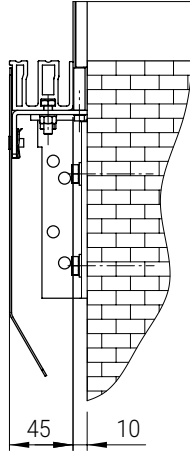

DF= 10

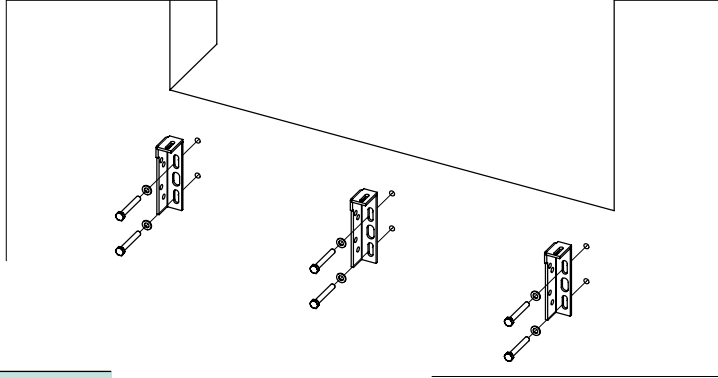


Ty 11/R-L


Ty 4S

Ty 4AS

2b

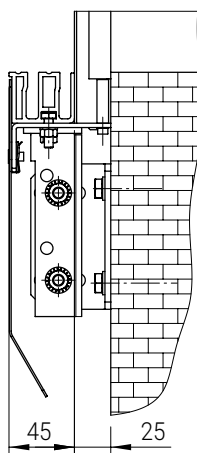




DF= 25



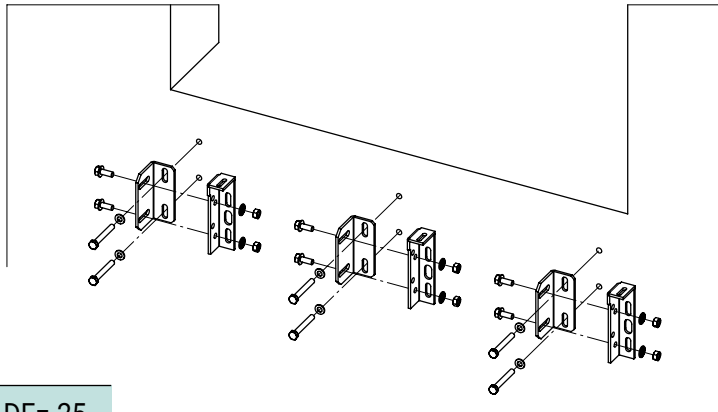


Ty 11/R-L


Ty 4S

Ty 4AS

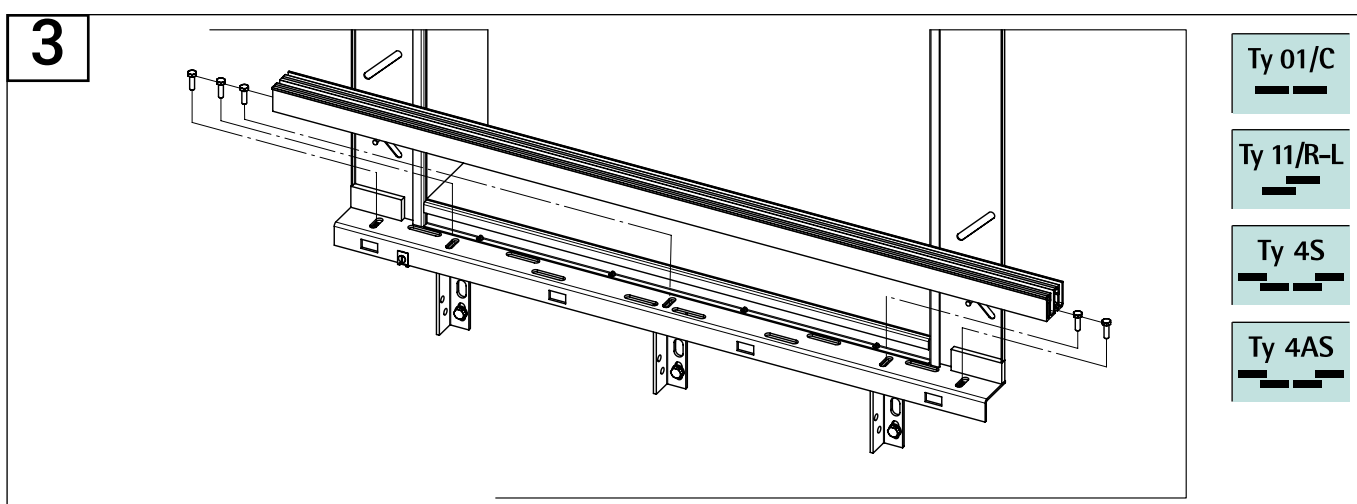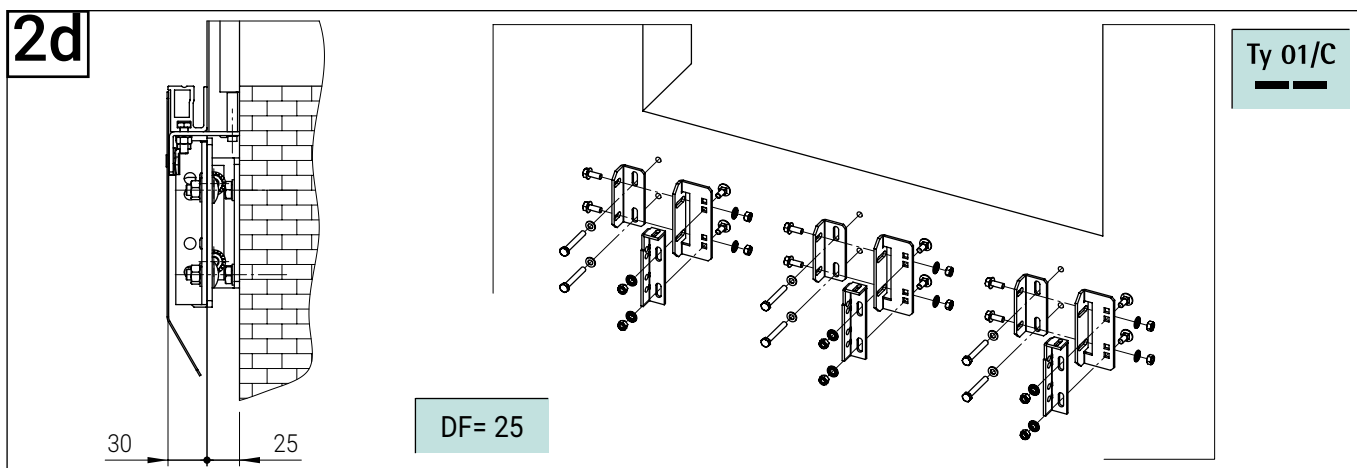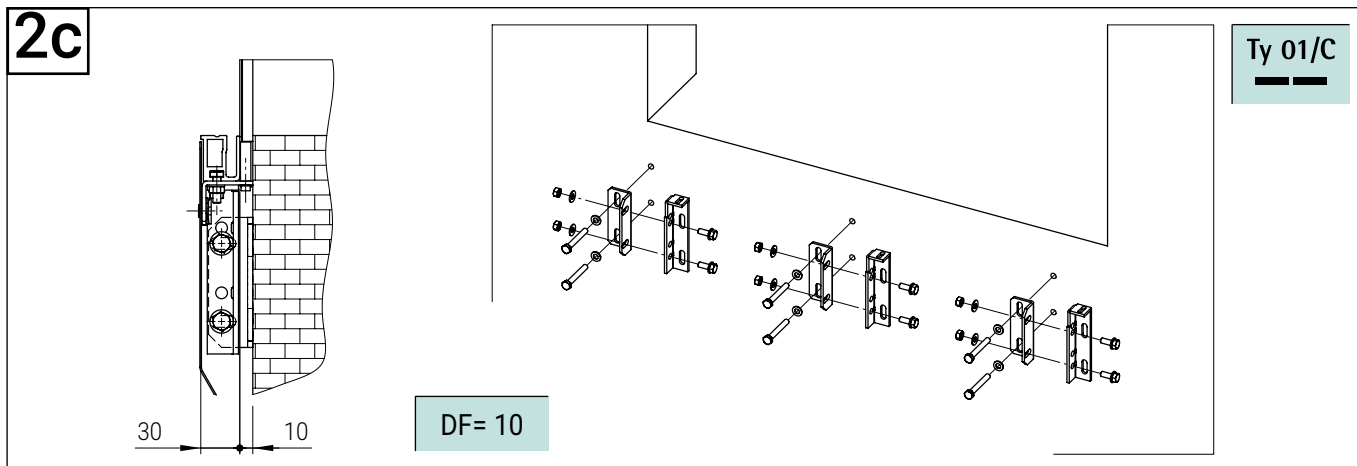


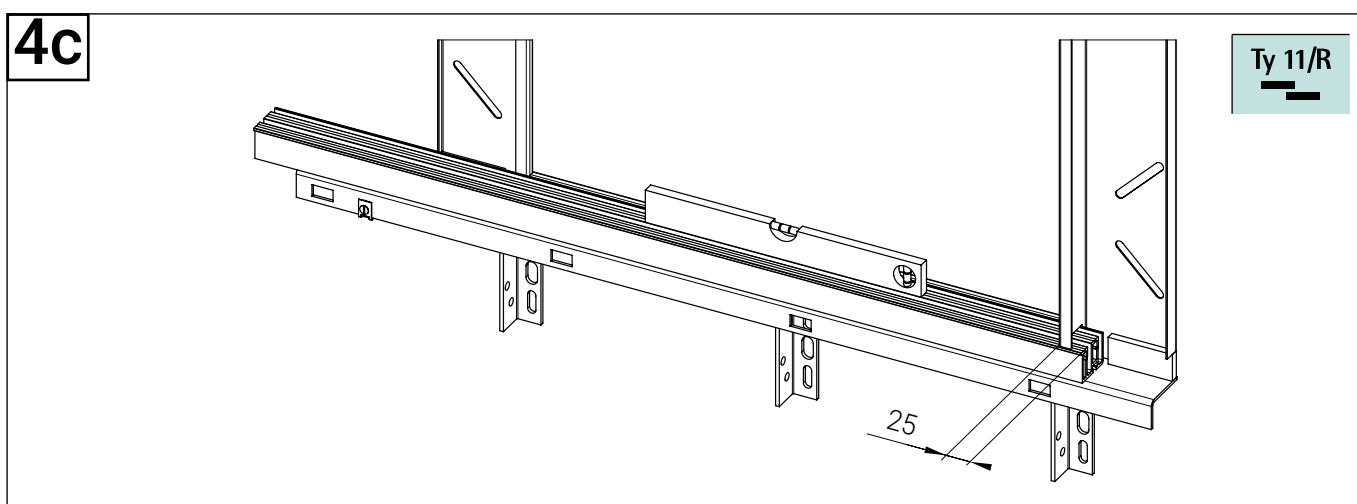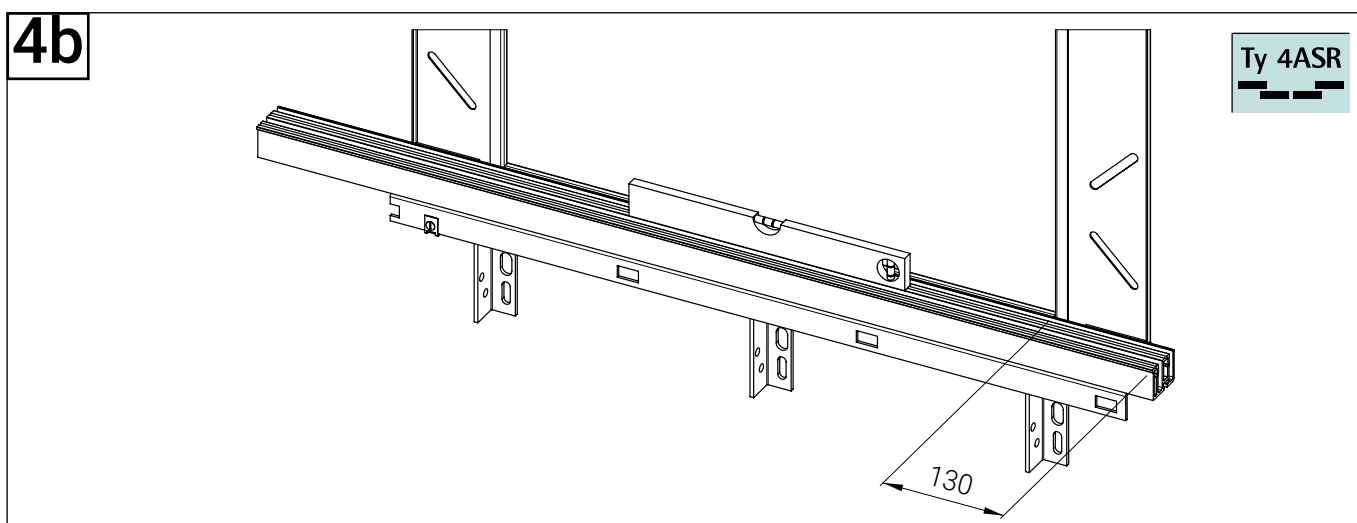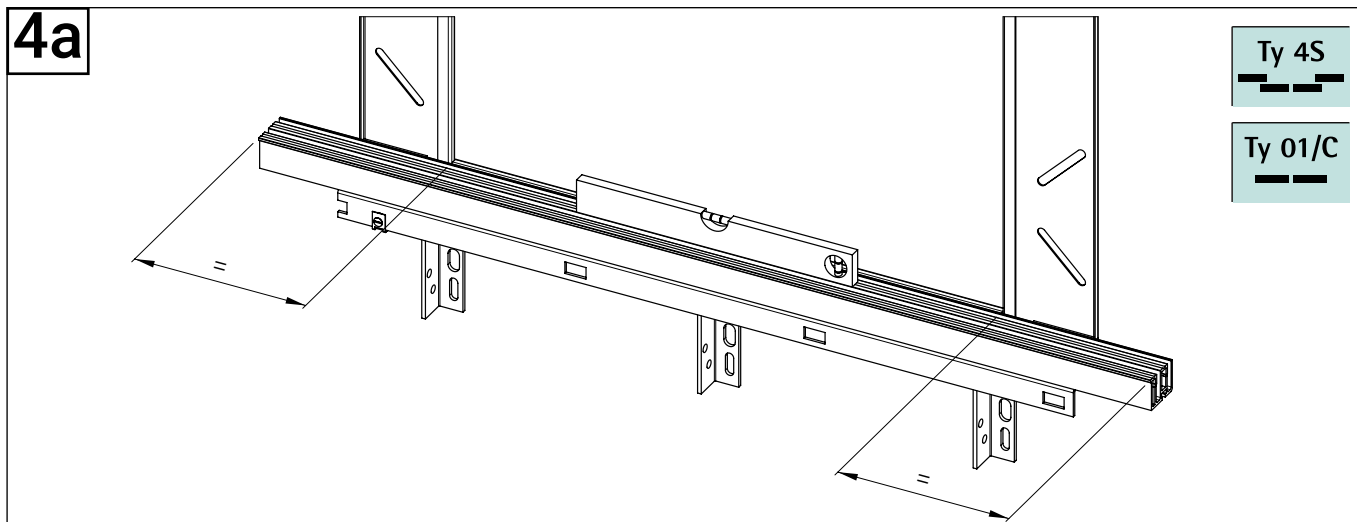

5

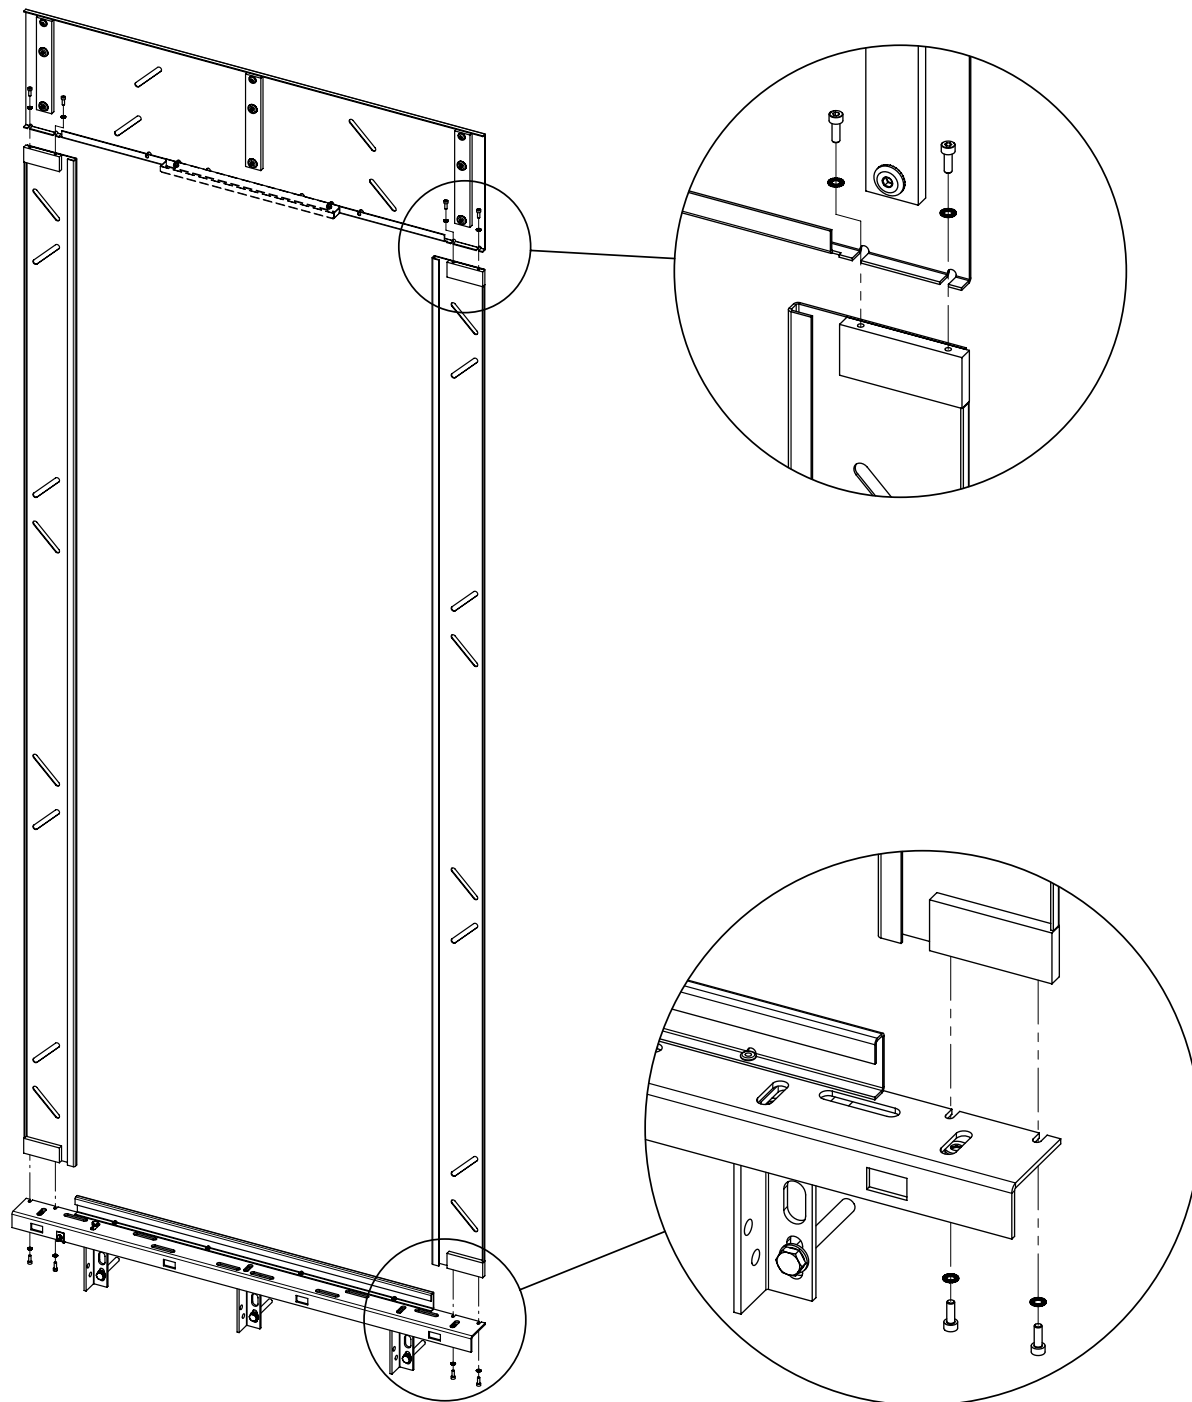

6

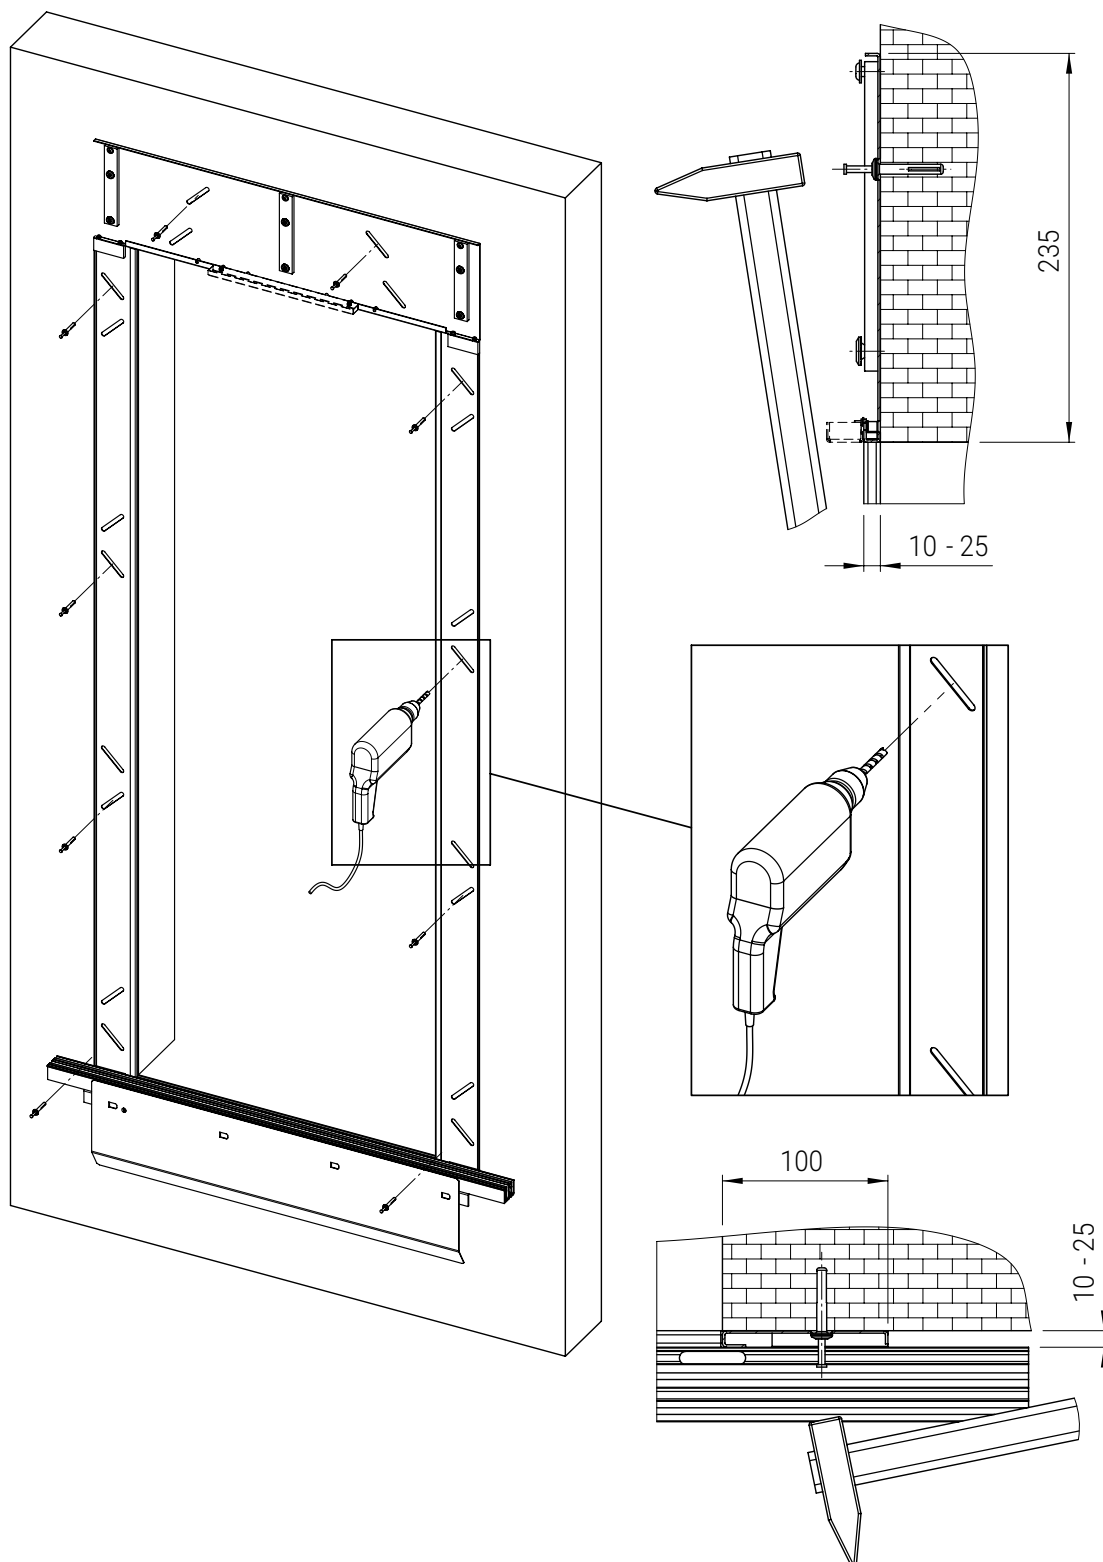


1.9 ASSEMBLY OF THE MECHANISM COVER

Ty 11/R-L

Ty 4S

Ty 4AS

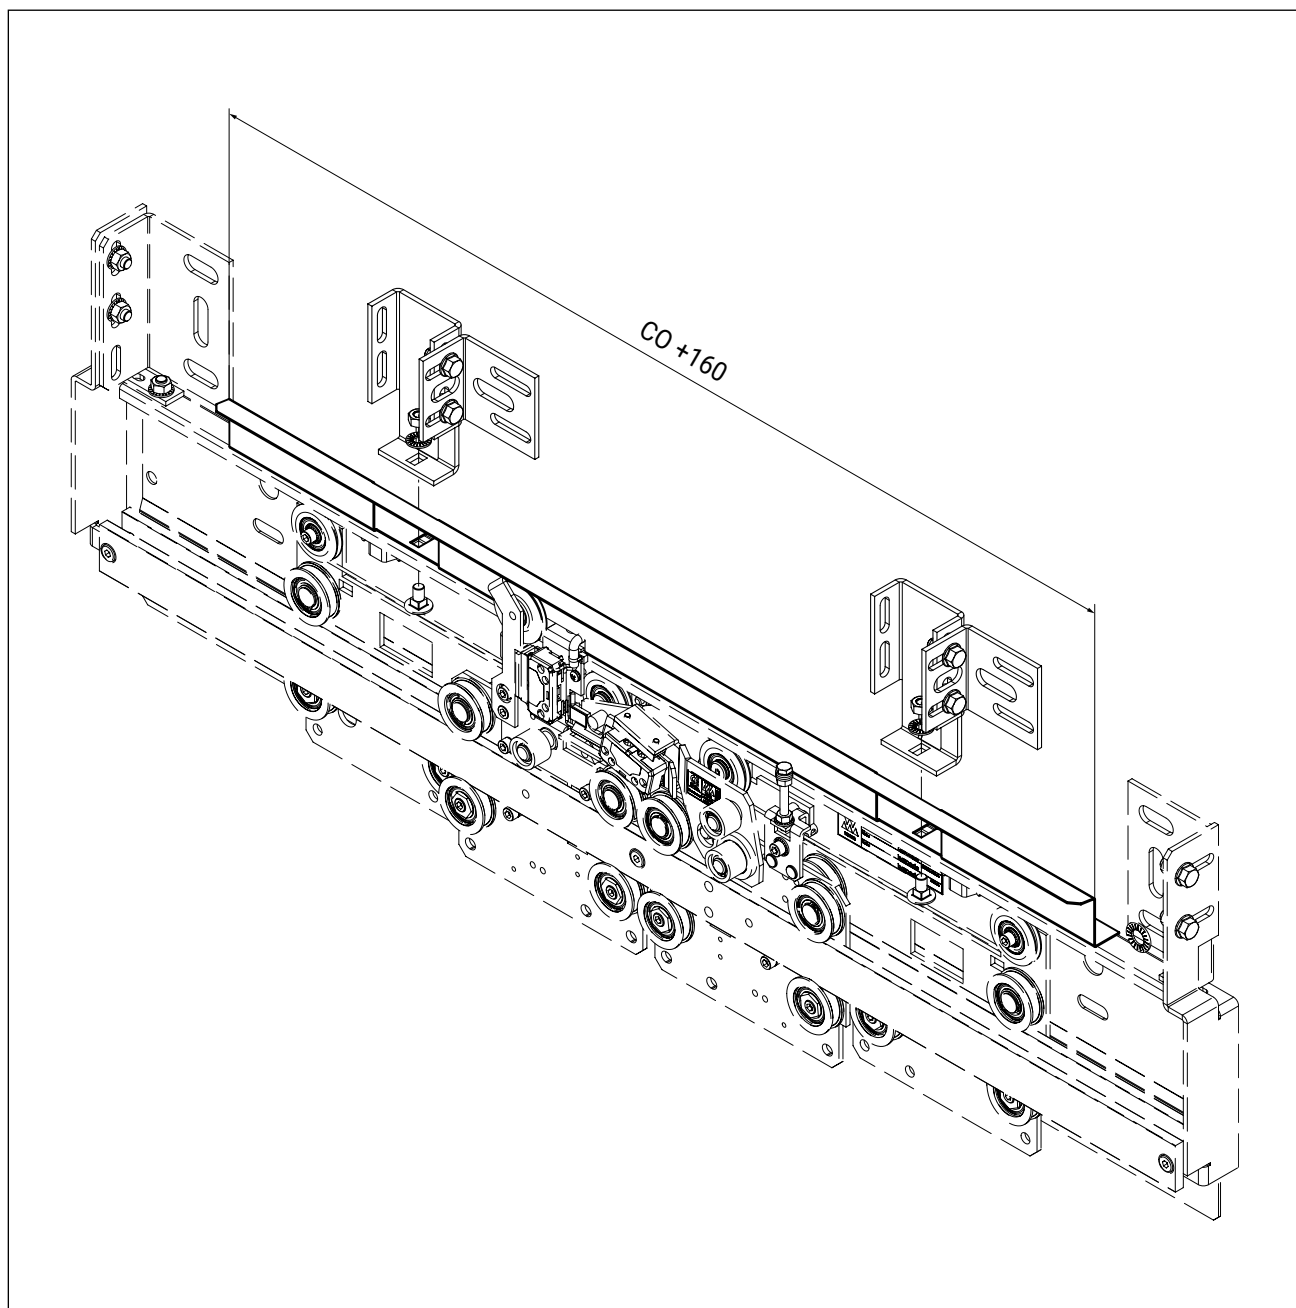

1.10 ASSEMBLY OF THE TOP TRACK


1.10.1 Standard installation on new jambs

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

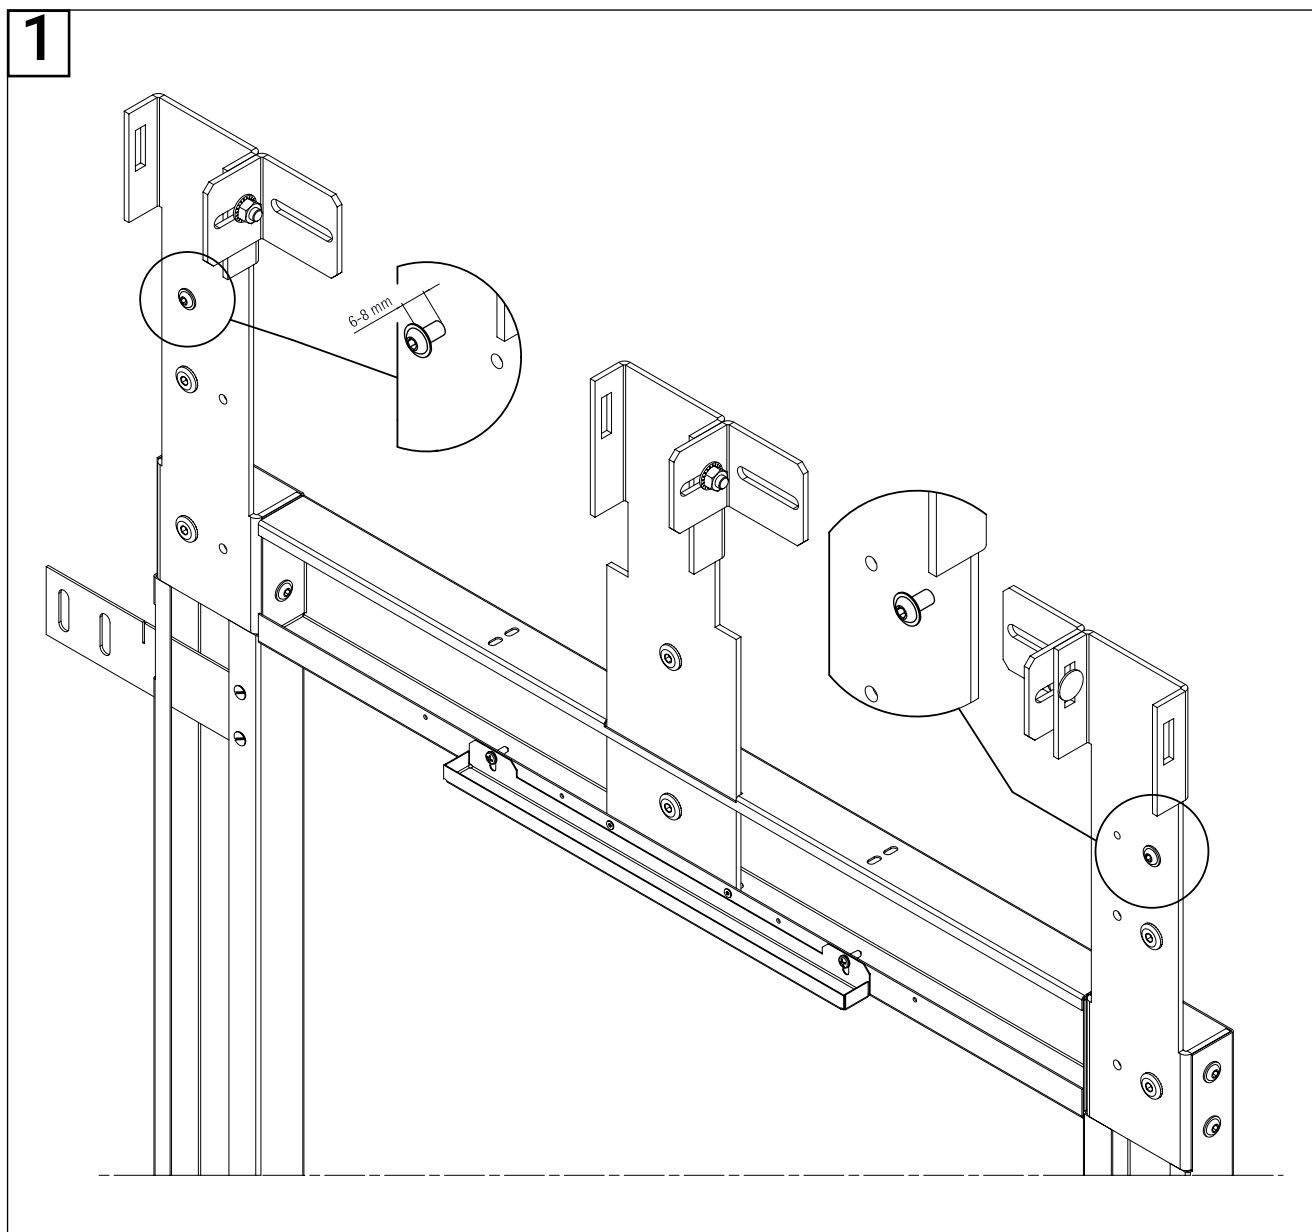


1) Secure the two M6 screws without tightening.

Ty 01/C


Ty 11/R-L

Ty 4S

Ty 4AS

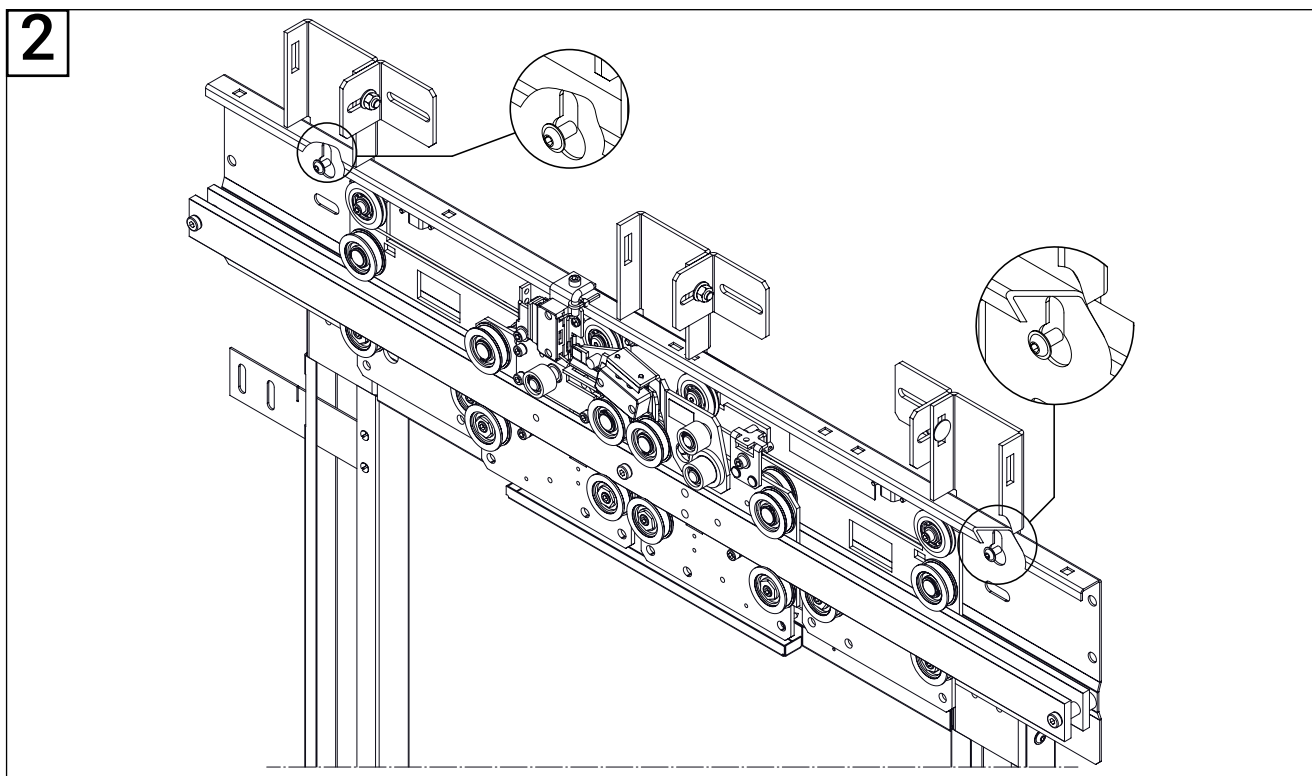


2) Fasten the mechanism.

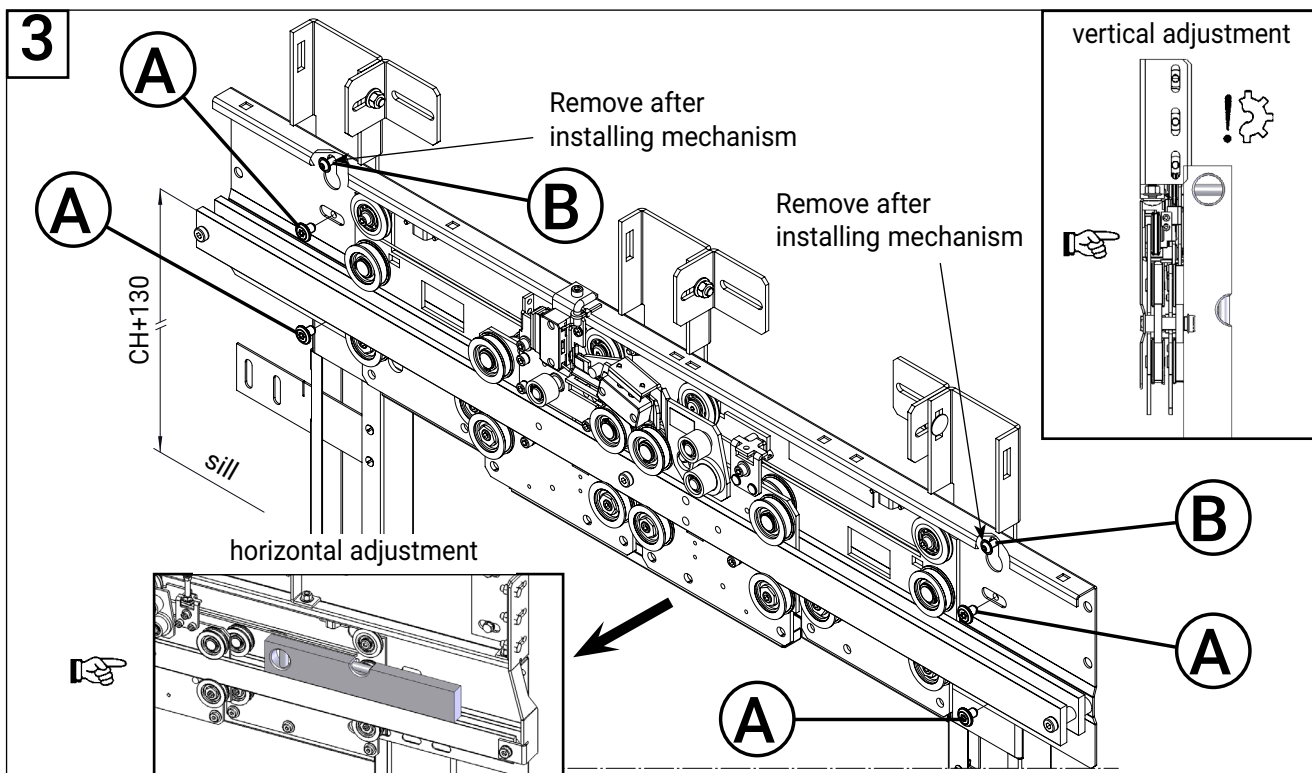


3) Secure the mechanism using 6 M8 screws (A).

4) Remove the M6 screws (B).

 Subject to change without notice!




New 1.10.2 Vandal Resistan Cat.1

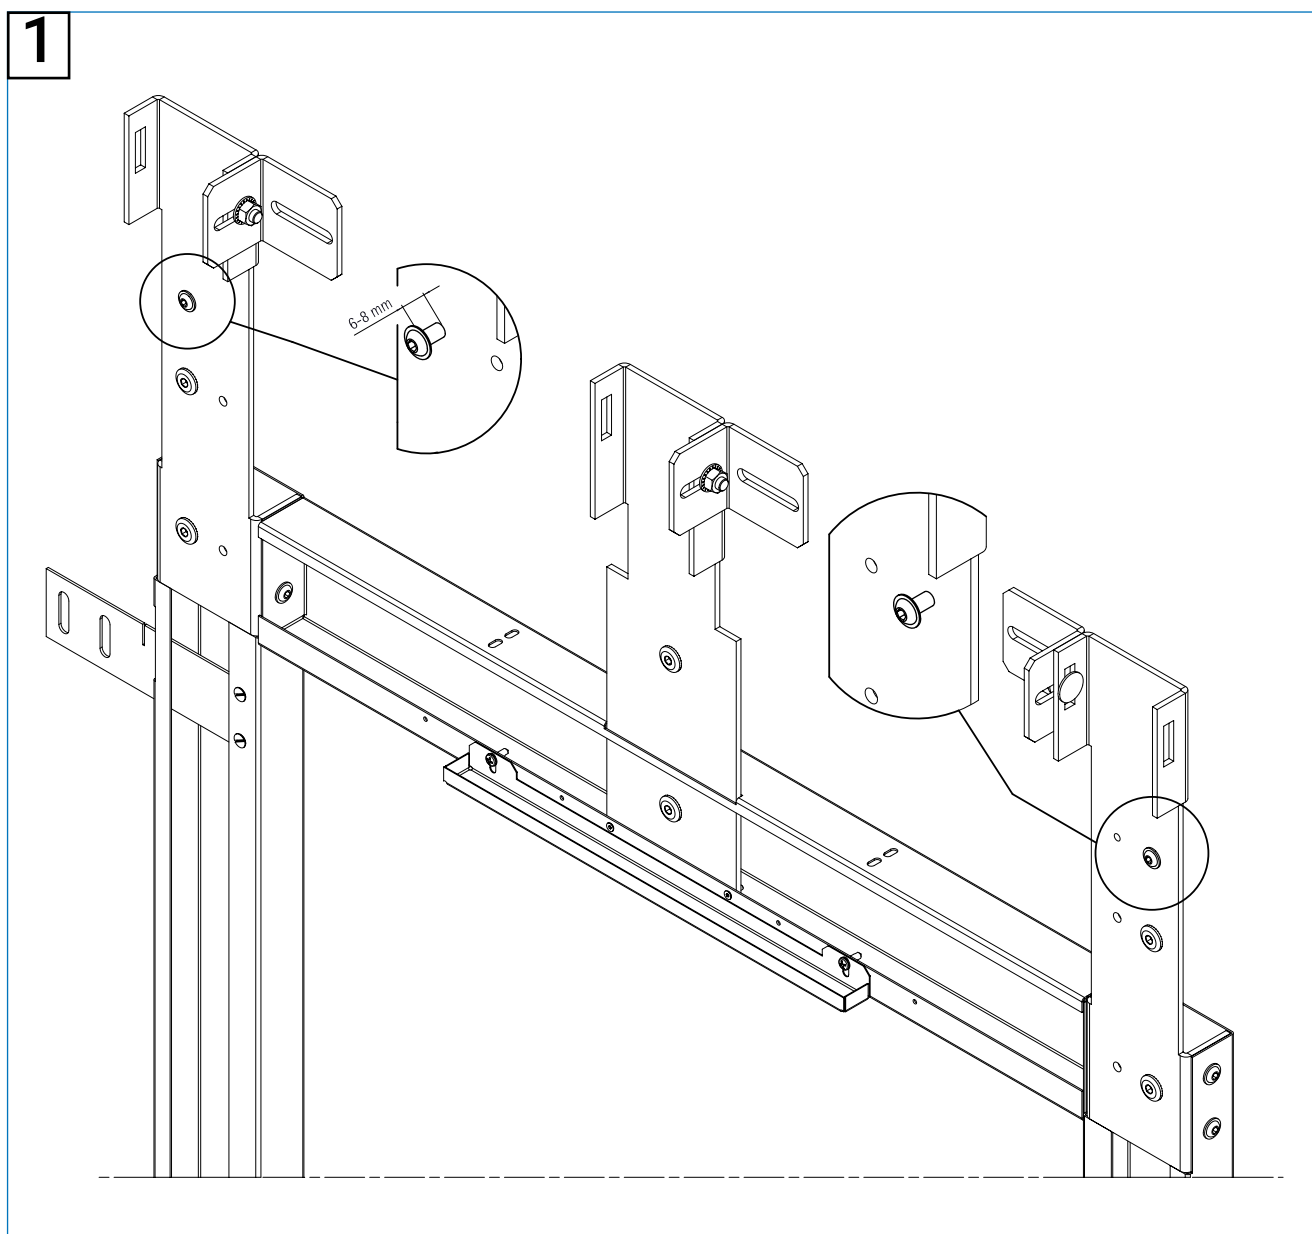

1) Secure the two M6 screws without tightening.

Ty 4S

Ty 4AS

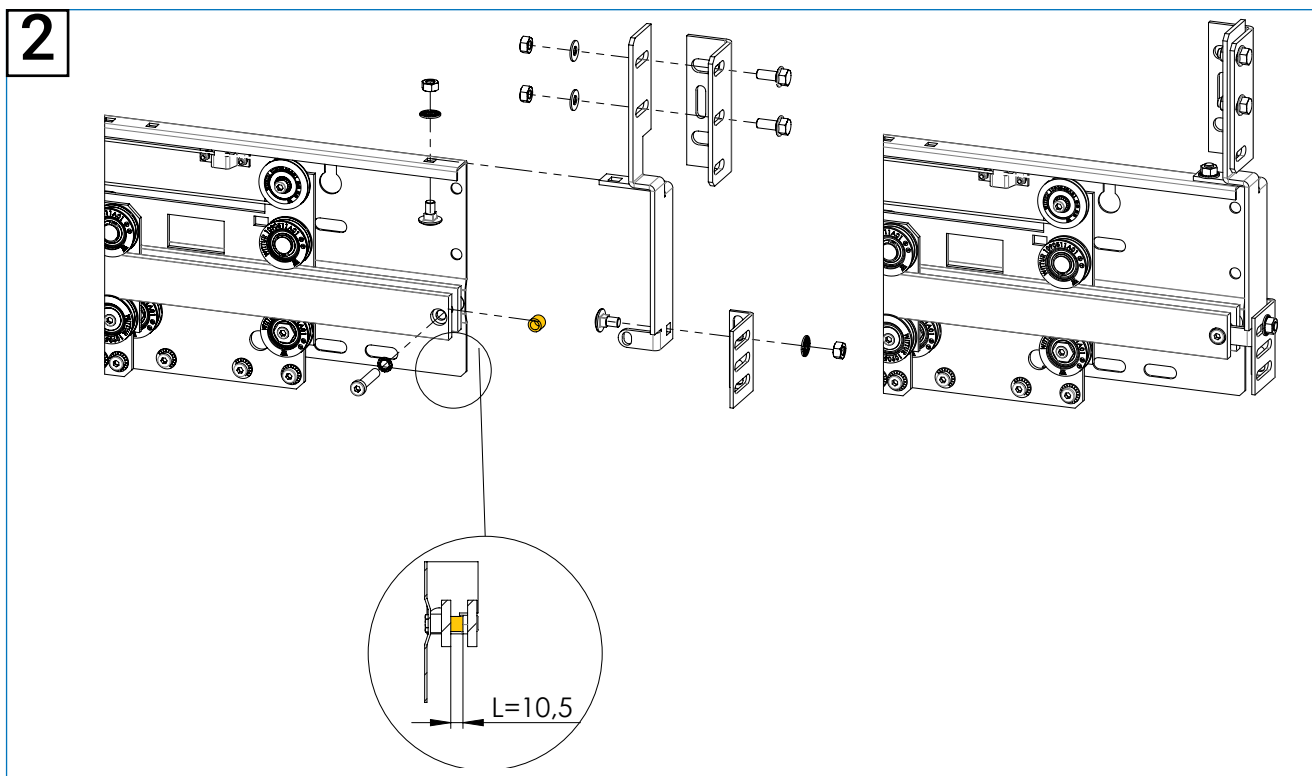


- 2) Remove the Screw M8(A);
- 3) Replace the standard spacer L=14,5 mm with spacer L=10,5 mm (B);
- 4) Assemble the additional brackets on both sides of the mechanism as shown in the figure 2.

Ty 4S

Ty 4AS

New


3

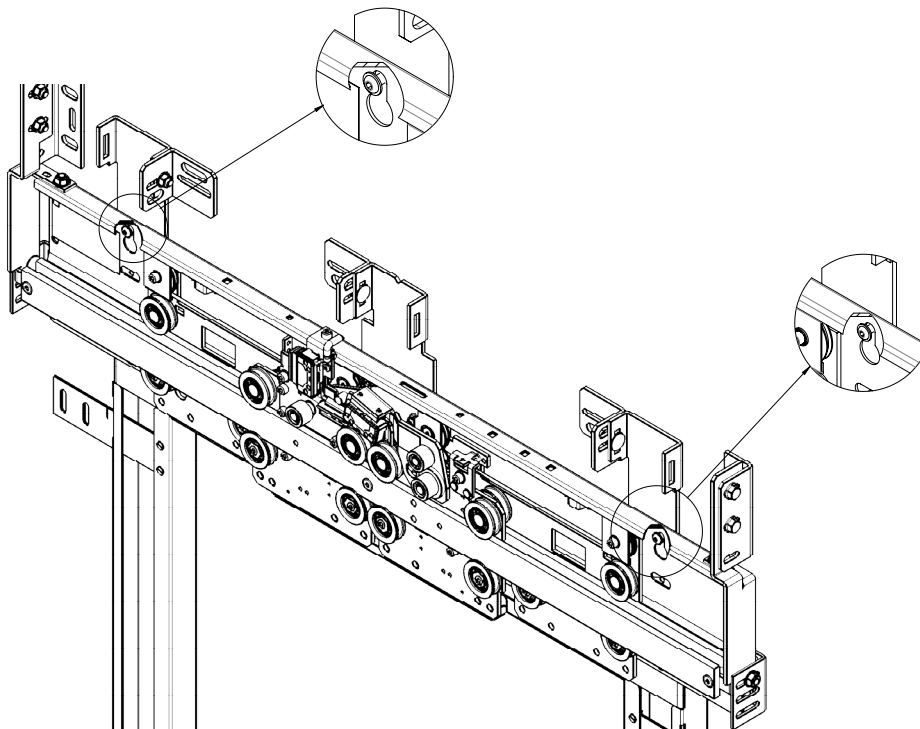

5) Fasten the mechanism

New

4

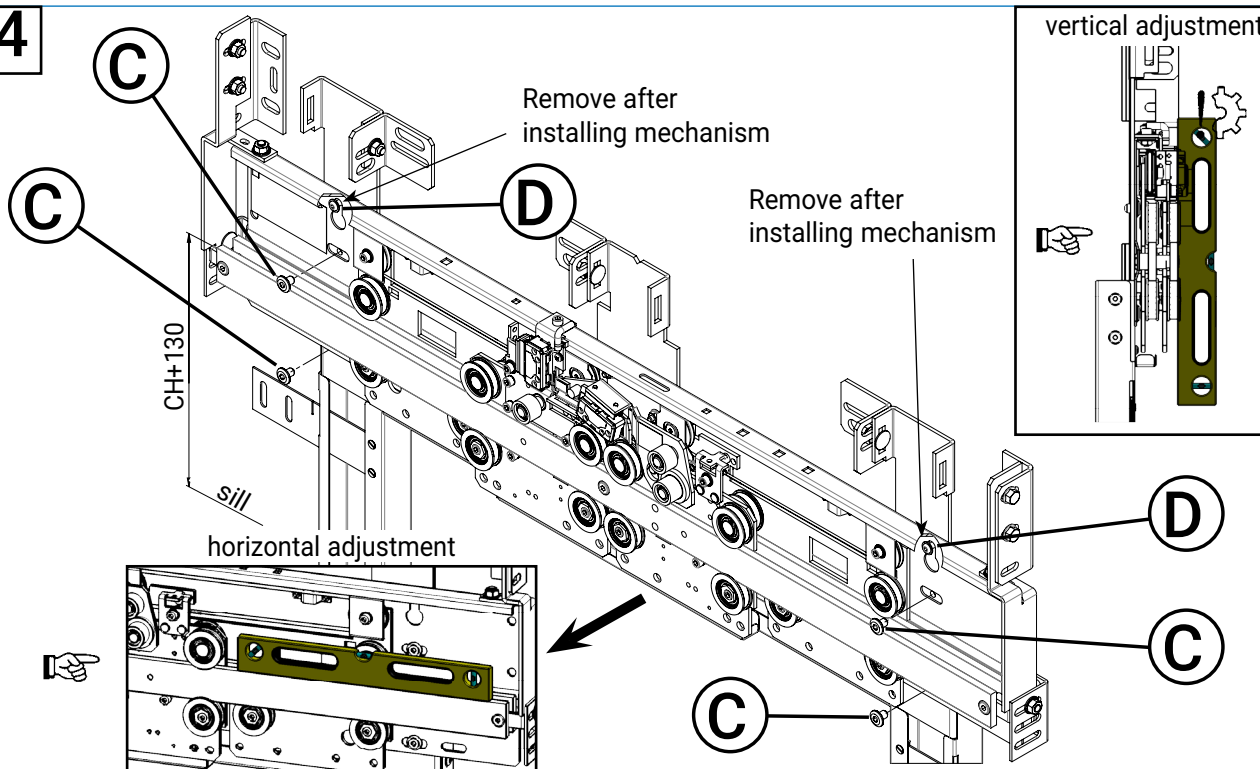


6) Secure the mechanism using 6 M8 screws (C)

7) Remove the M6 screws (D)



Subject to change without notice!

1.10.3 Standard fixing on swing door

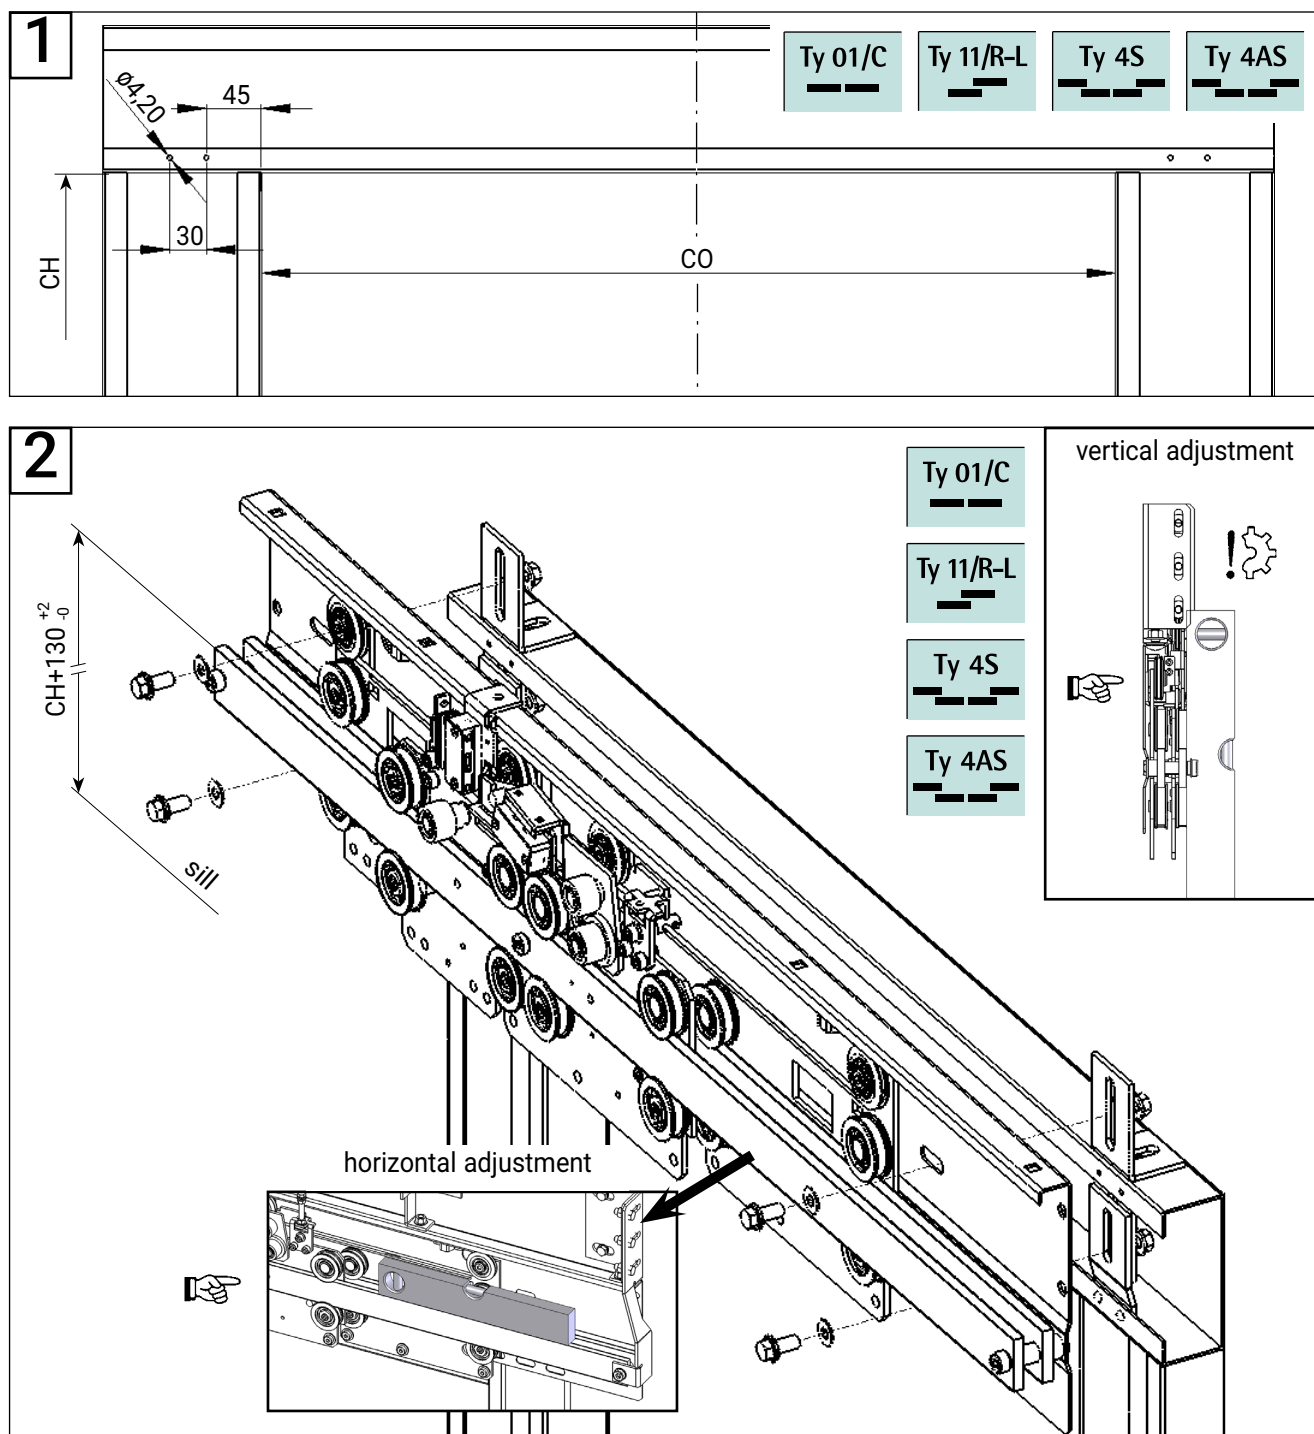



 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

1.10.4 Fixing on swing door (alternative 1)

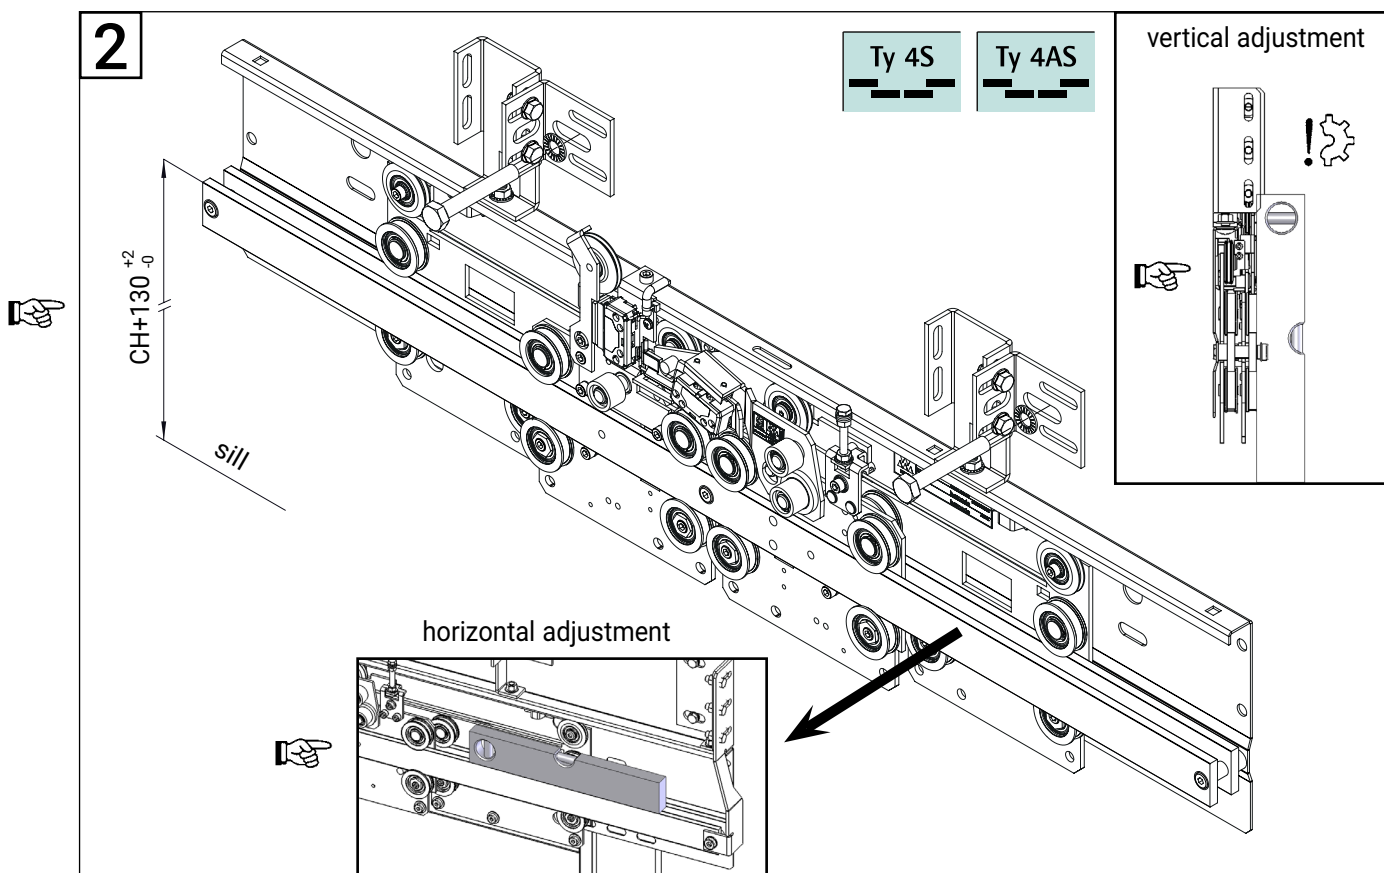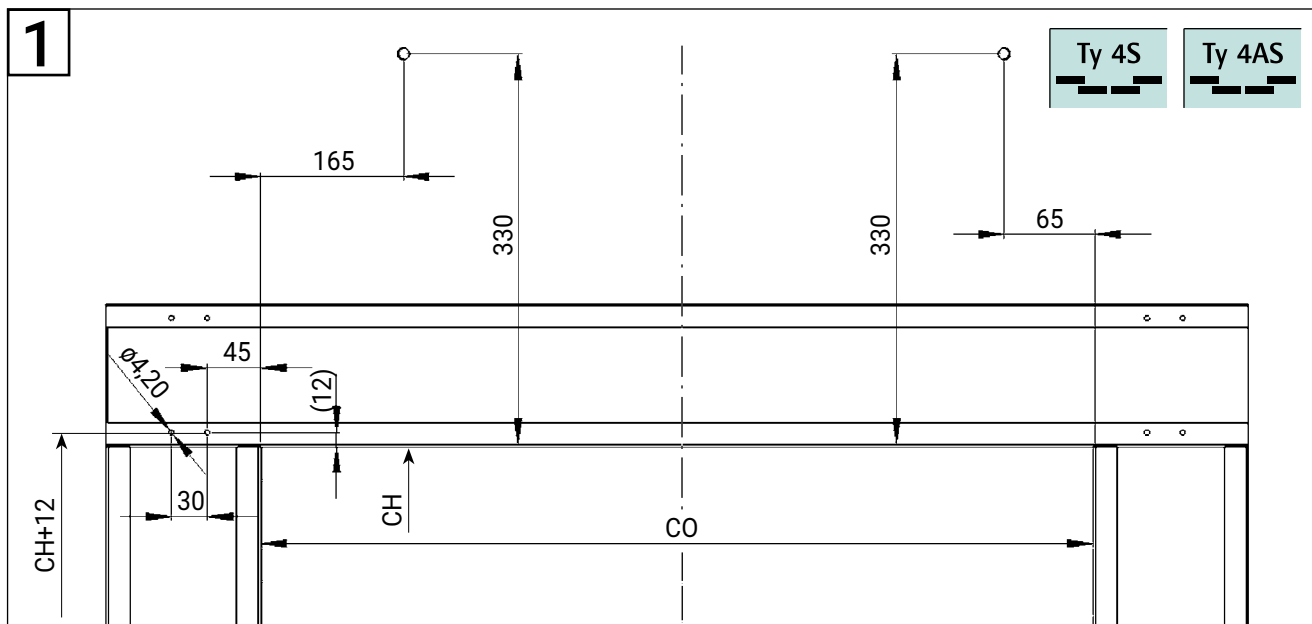



 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

Subject to change without notice!

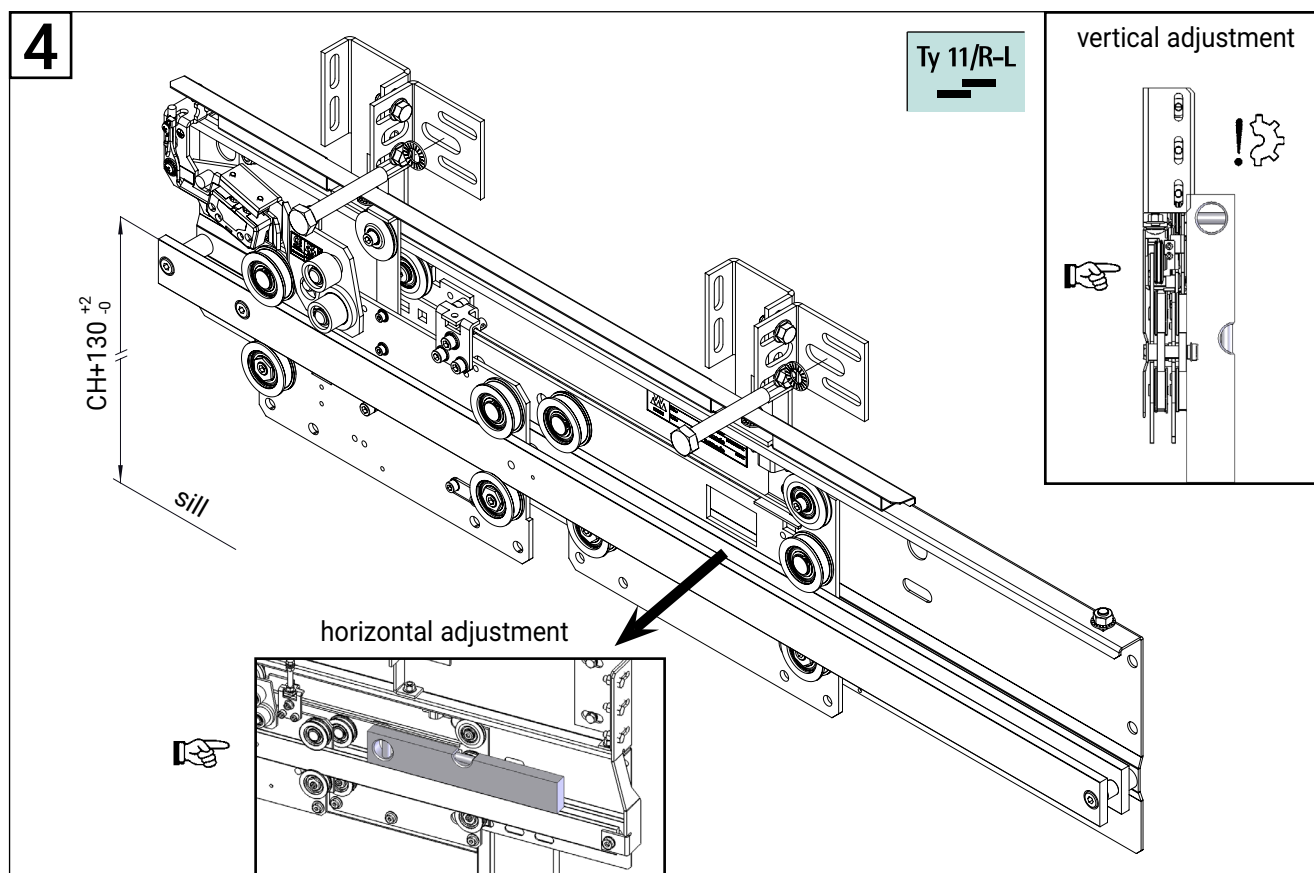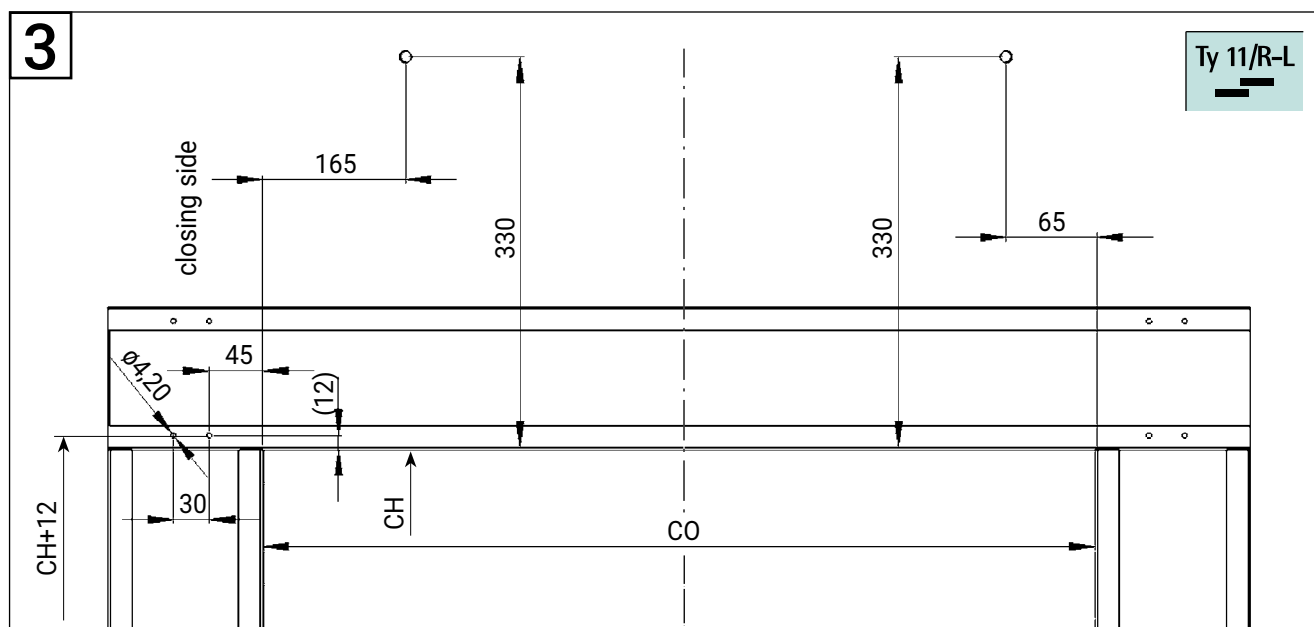

 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

Subject to change without notice!

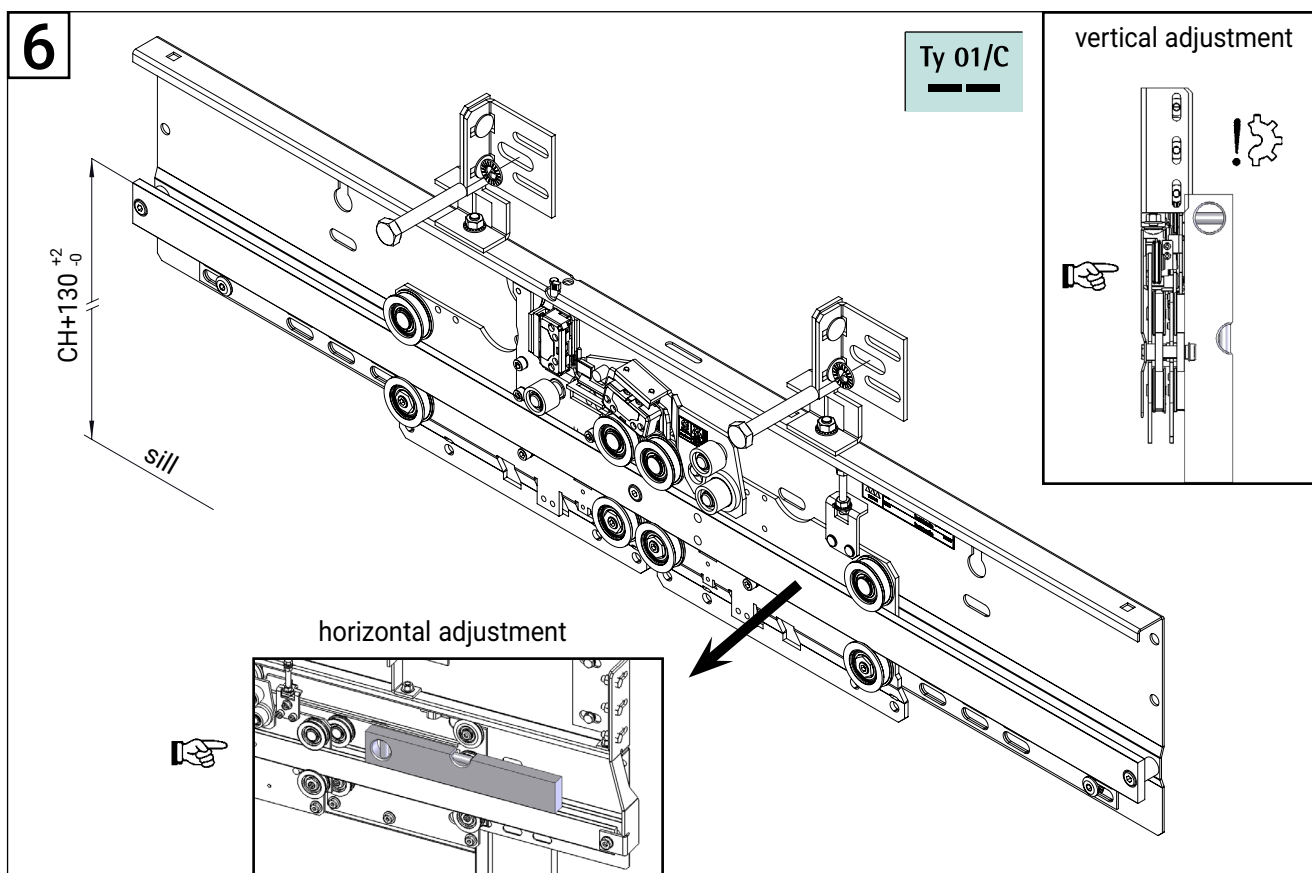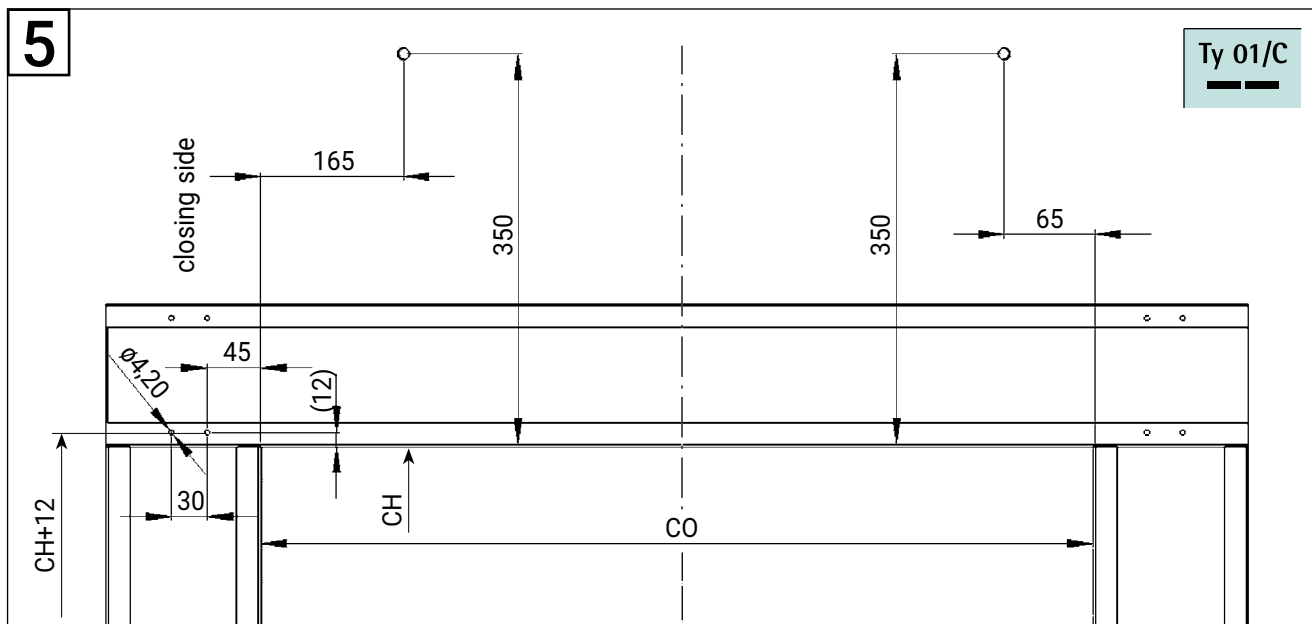

 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

Subject to change without notice!

1



Technical drawing of a window frame cross-section. Dimensions include 165, 330, 65, 13, and (55). Labels include CH+55, CH, CO, Ø13, Ty 4S, and Ty 4AS.

2


Technical drawing of a window frame assembly. Dimensions include CH+130 +2 -0 and Sill. Labels include Ty 4S, Ty 4AS, vertical adjustment, horizontal adjustment, and Sill.

 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

 
 
Subject to change without notice!



vertical adjustment

 

Subject to change without notice!

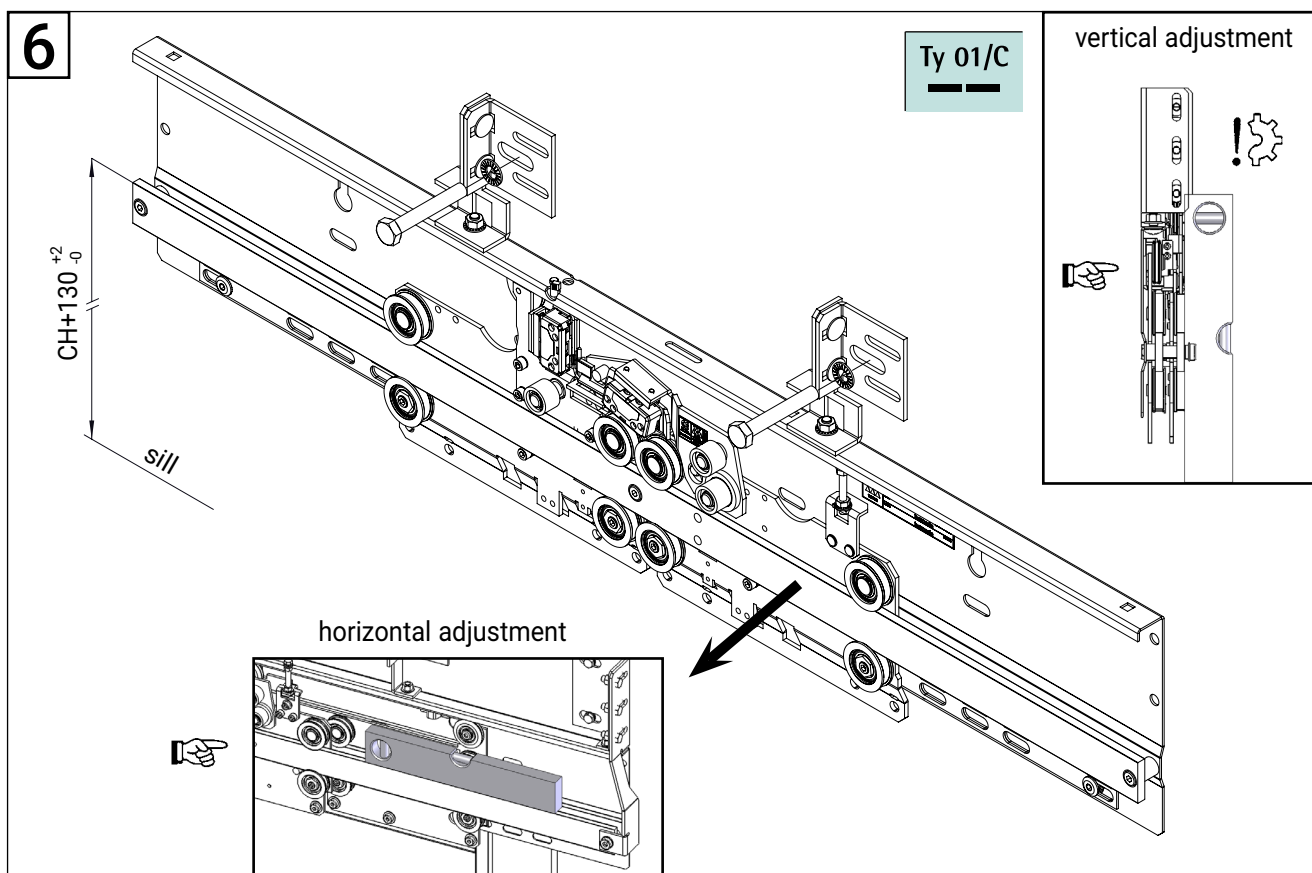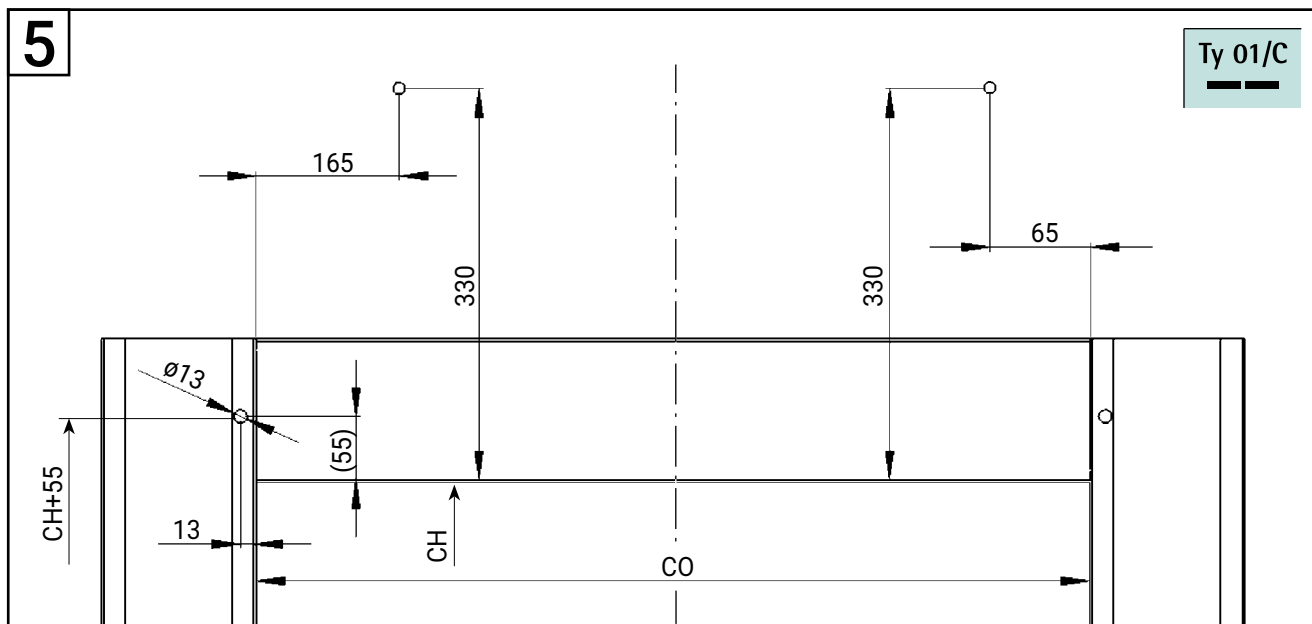

 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.


Subject to change without notice!

1.10.6 Wall fixing

1a asymmetric door

Ty 4AS


CO	M
600	184
650	
700	
750	219
800	223
850	253
880	240
900	265

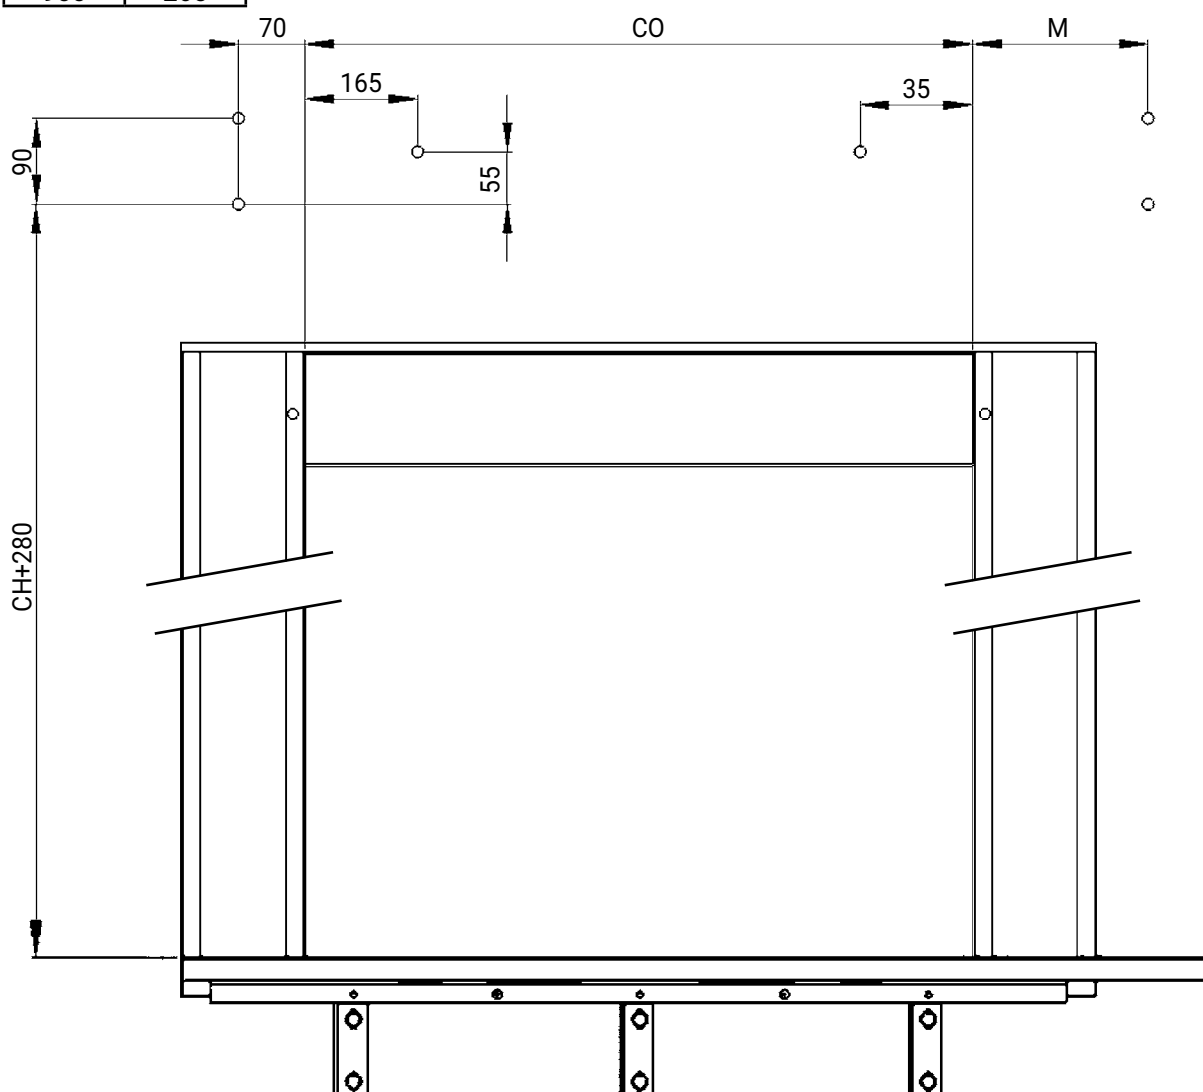

1b symmetric door

Ty 4AS


CO	M
600	850
650	900
700	950
750	1025
800	1080
850	1155
880	
900	1230

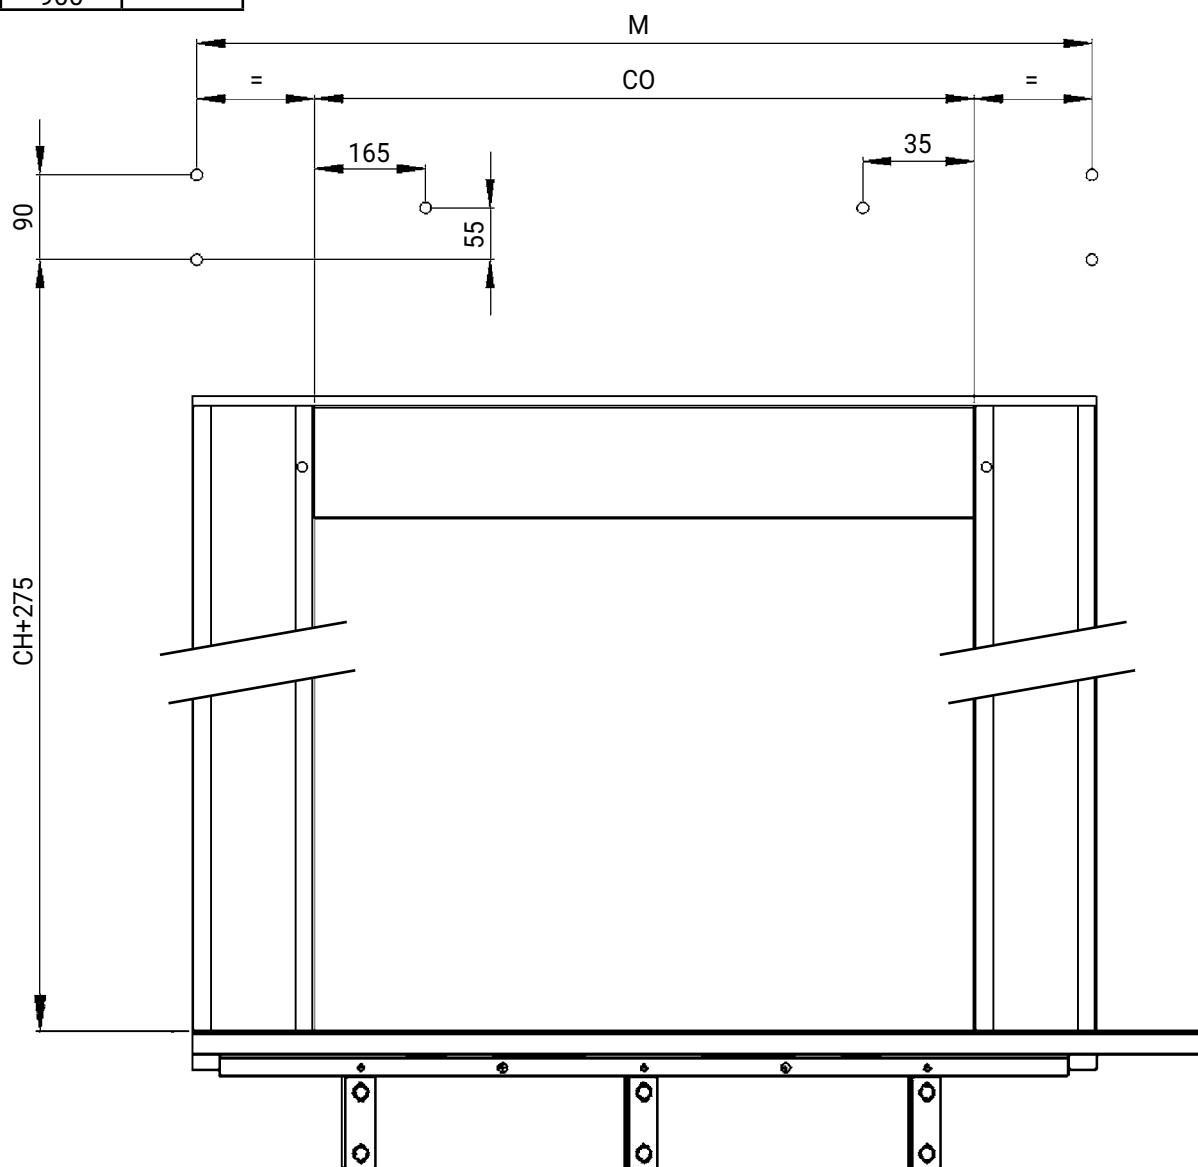

1c central opening door

Ty 01/C


CO	M
600	940
650	1040
700	1140
750	1240
800	1340
850	1440
900	1540

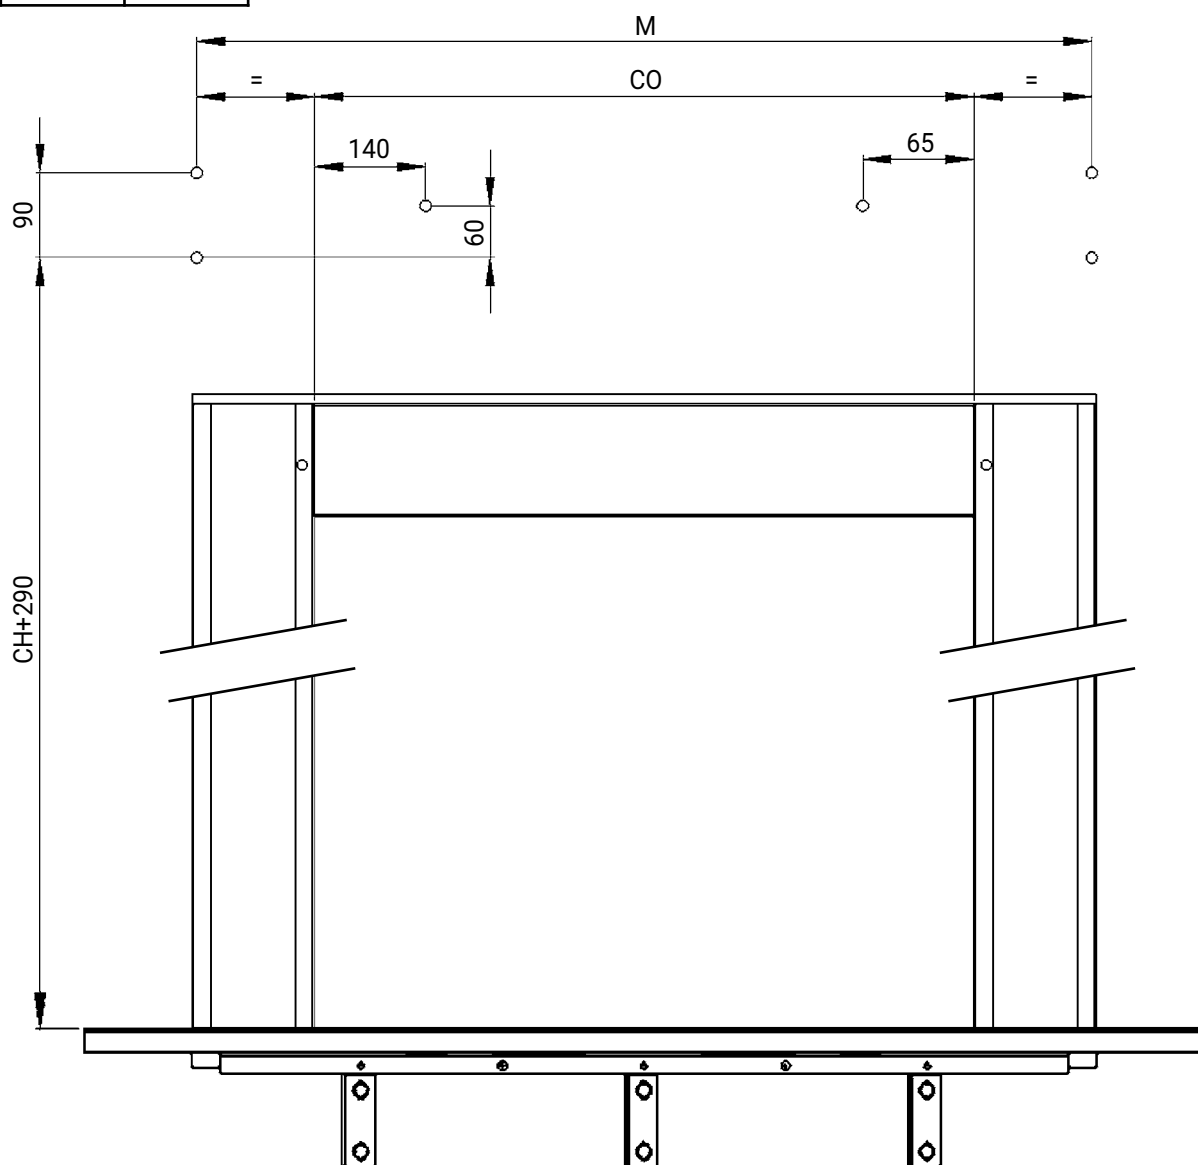


1d side opening door


Ty 11/R-L


CO	M
600	233
650	258
700	283
750	308
800	333
850	358
900	383

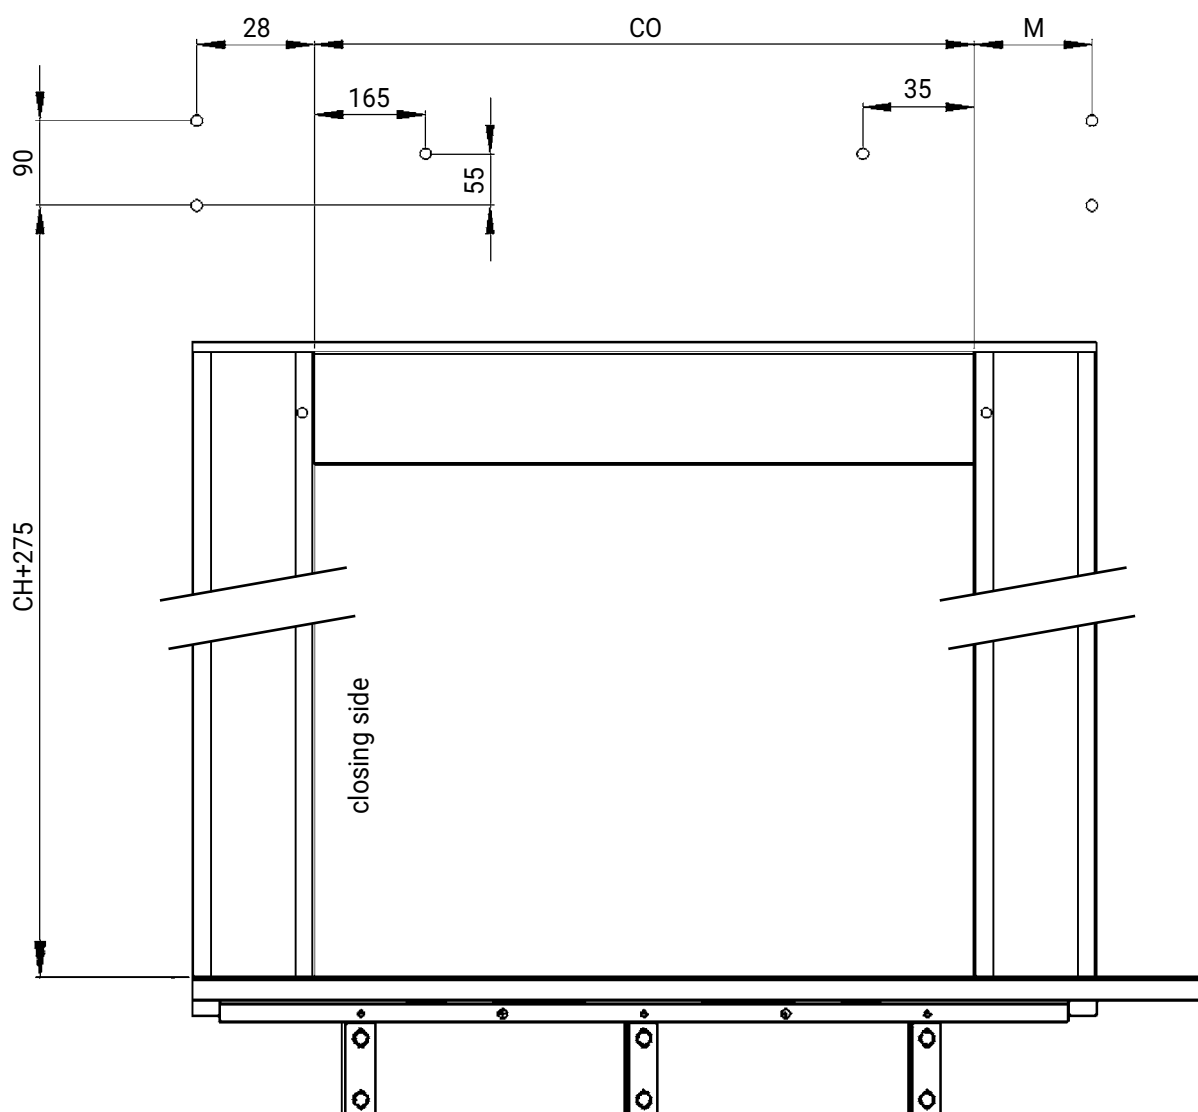

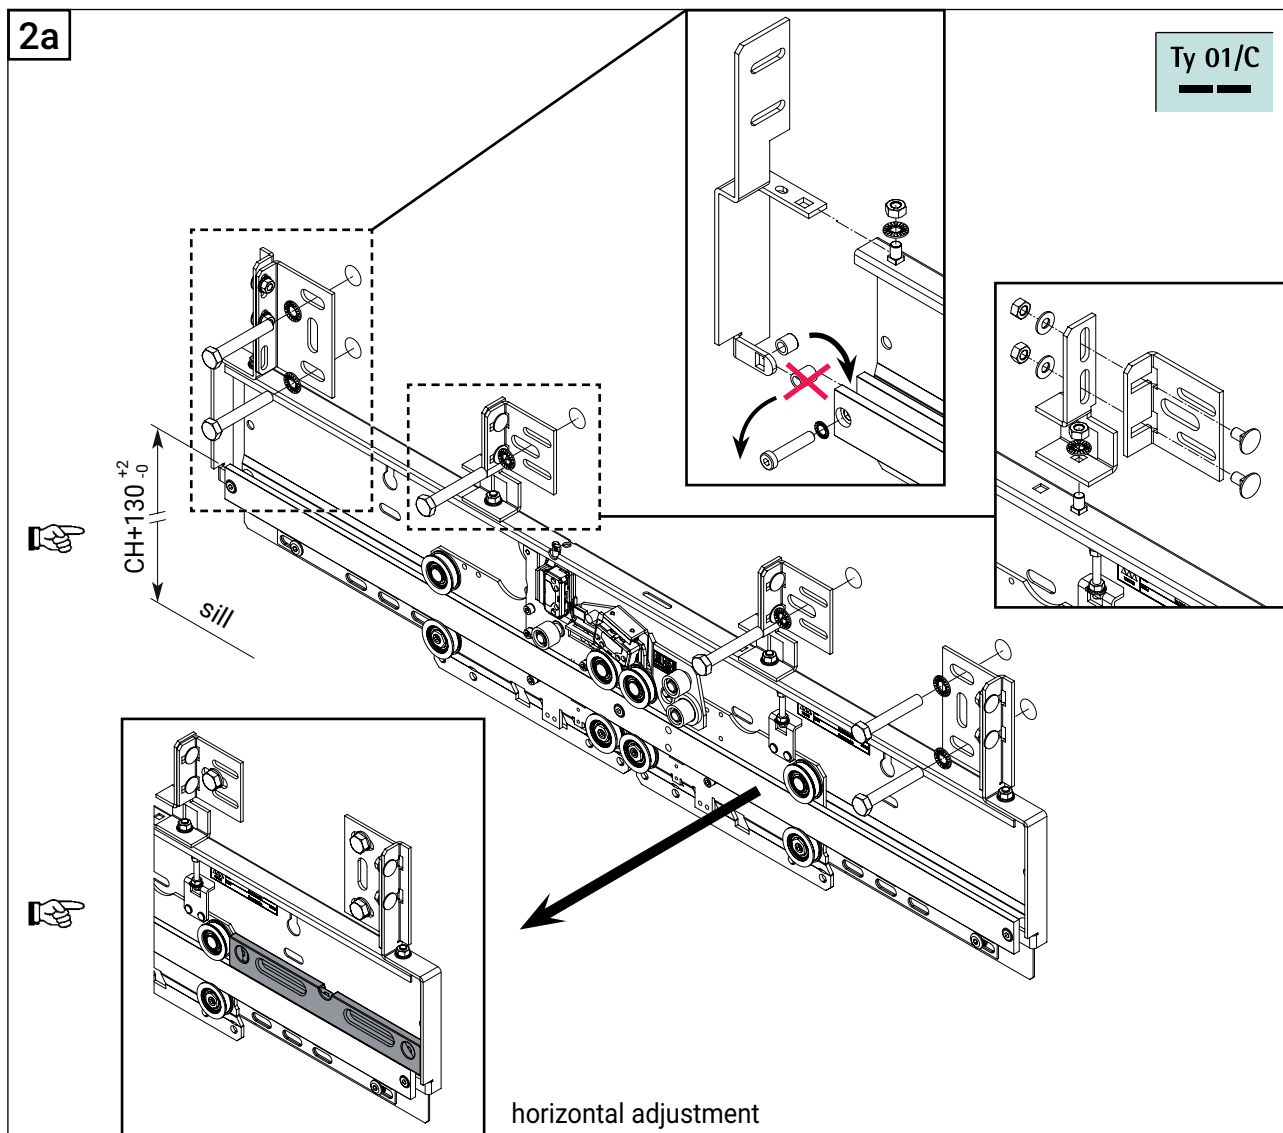



 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

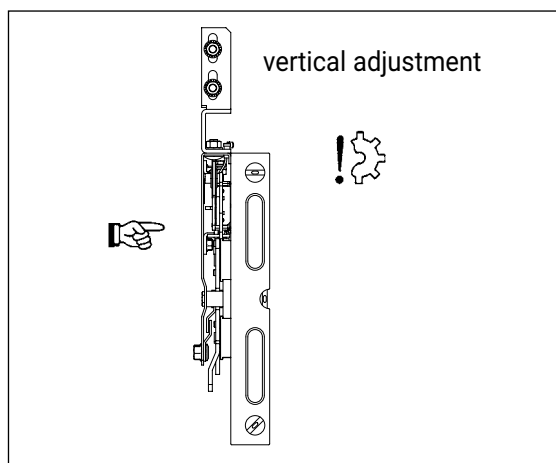

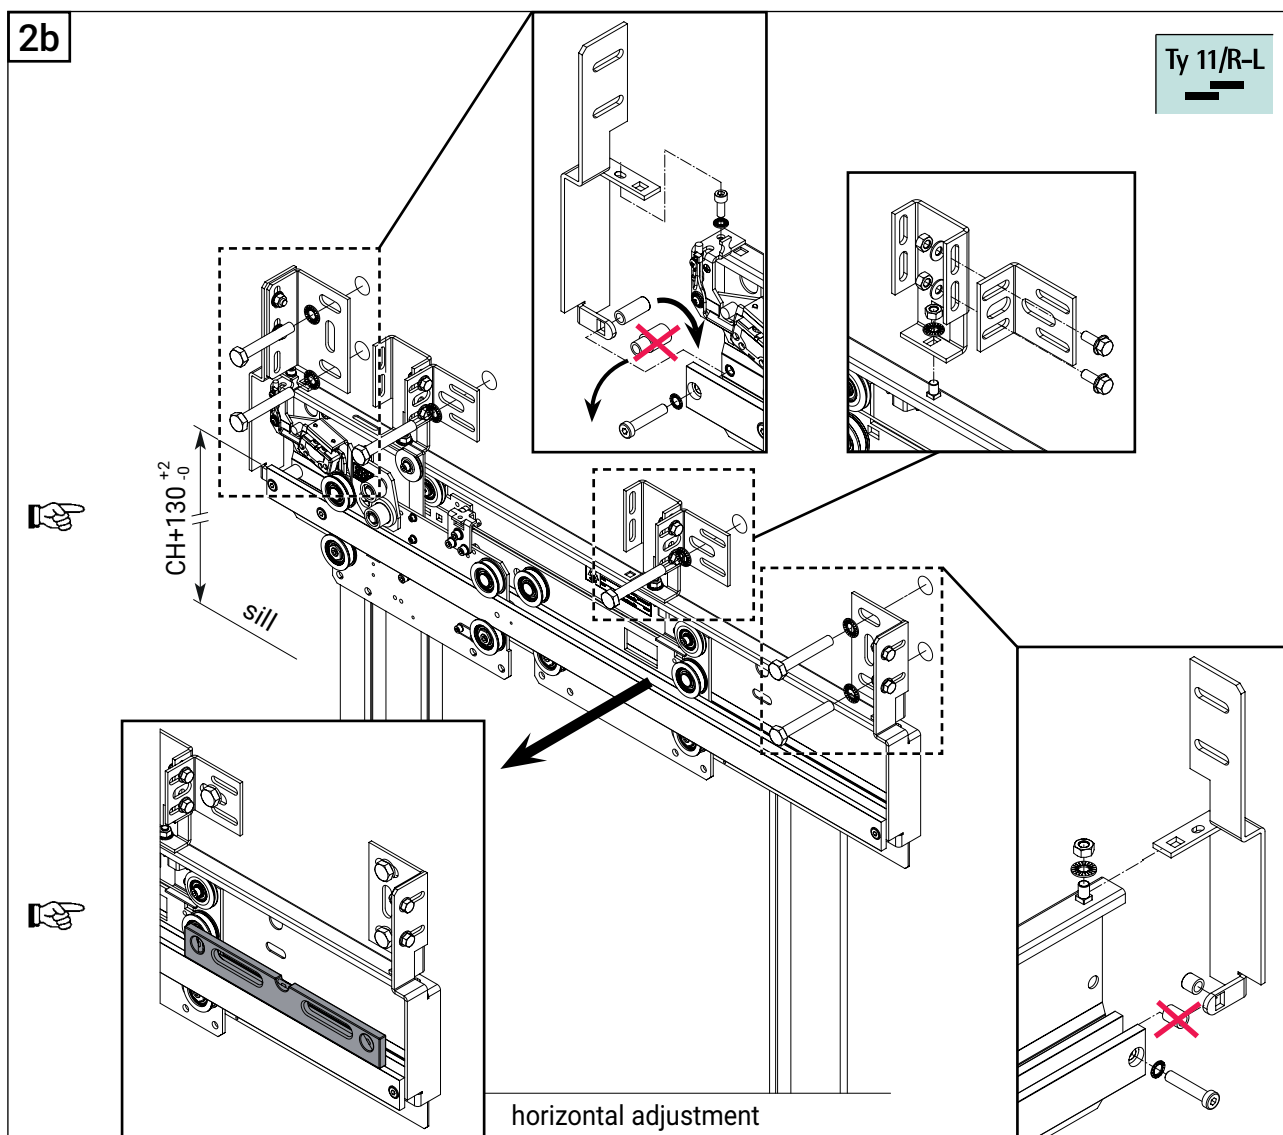


 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

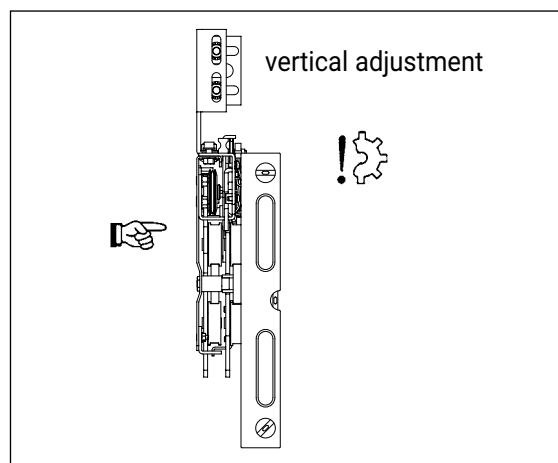

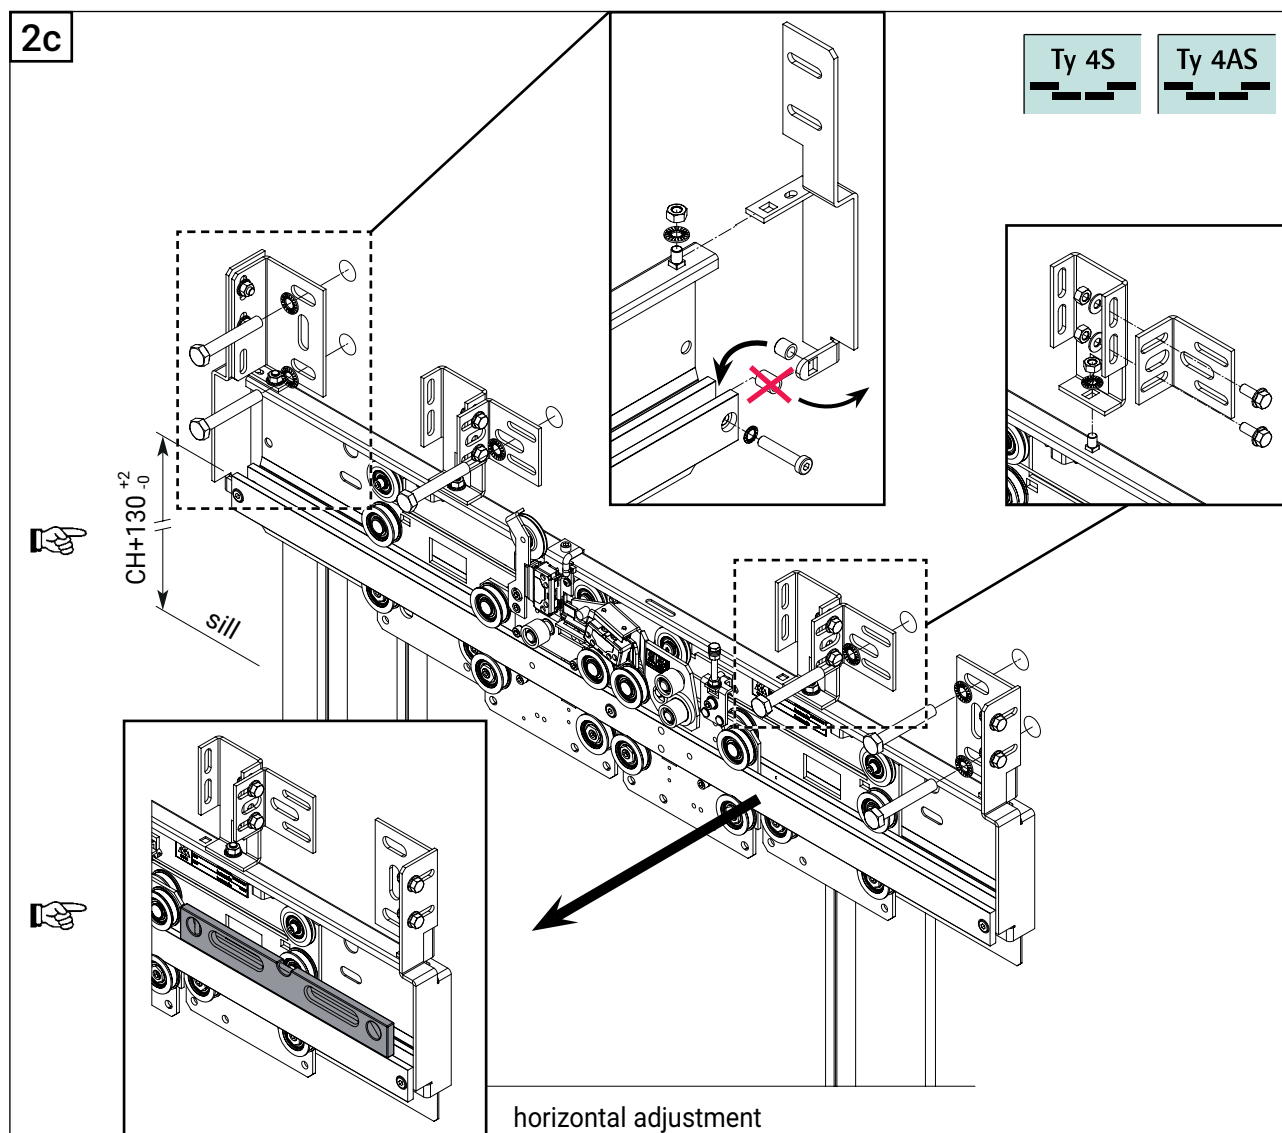

 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.

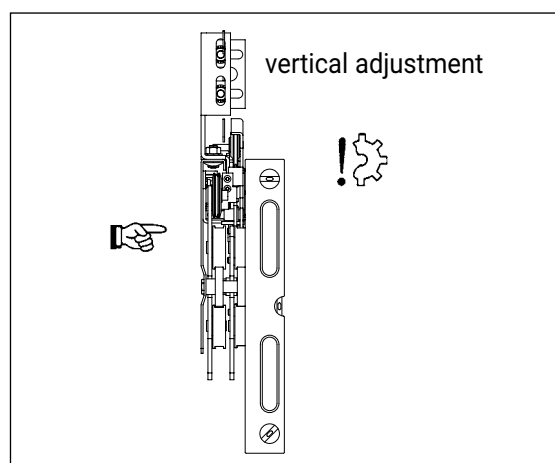


Ty 01/C

Ty 11/R-L

Ty 4S




Ty 4AS

2d - Assembling of the top track with the installation template

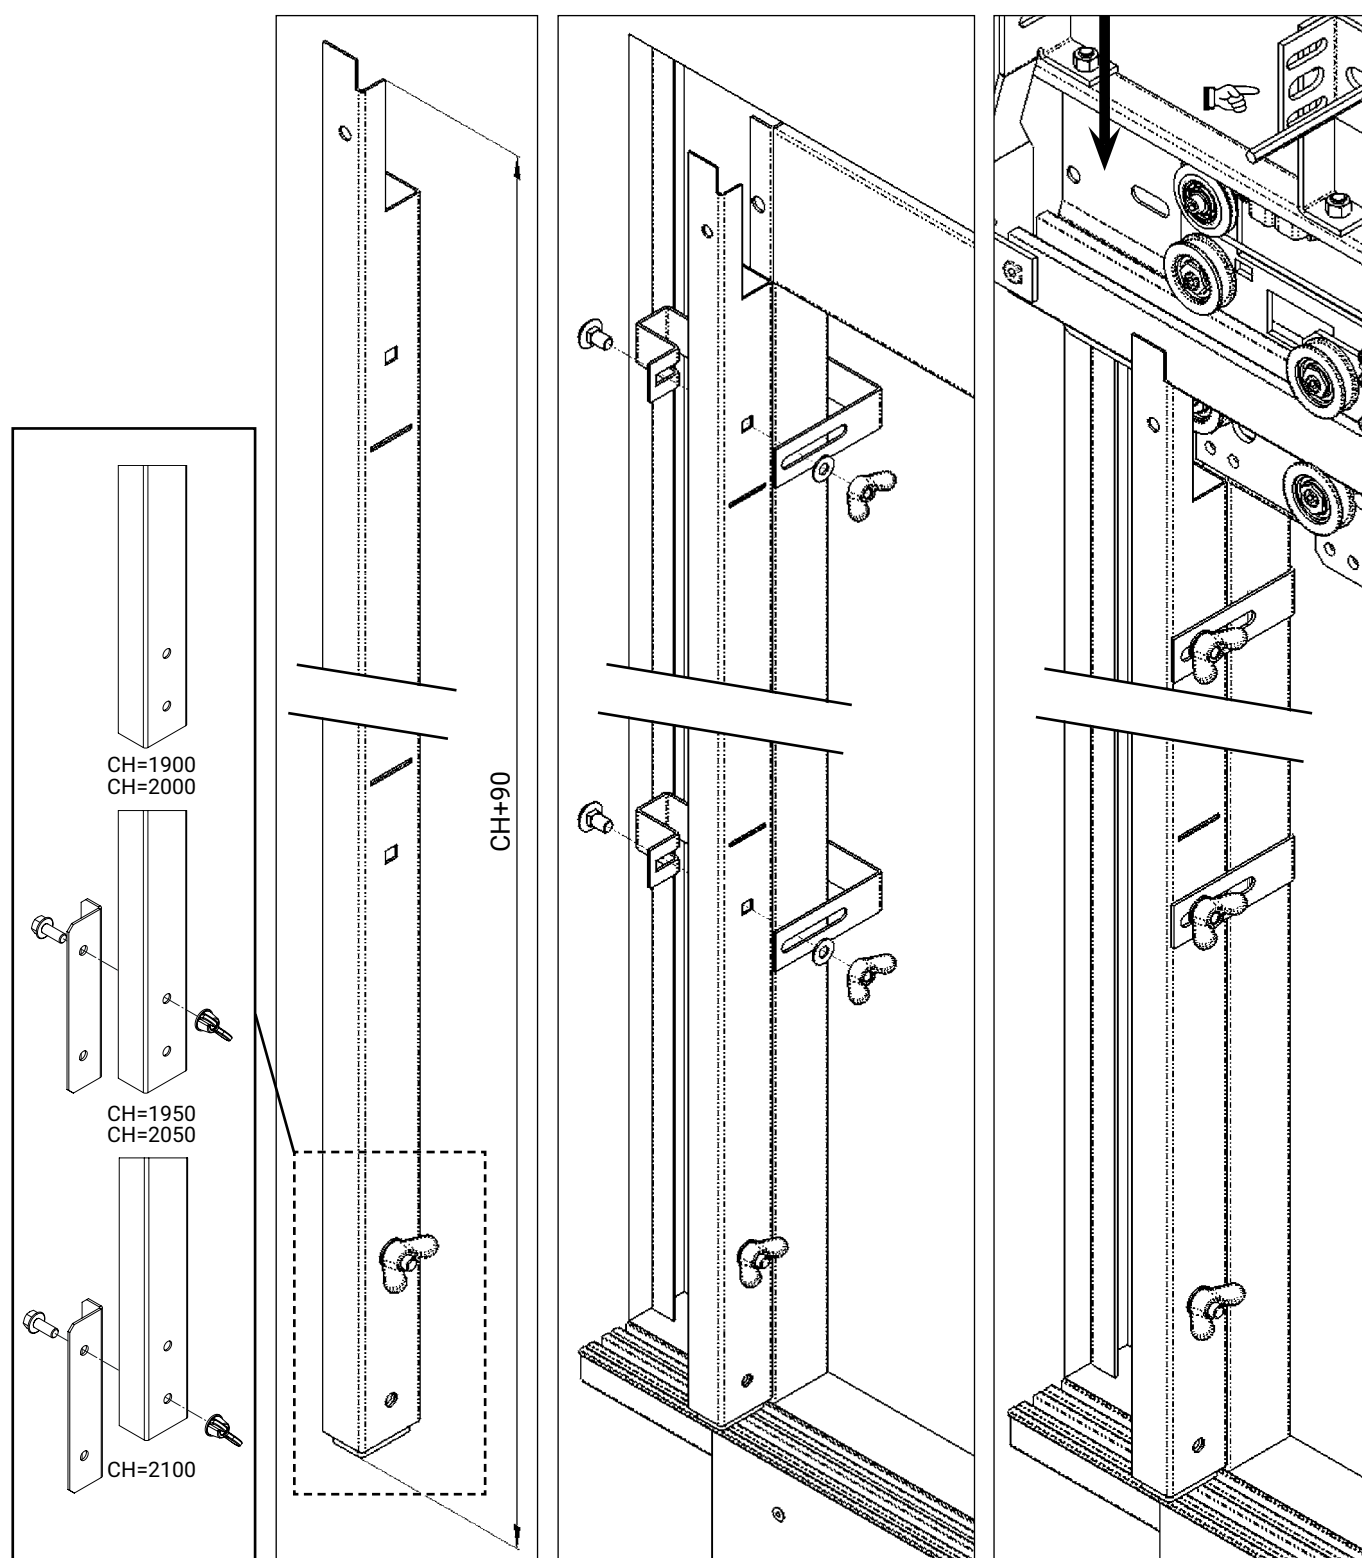


INSTRUCTION HANDBOOK LANDING DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 46.161

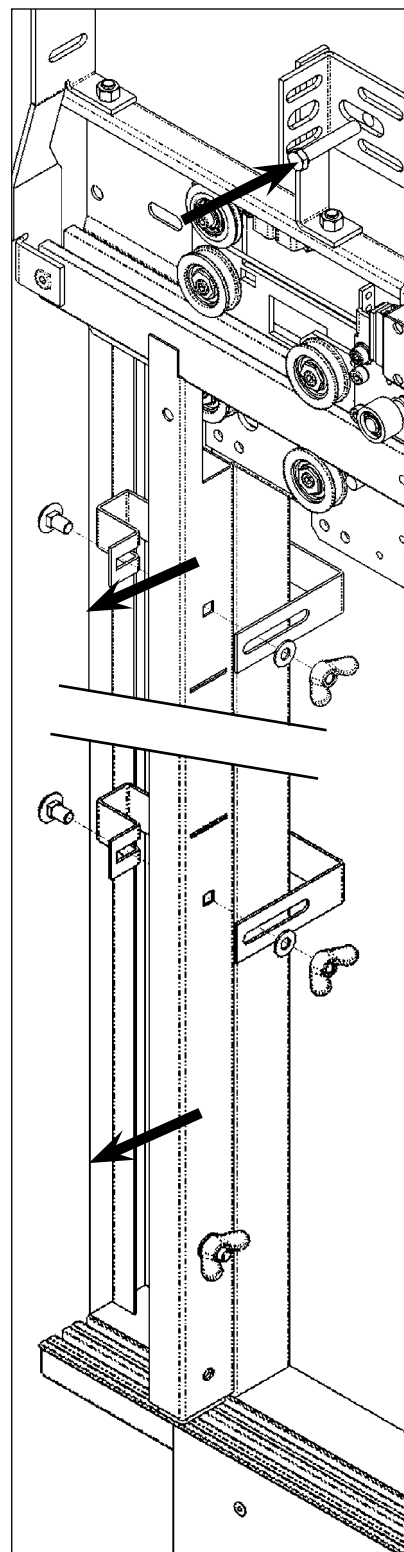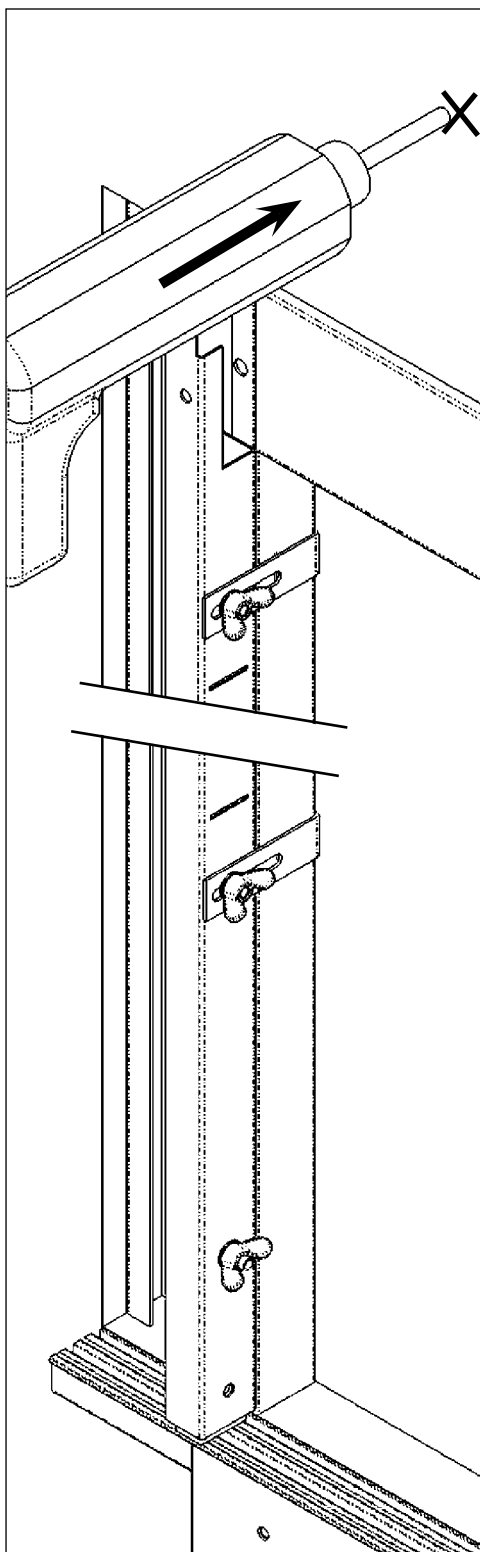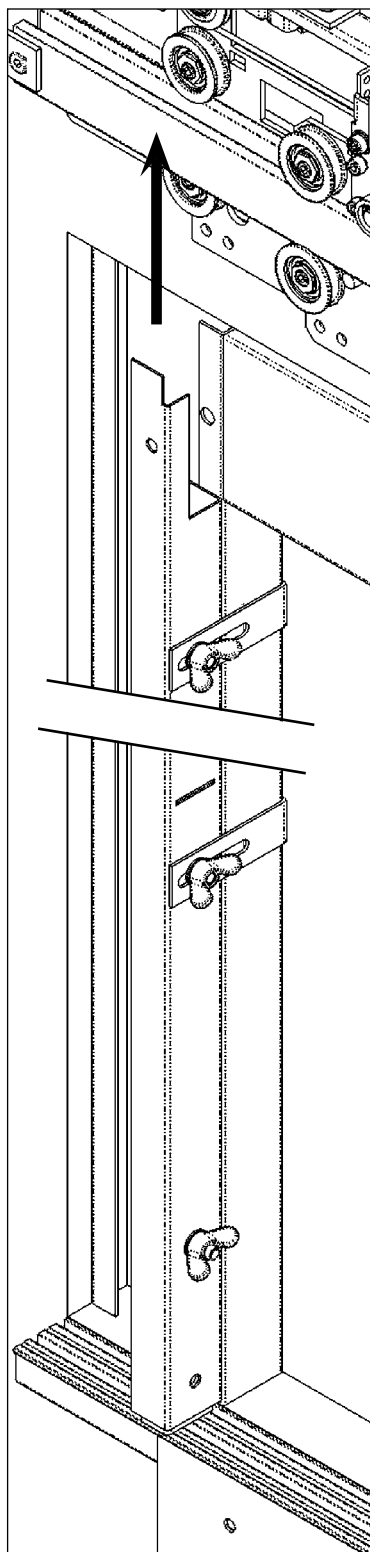

1.11 ASSEMBLY OF DOOR PANEL

1.11.1 Panel shoes assembly

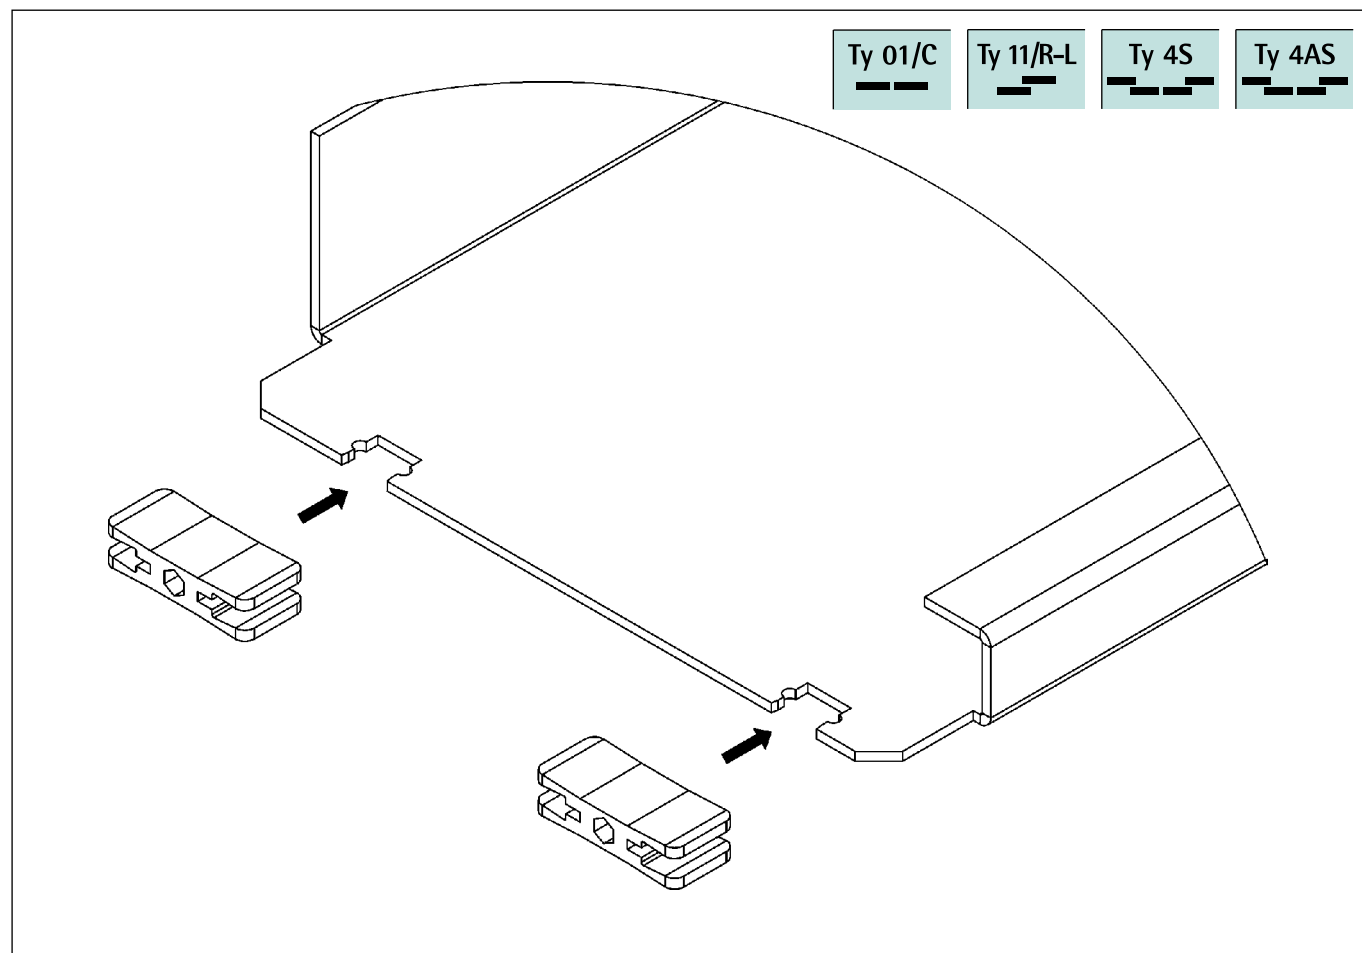


Ty 11/R-L

Ty 4S

Ty 4AS

1.11.2 Inserting door panels

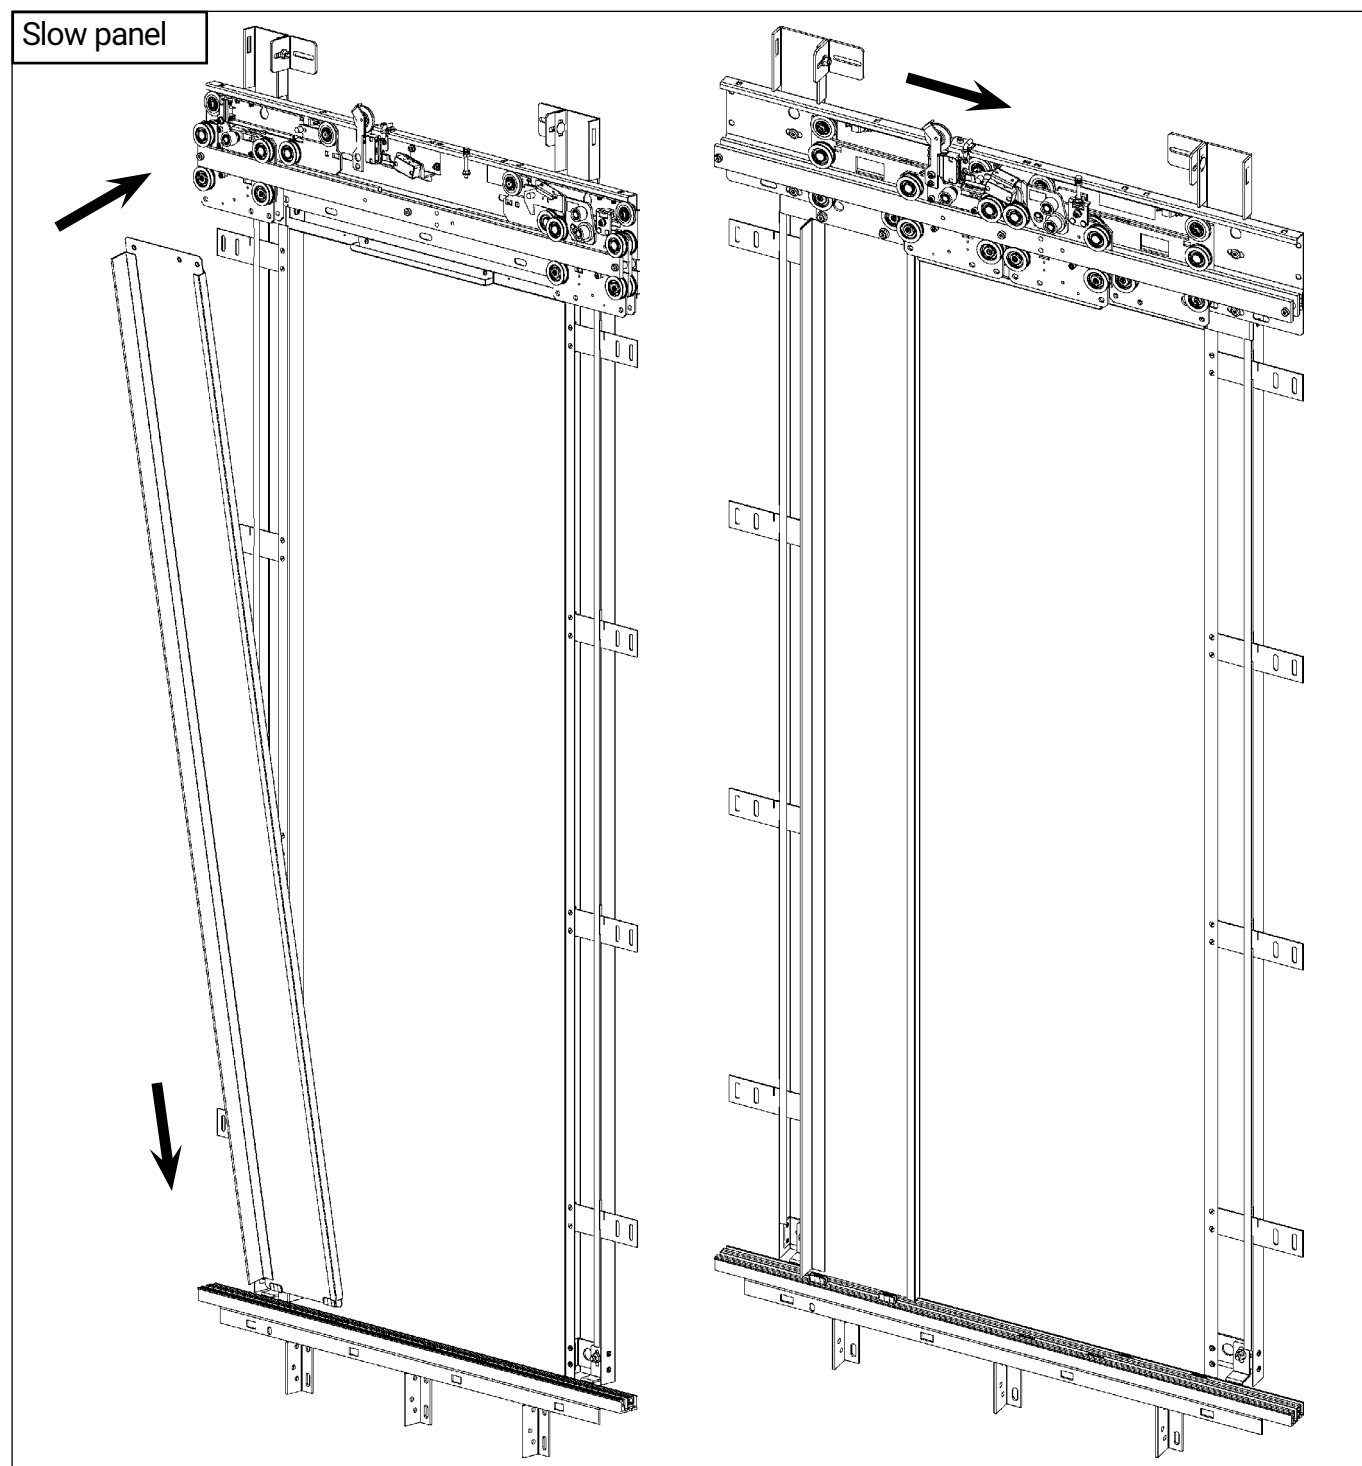


- 1) Open the mechanism
- 2) Insert the panel into the sill
- 3) Close the mechanism
- 4) Secure the panel on the mechanism, see 1.10.3.

Ty 01/C

Ty 11/R-L


Ty 4S

Ty 4AS

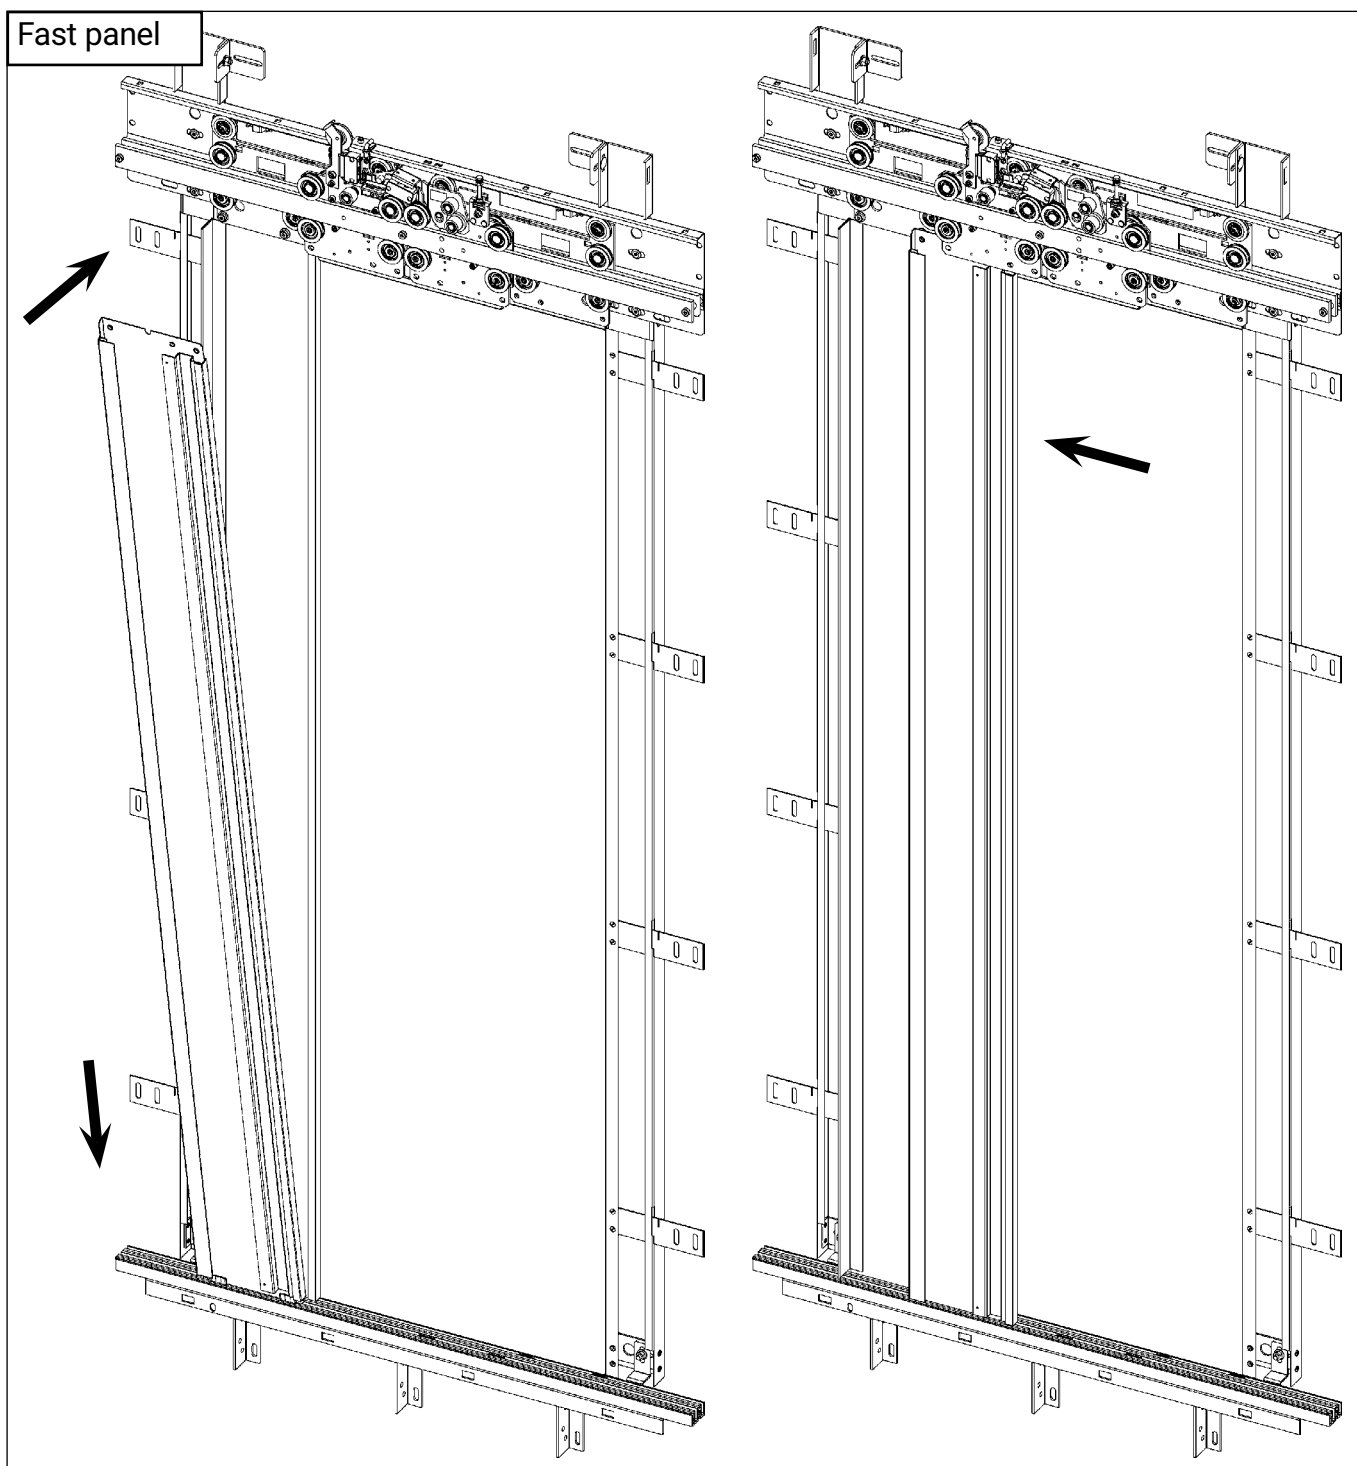


- 1) Close the mechanism
- 2) Insert the panel into the sill
- 3) Open the mechanism
- 4) Secure the panel on the mechanism, see 1.10.4.

1.11.3 Assembly of the rear door panels

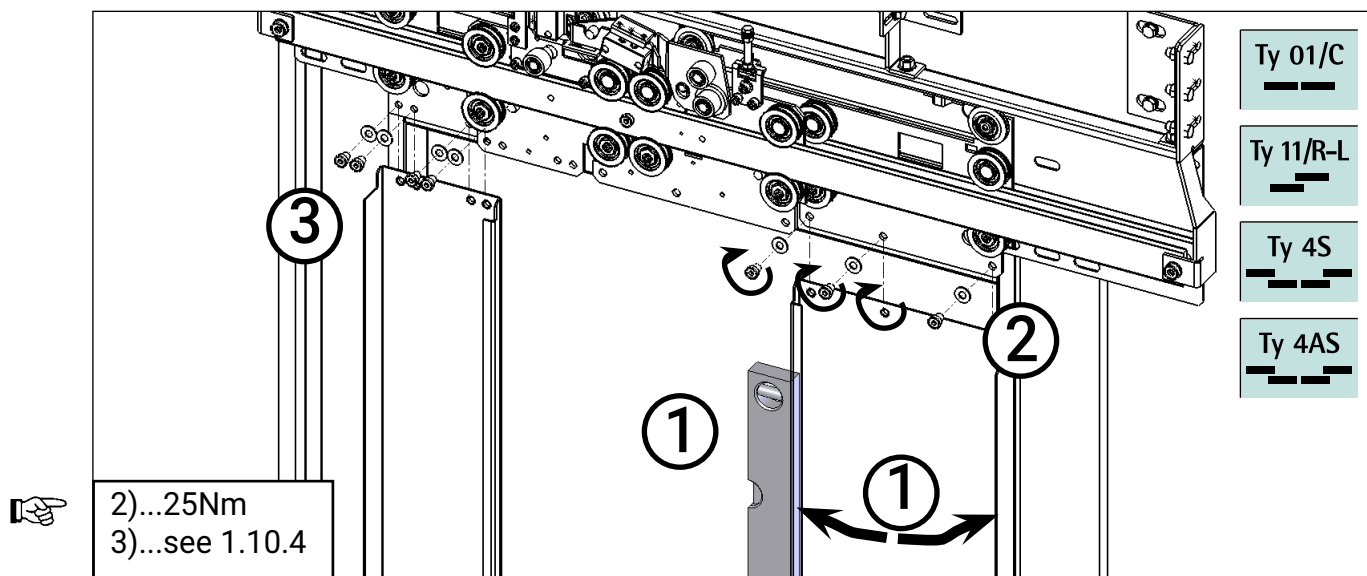


1.11.4 Assembly of the front door panels

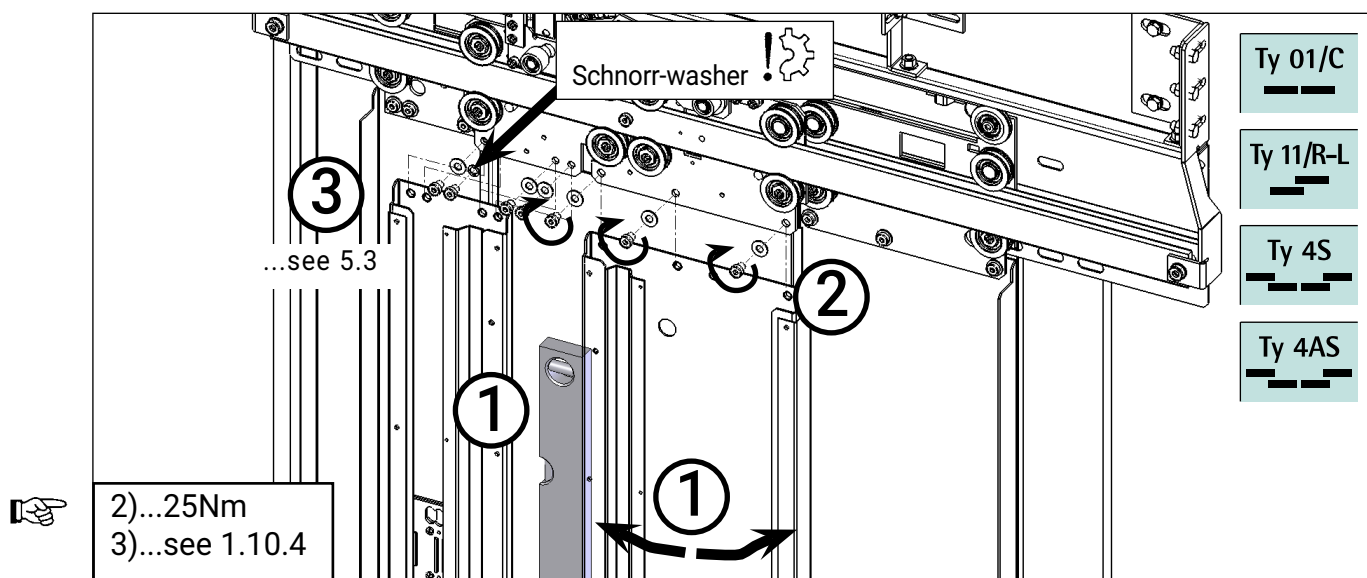

For better assembling open the door 5cm.


1.11.5 Adjustment of the panel gap

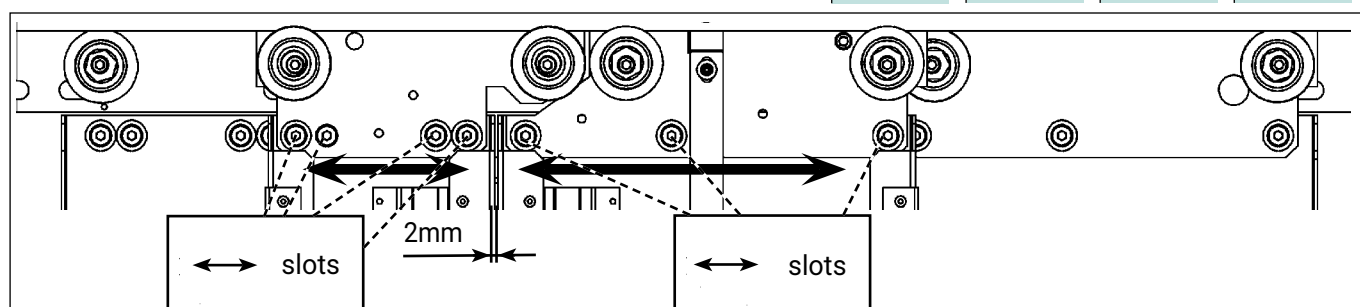

Subject to change without notice!


1.11.6 Adjustment of the narrow door panels (asymmetric door)

Ty 4AS

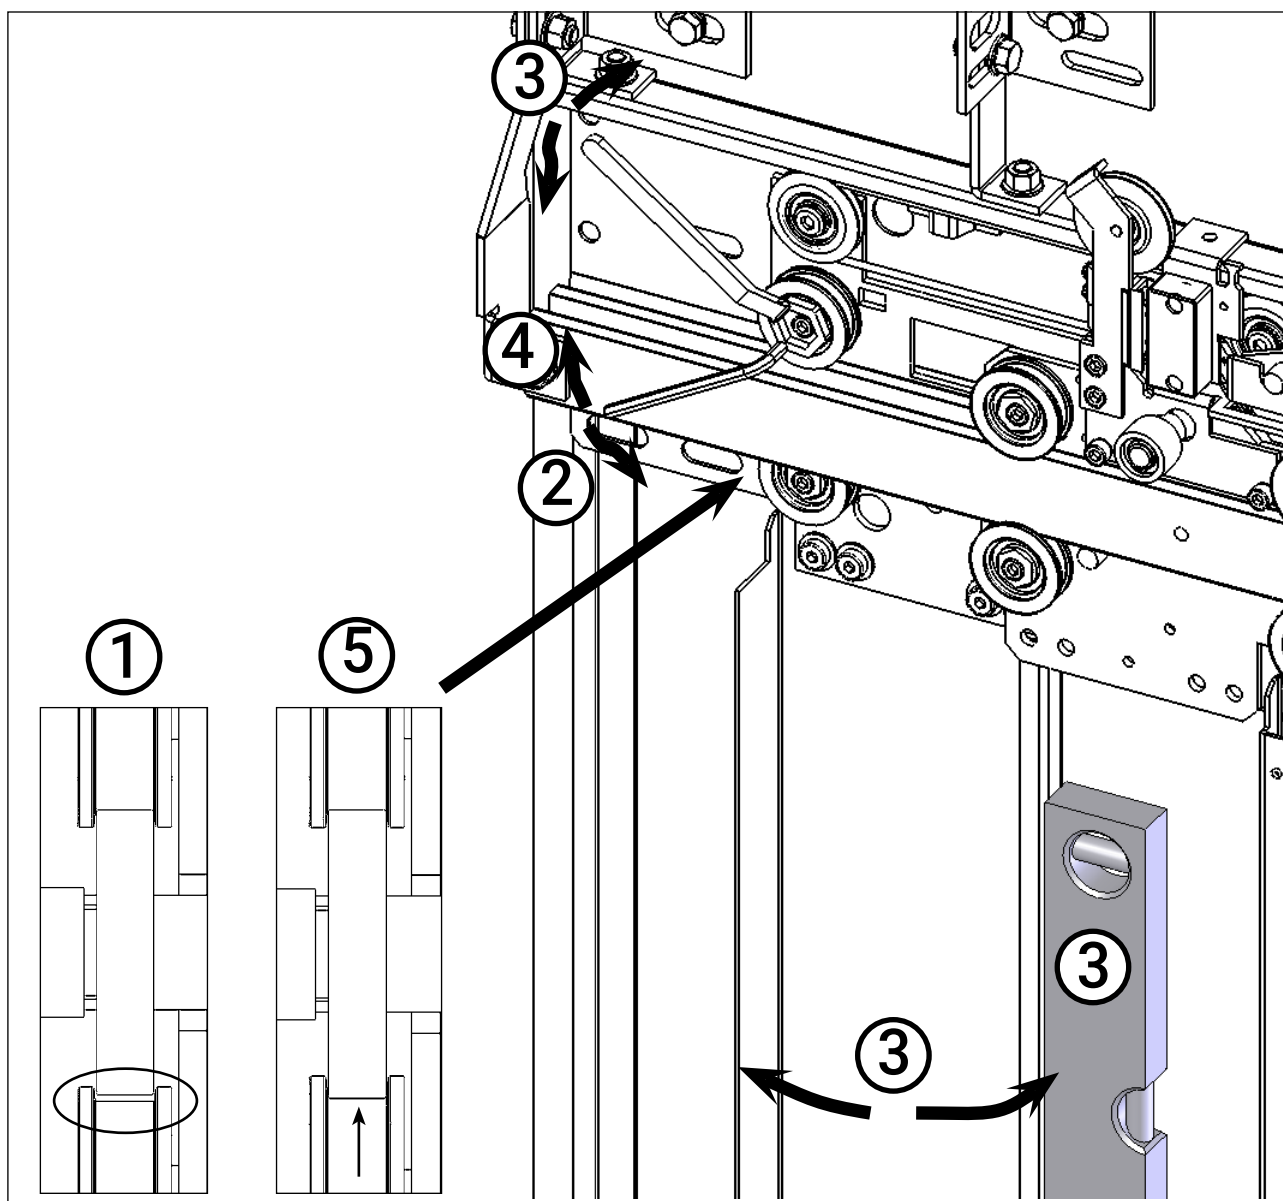

- 1) Relax counter roller
- 2) Relax hexagon screw
- 3) Adjust the door panel
- 4) Fix the hexagon screw
- 5) Adjust the counter roller (for all counter roller available; tighten the counter roller with the hexagon screw so, that it is still barely rotatable)

1.12 ASSEMBLY OF THE EMERGENCY OPENING DEVICE

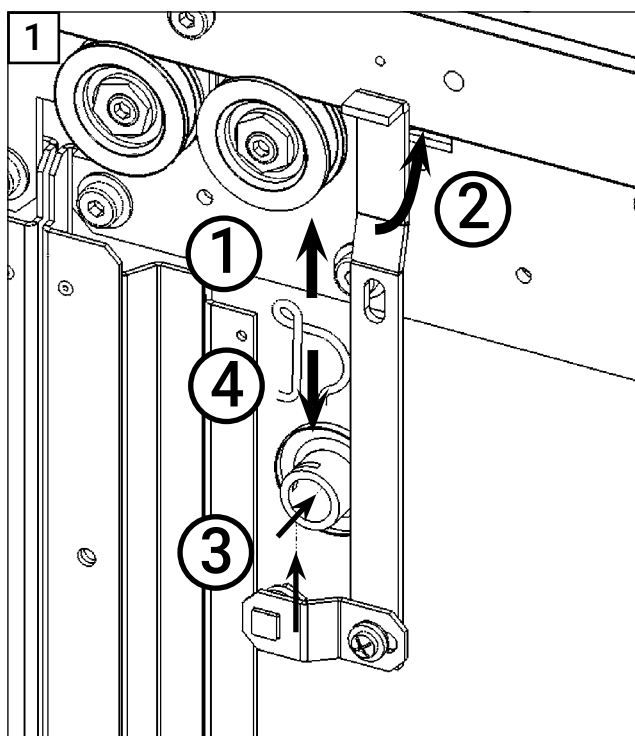


Ty 01/C


Ty 11/R-L

Ty 4S

Ty 4AS

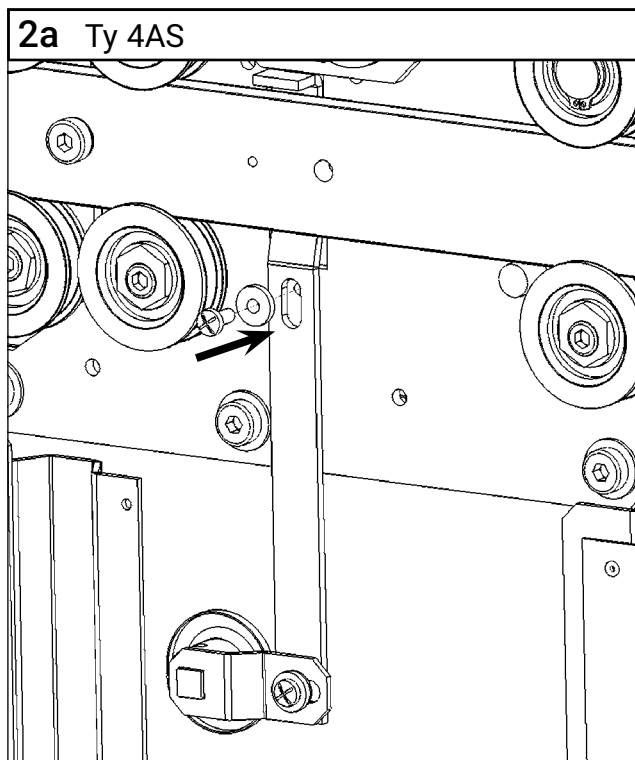

2a Ty 4AS



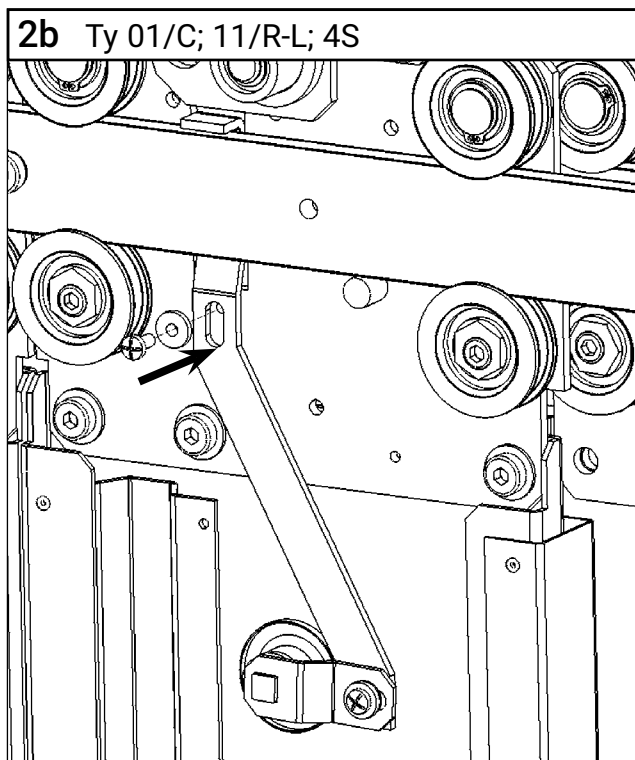


2b Ty 01/C; 11/R-L; 4S

1.13 EMERGENCY OPENING CONTACT (OPTIONAL)

Ty 01/C

Ty 11/R-L

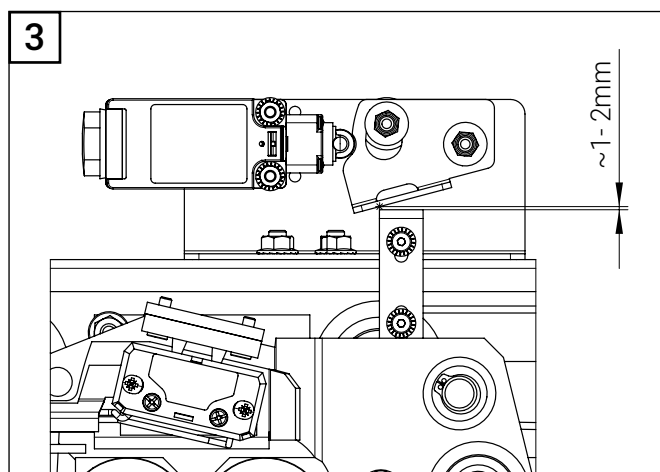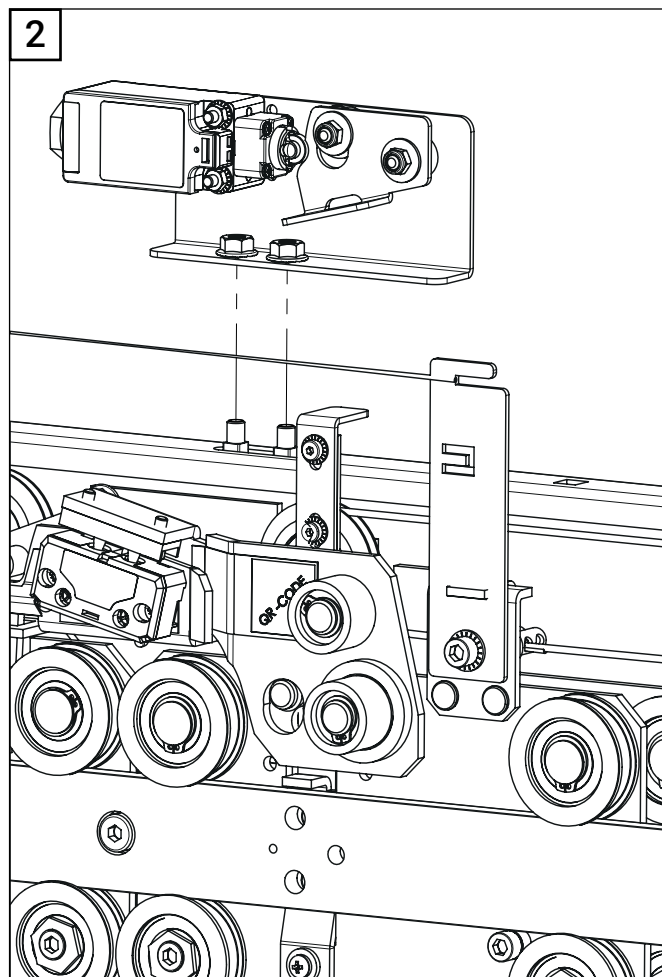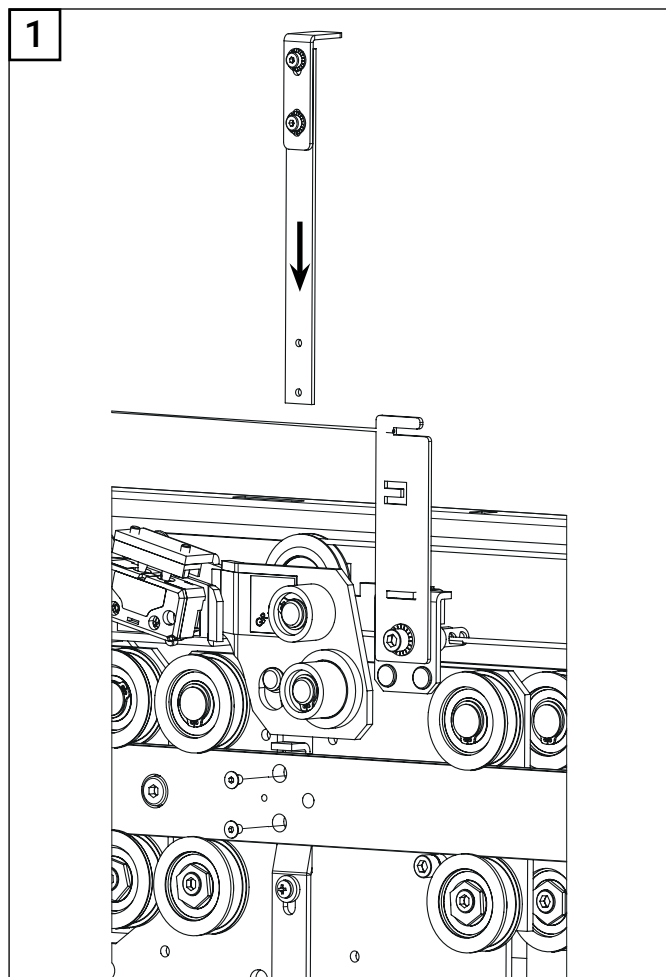


1.14 PIT EGRESS DEVICE (OPTIONAL)

Ty 01/C

Ty 11/R-L


Ty 4S

Ty 4AS

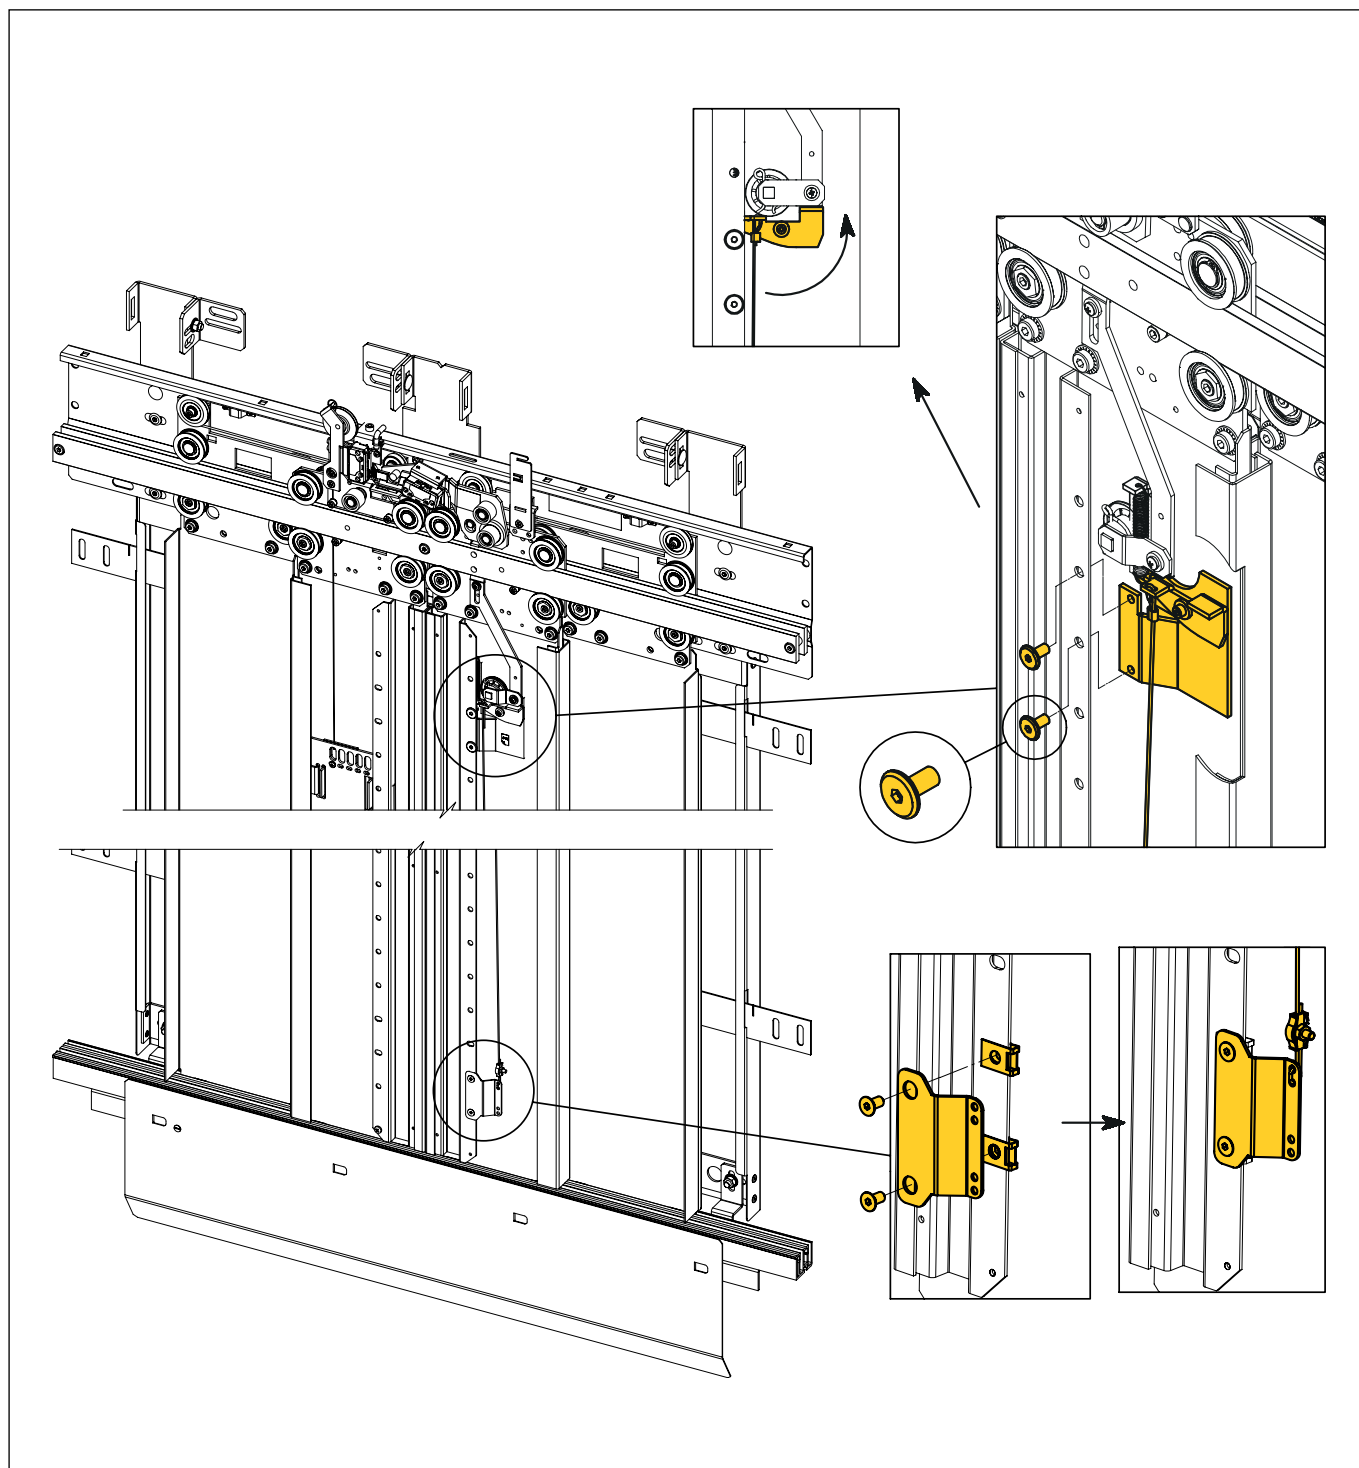

1.15 ASSEMBLY OF THE CLOSING WEIGHT ROPE

1.15.1 Replacement of the closing weight rope

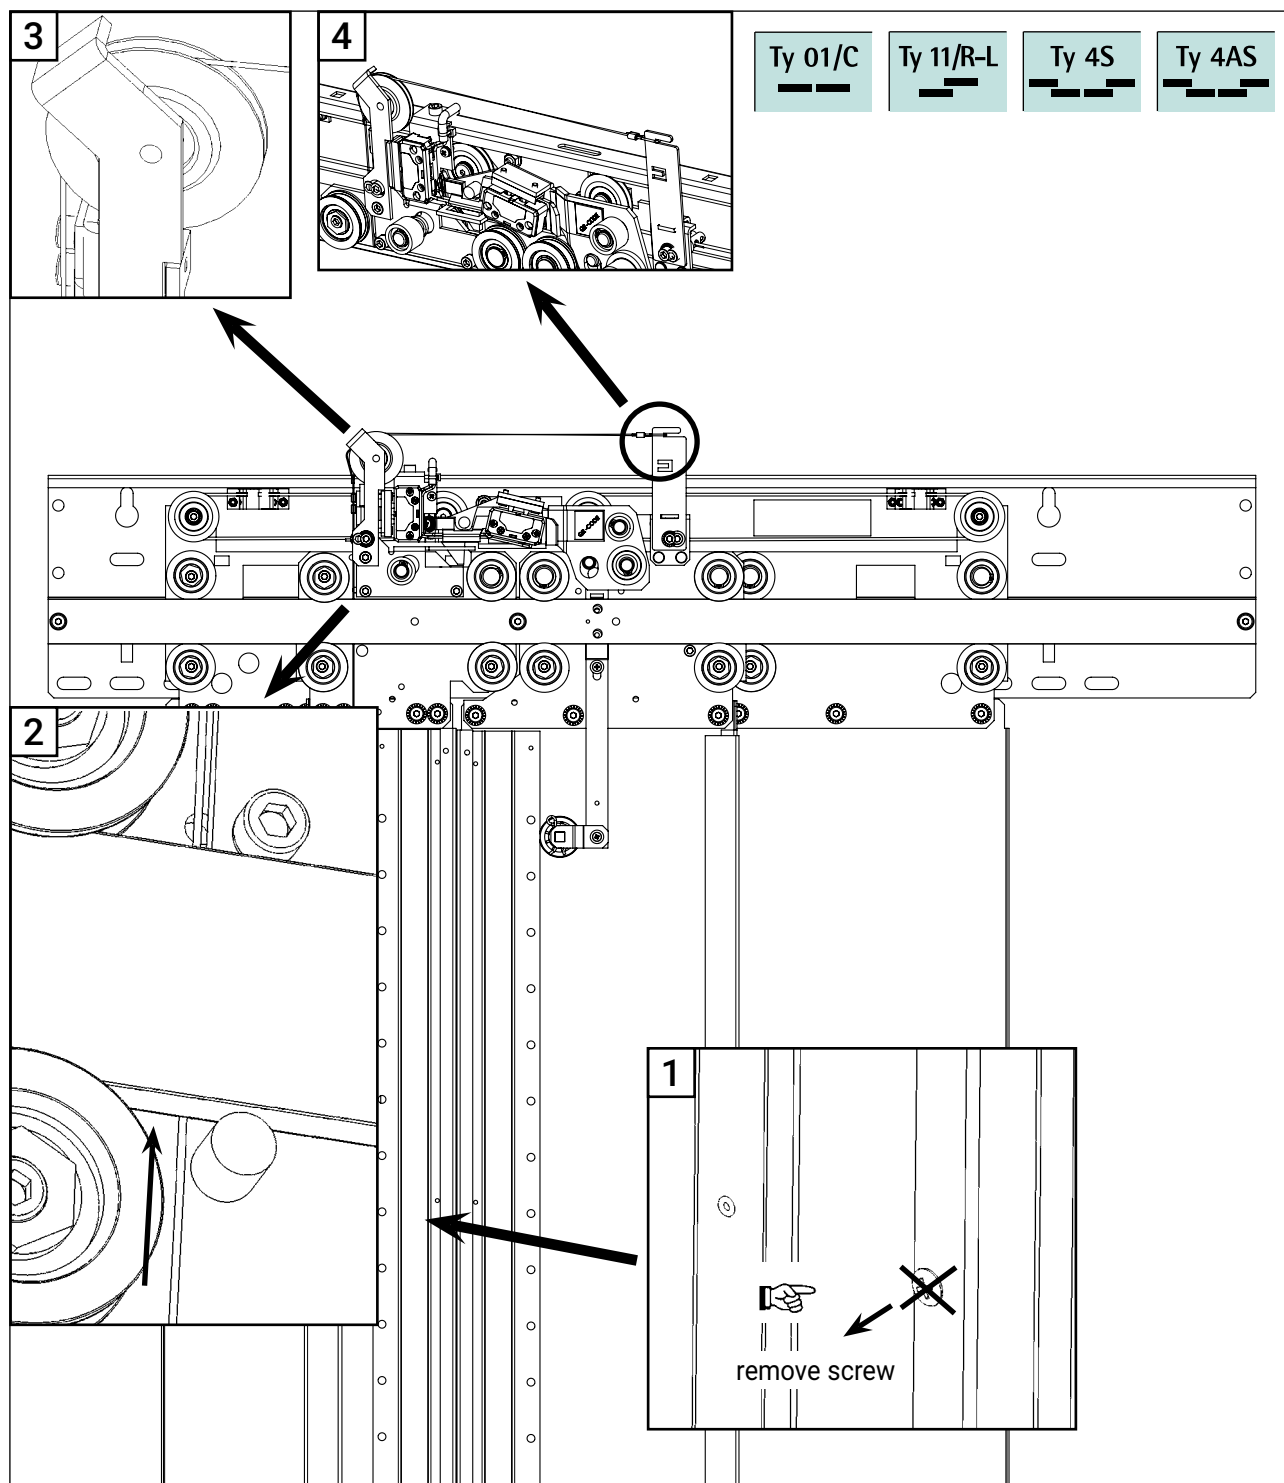


1.15.2 Adjustment of the closing weight rope

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

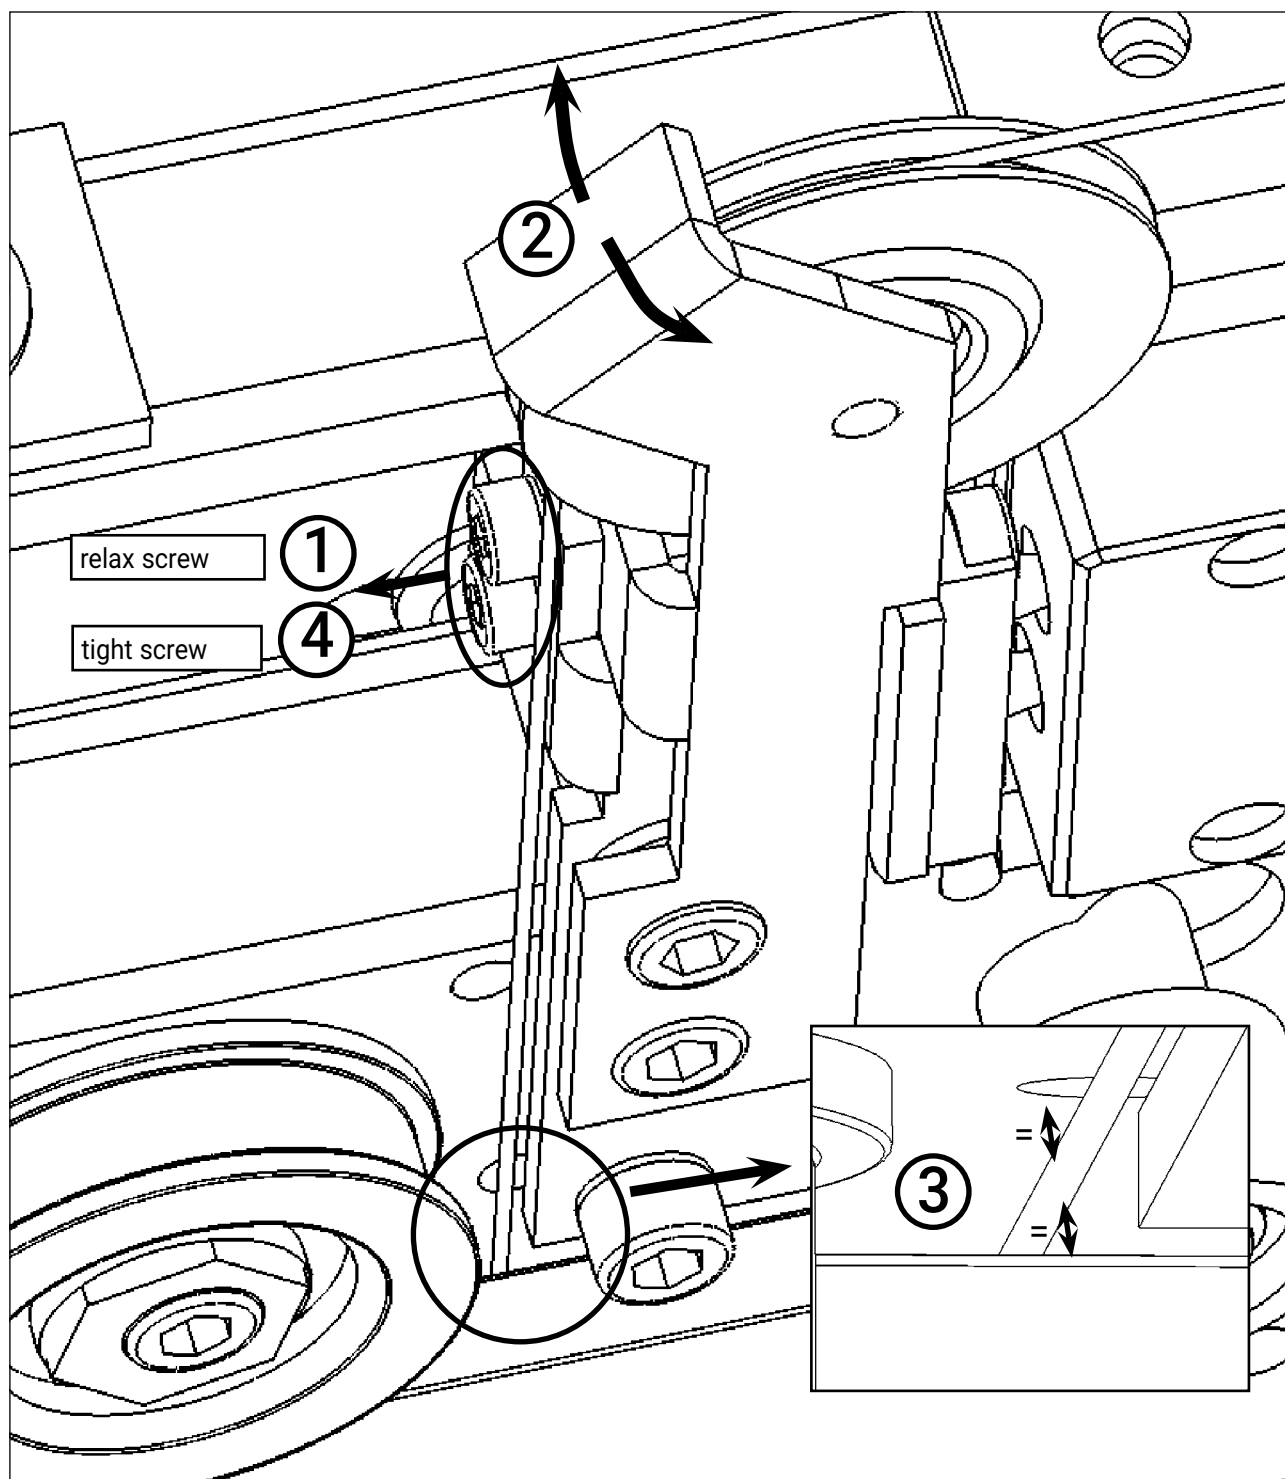


1.16 TOE GUARD ASSEMBLING

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

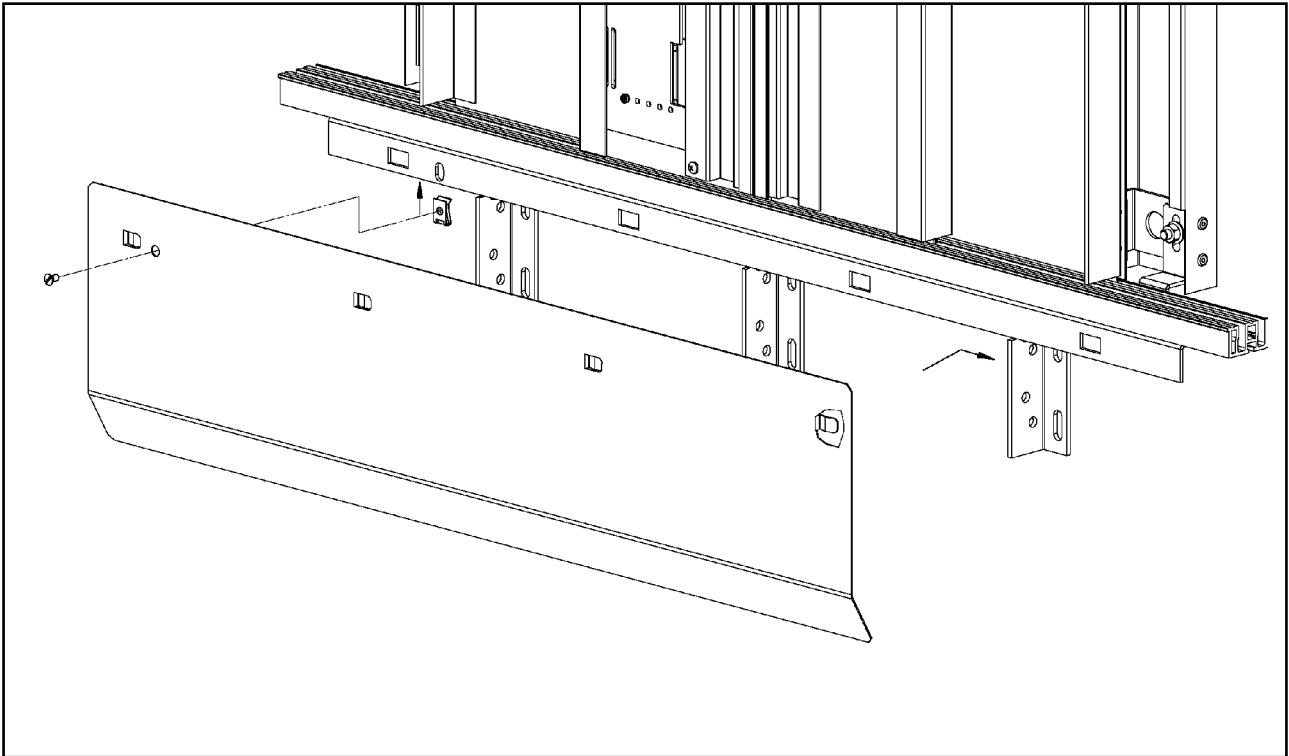


1.17 PLACING THE MECHANISMS ON THE THRESHOLDS

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

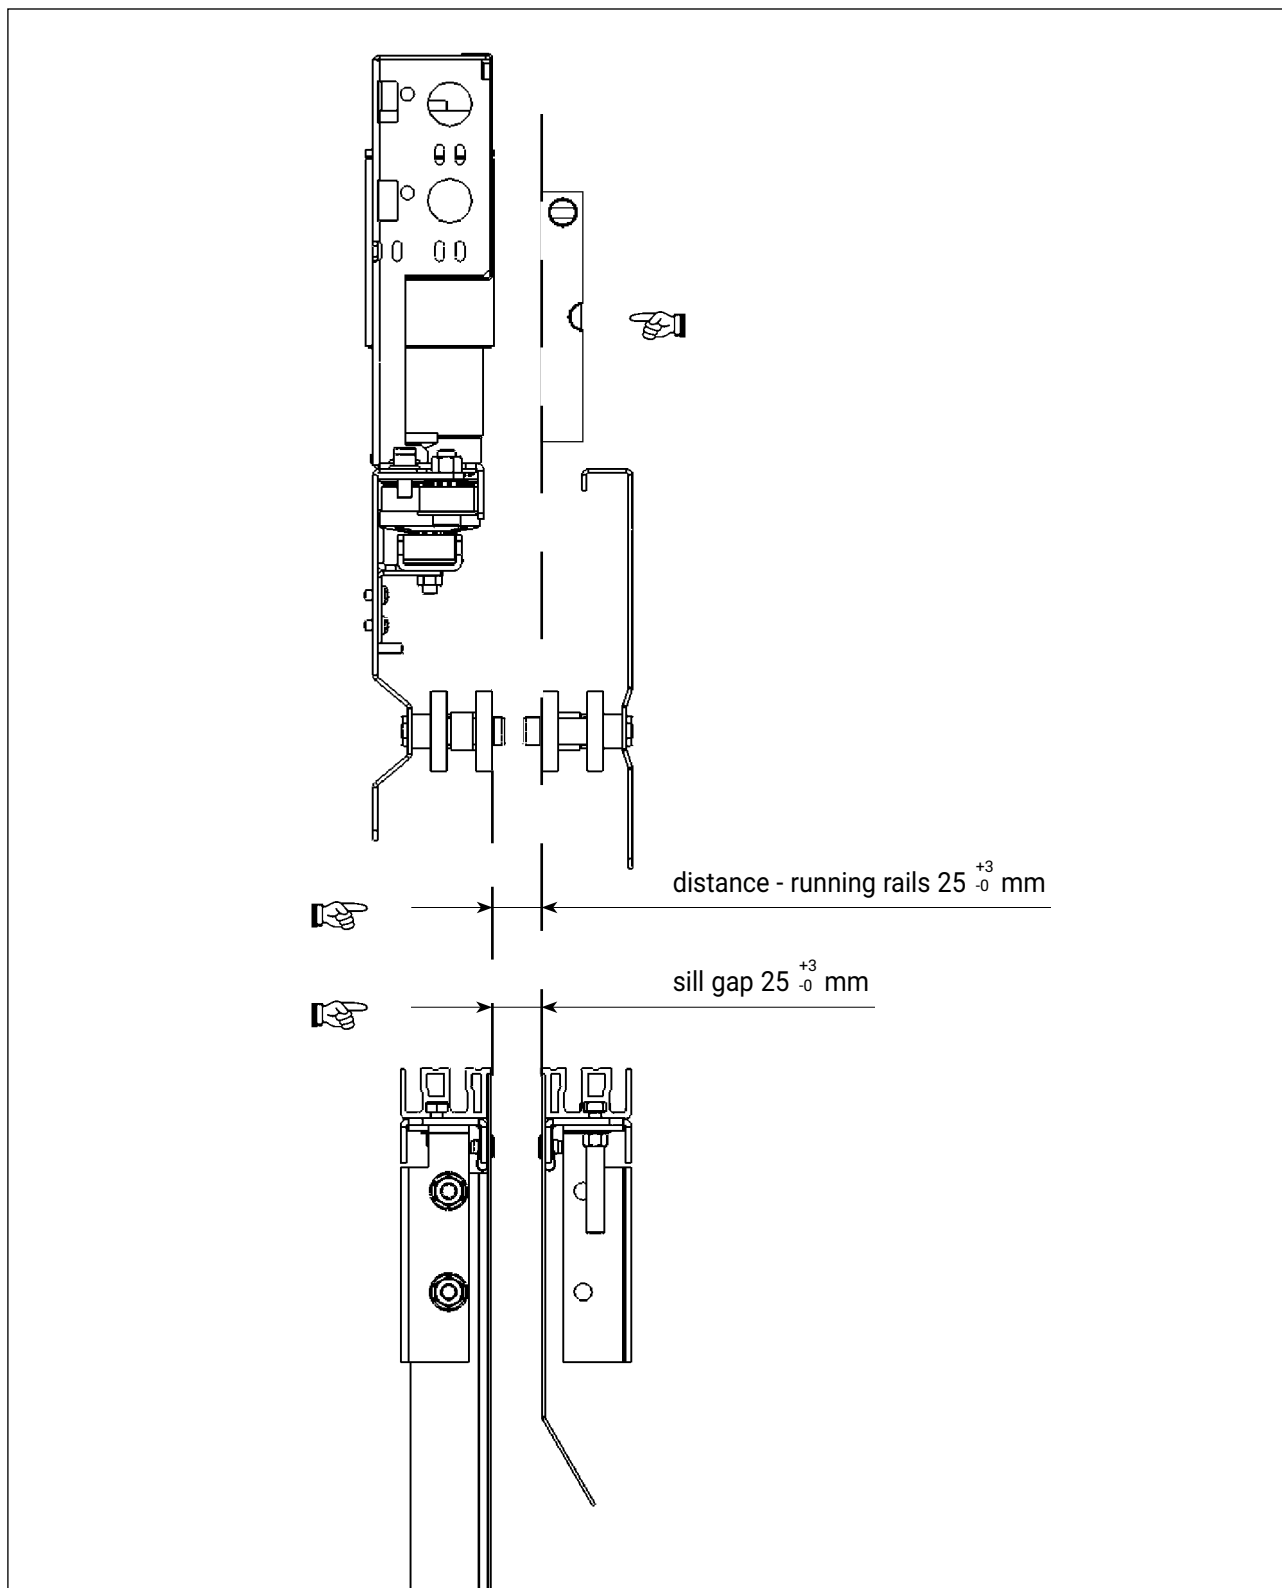


1.18 ASSEMBLY OF THE PANEL BUFFERS

Ty 01/C


Ty 4S

Ty 4AS

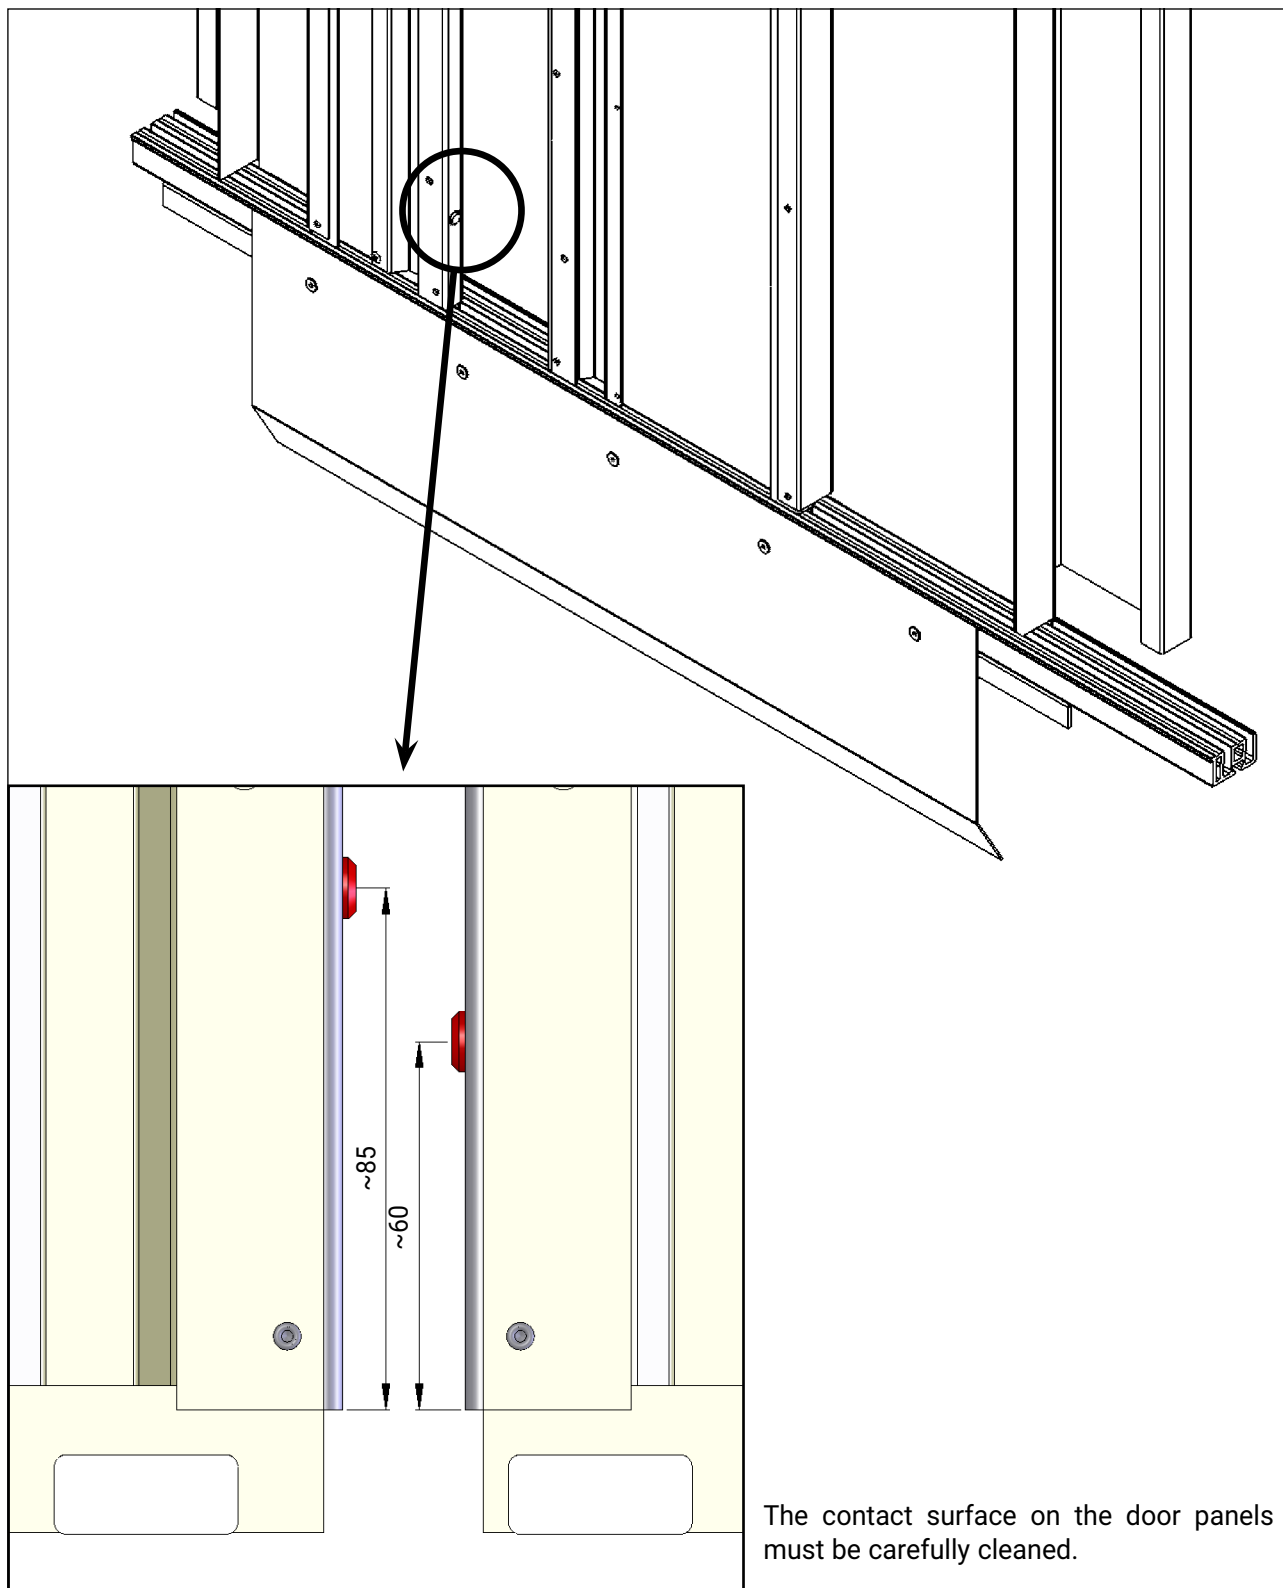

1.18.1 Assembly of the panel buffers


Ty 11/R-L

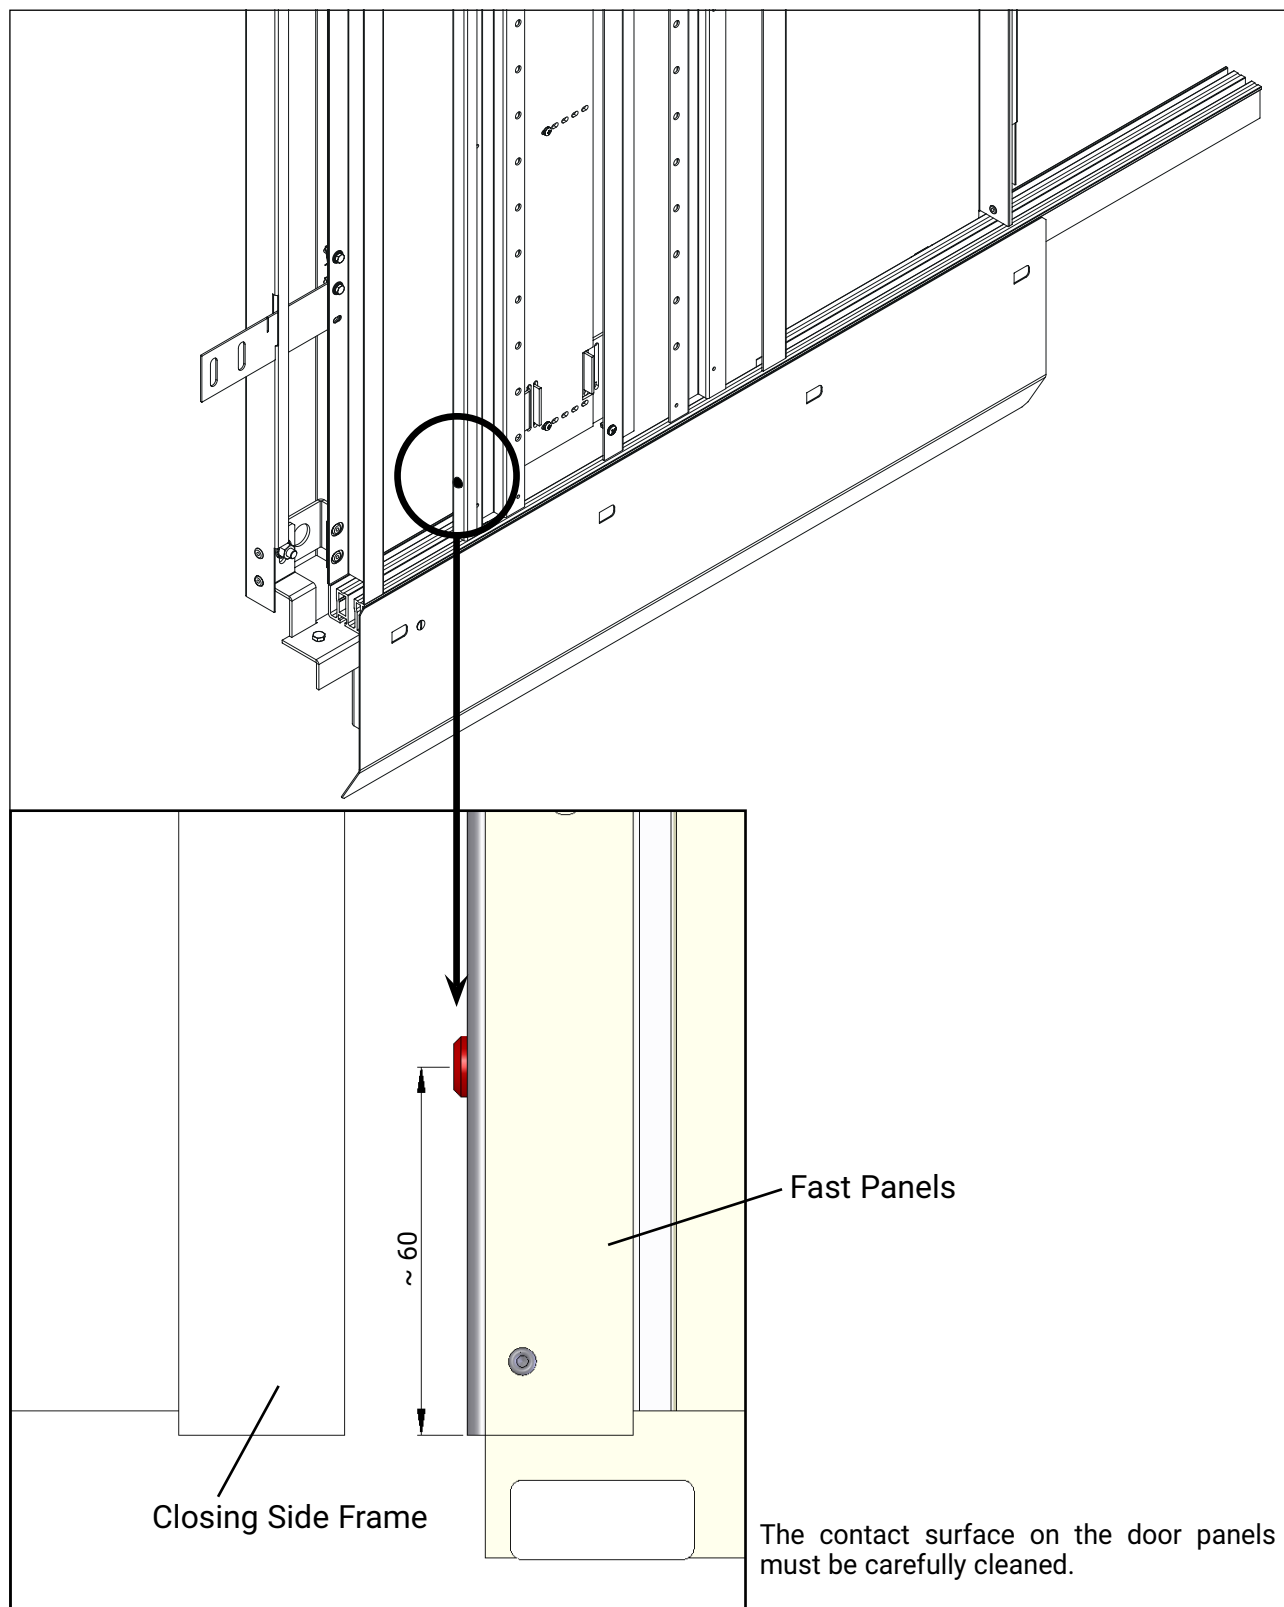

Ty 4AS

1.19 ASSEMBLY OF THE LINTEL



1.19.1 Asymmetric Landing door Lintel

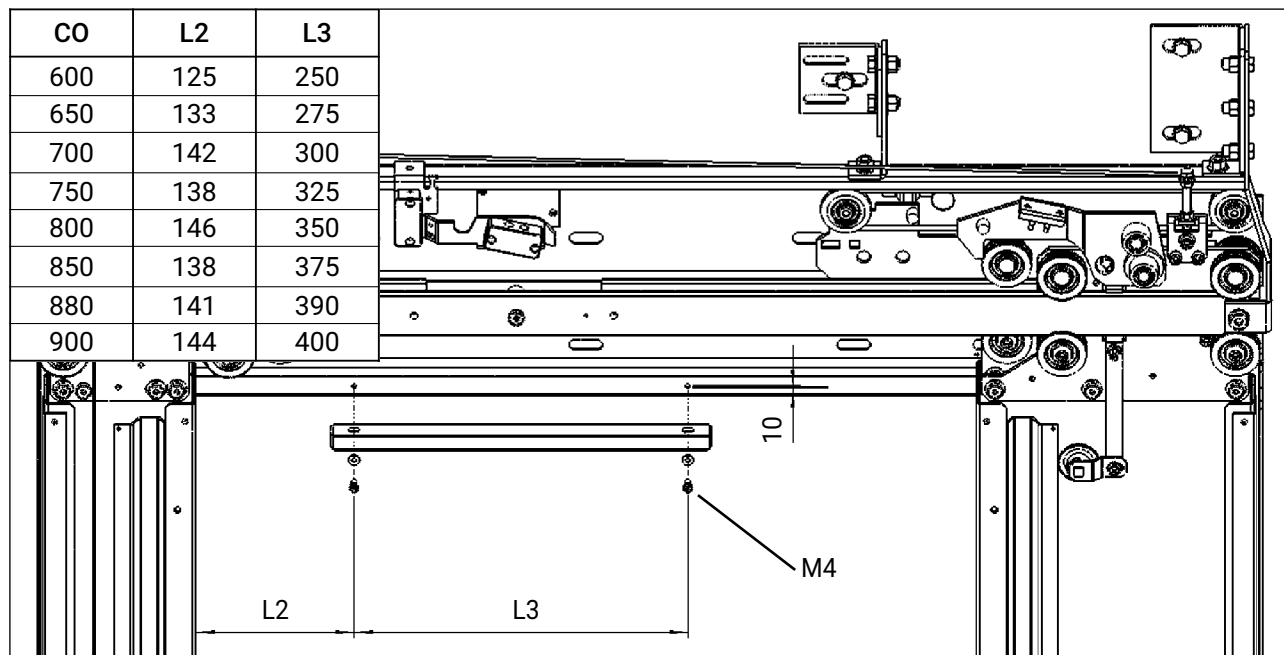

INSTRUCTION HANDBOOK LANDING DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 62.161

 1.19.2 Symmetric Landing door Lintel

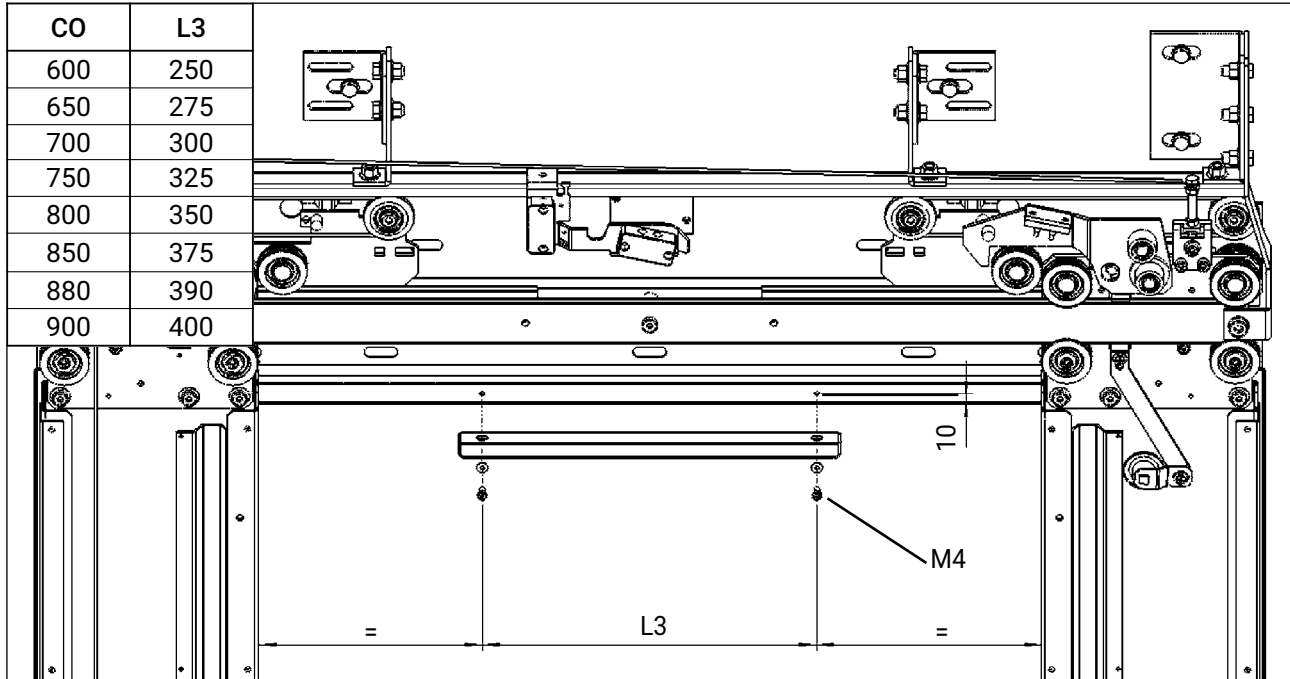


INSTRUCTION HANDBOOK LANDING DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 63.161

Ty 11/R-L

1.19.3 Side opening Landing door Lintel

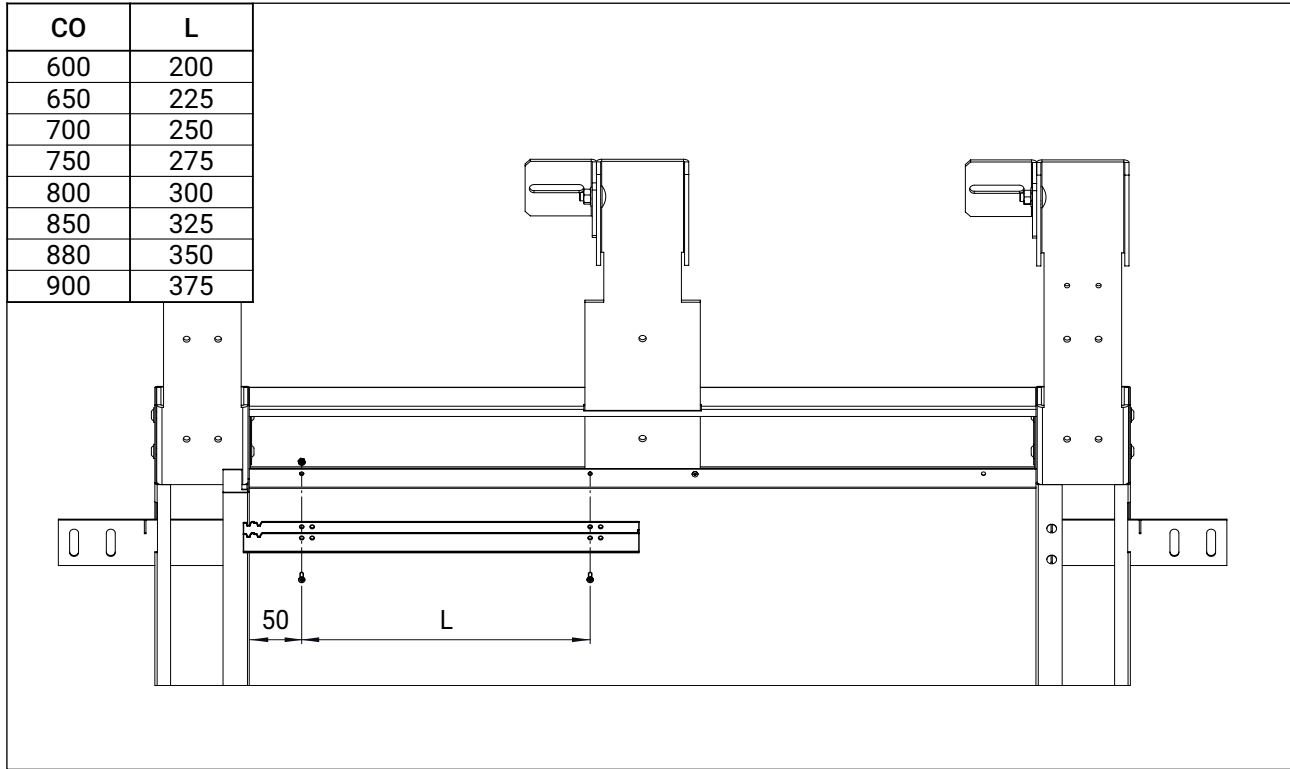


1.20 DOOR CONTACT CABLE

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

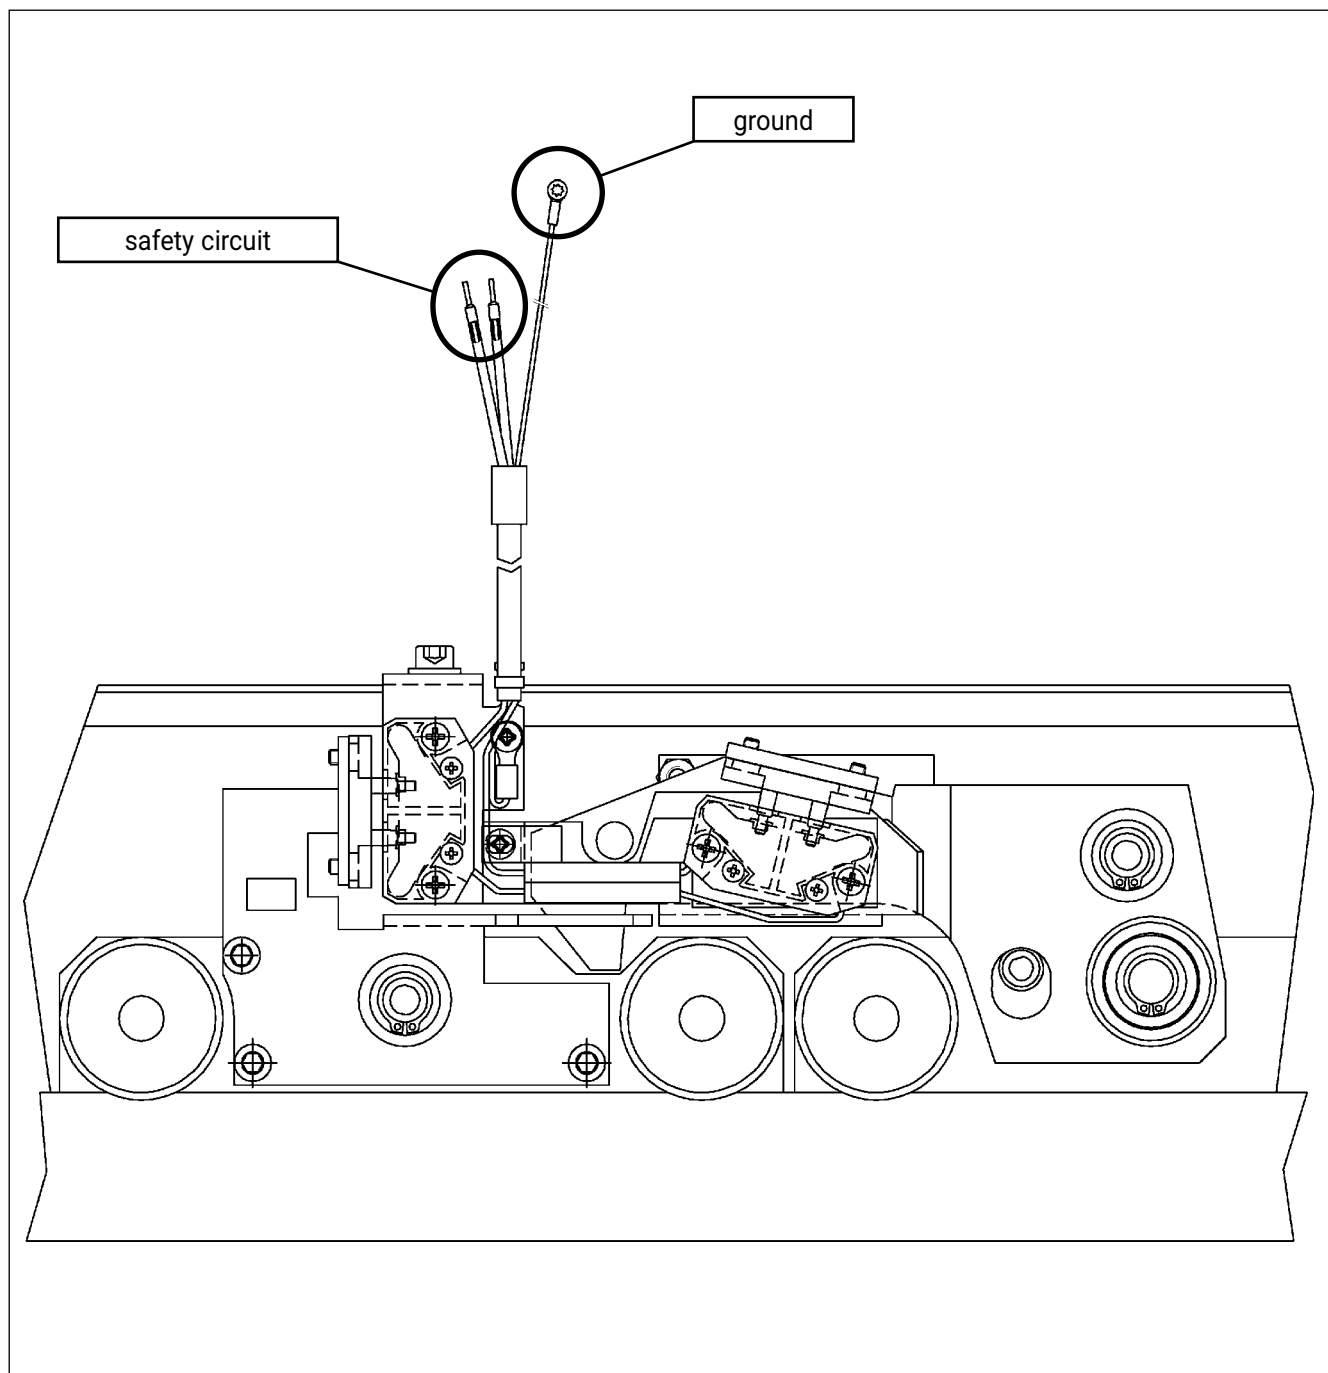

1.21 INSTRUCTION ON HOW TO KEEP THE DOORS IN GOOD OPERATING CONDITIONS



To prevent failure or malfunction and keep the system efficient, it is necessary to regularly check for technical degradation and ensure that the conditions required by current regulations are maintained.



After ending the door assembly the running surfaces of the running rails and the guiding - and counter roller has to be cleaned.

Degradation can depend on a variety of factors, such as:

- Work intensity
- Age of product
- Volume of panels
- Weather and environmental conditions (xx)
- Cleanliness of the room
- Correct maintenance
- Etc.


And may involve:

- Play/interference between the panels and between panels and jambs in accordance with current regulations
- Play in coupling device
- State/condition of fixing and coupling elements
- Condition of parts subject to wear
- Efficiency of lock and associated contacts
- Anything else that may be affected by the type of application.

For these reasons, the schedule for part replacement cannot be set beforehand.

1.22 TESTING THE FUNCTIONS

1.22.1 Landing door lock

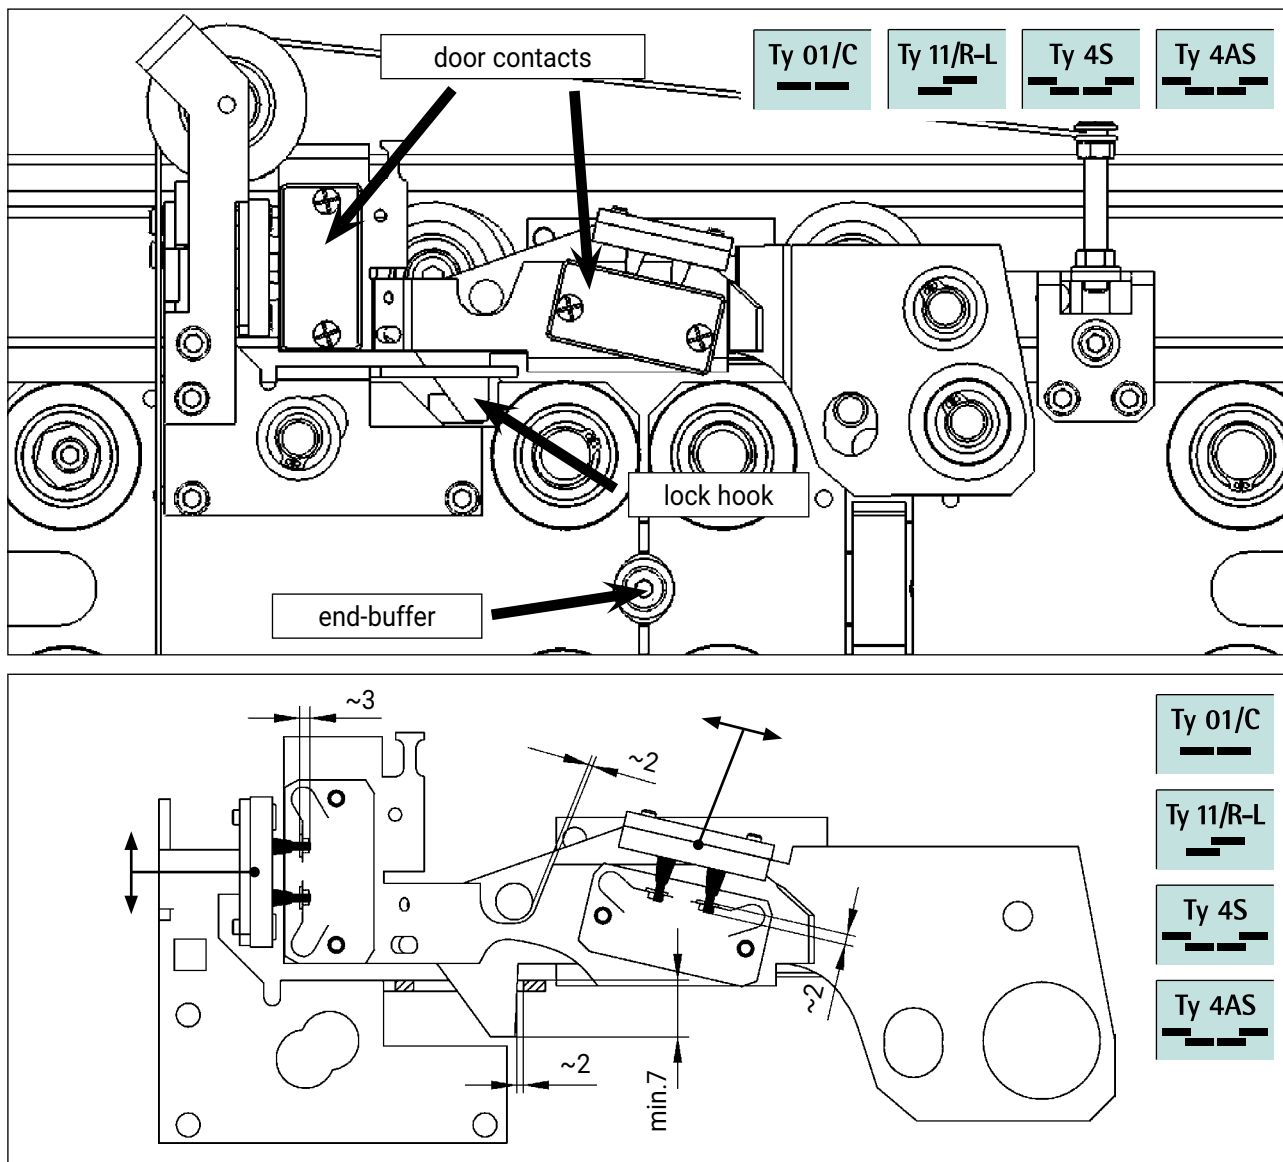

Check landing lock


- Both hanger plates must touch end-puffer in close end;
- Mechanical overlap between lock hook and lock notch must be min. 7mm when electrical close indicated.

Contact bridges must fit properly into the door contact

- Contact bridges can be adjusted (see picture).


1.22.2 Door gap

Check the gap between the door panels, between frame and door panel and the gap to the lintel.

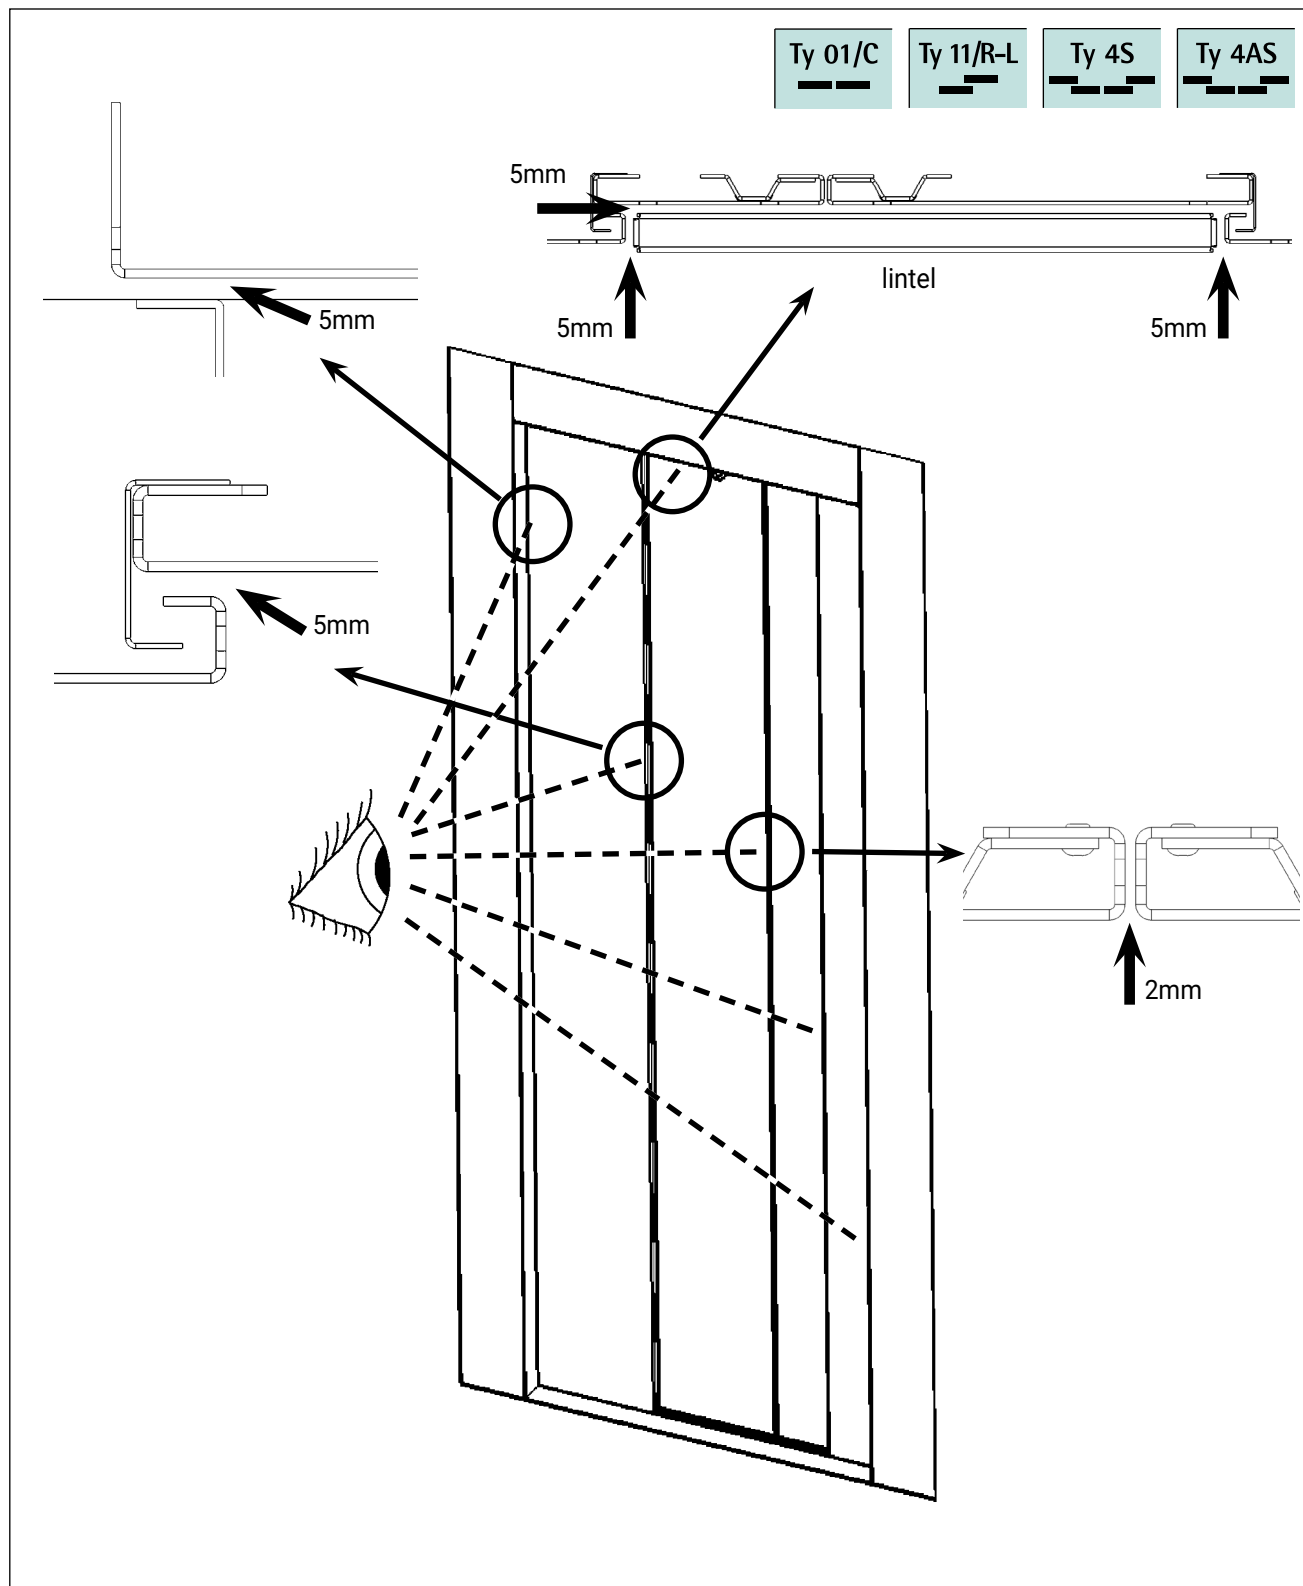


1.22.3 Emergency closing

The door must close itself automatically from each position.

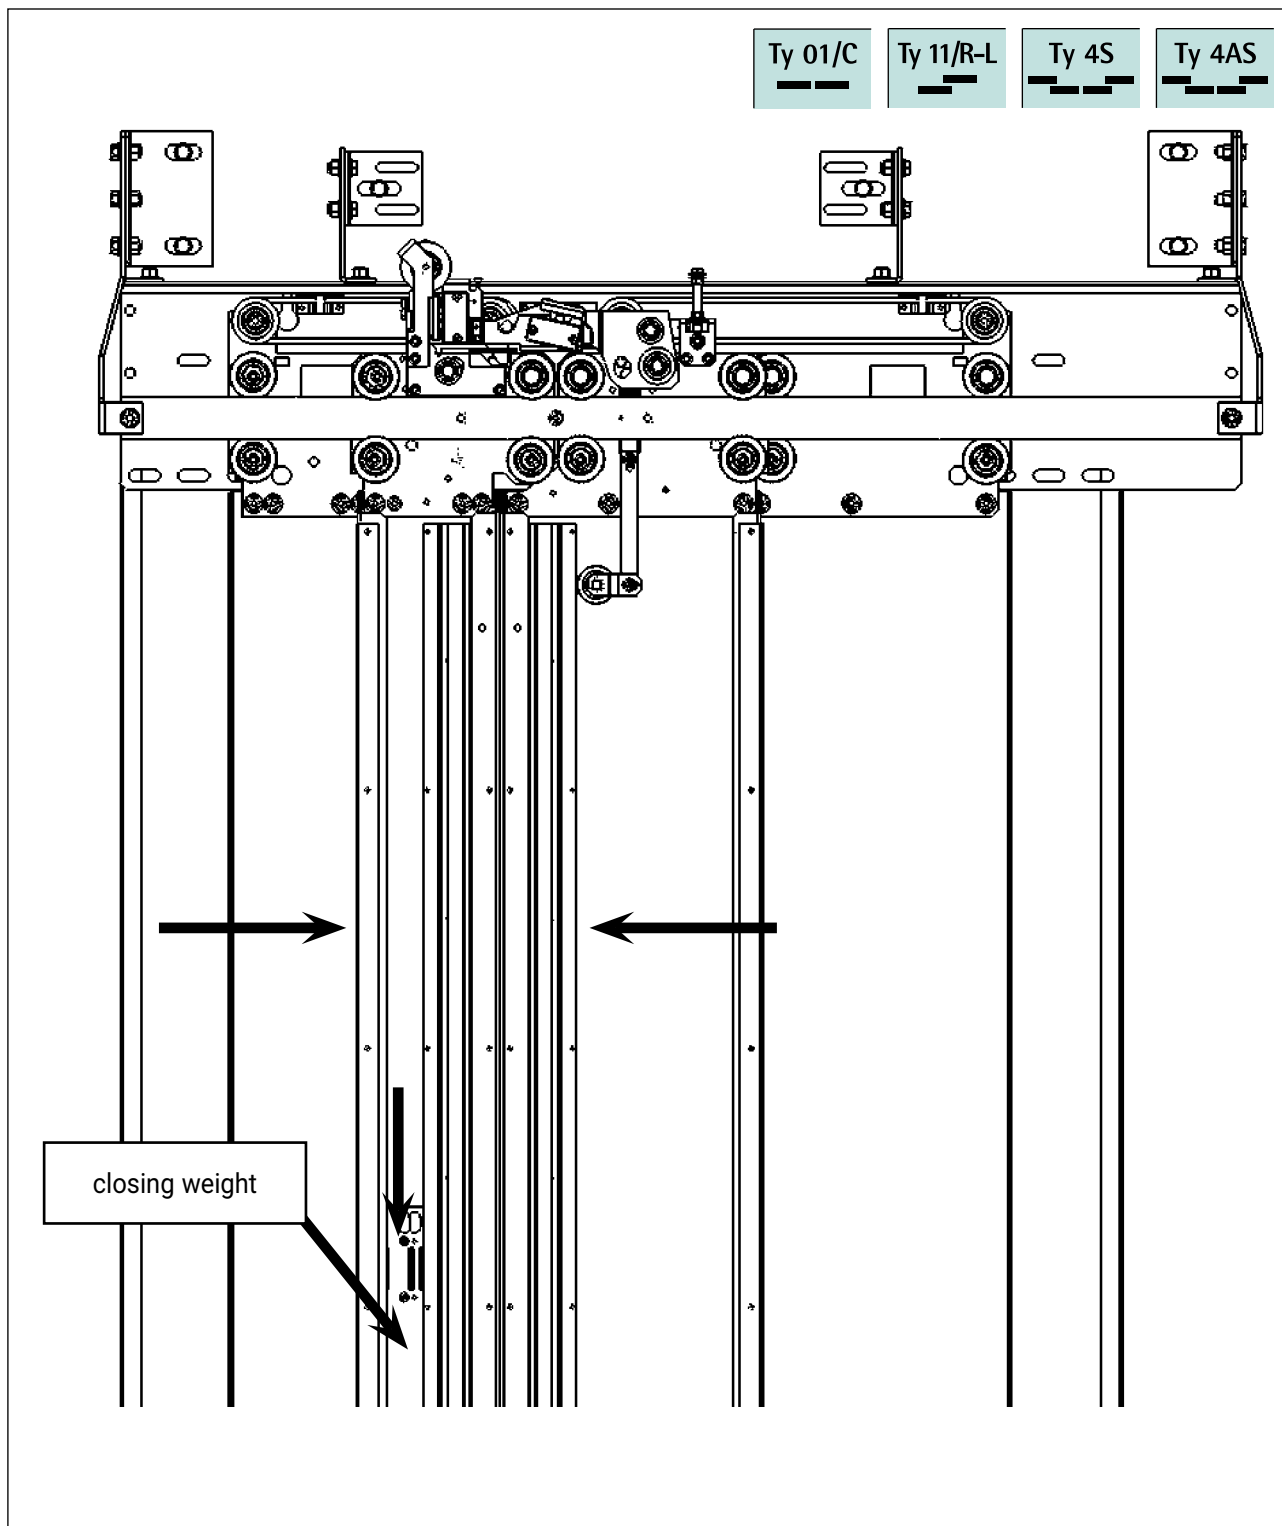

1.22.4 Emergency opening contact

Emergency opening contact must be opened before the door get unlocked by the landing lock.

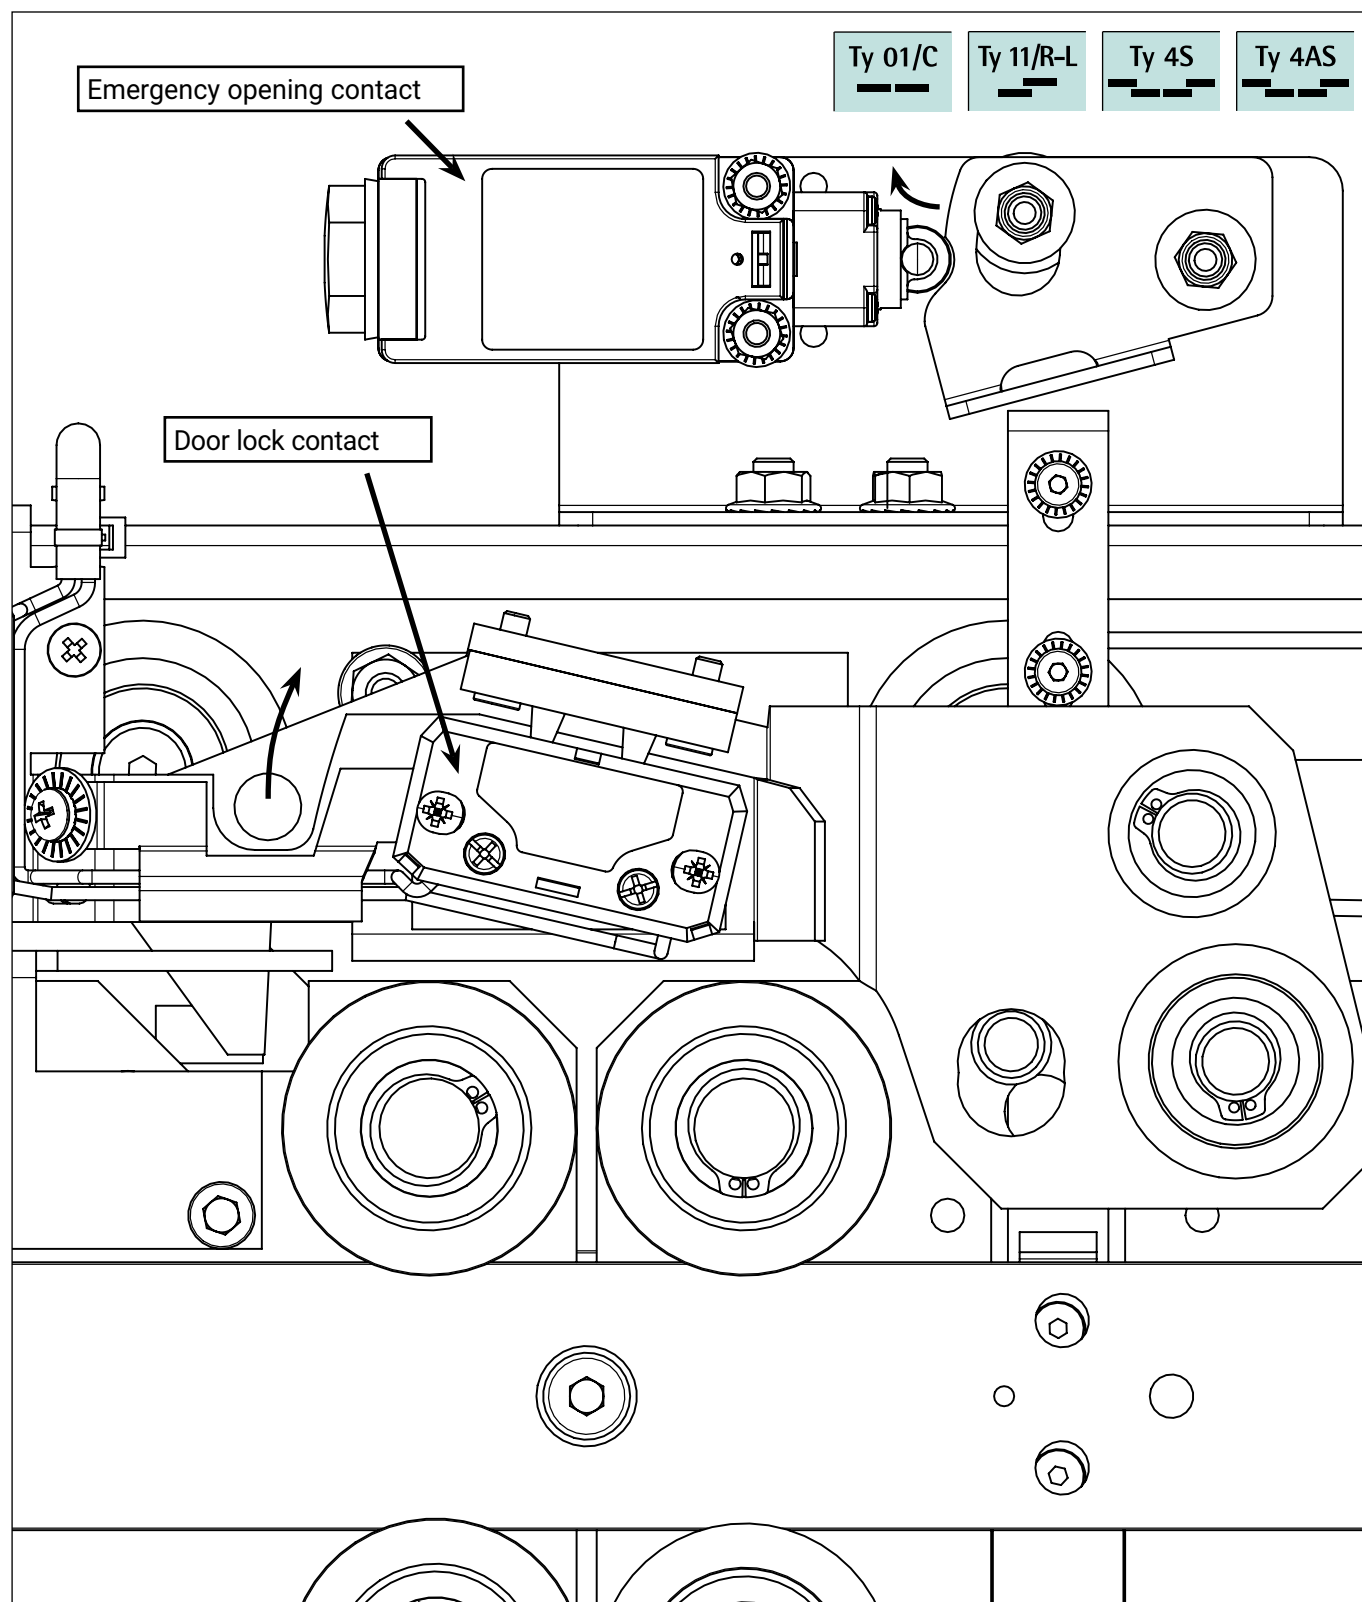

2. MAINTENANCE



2.1 REPLACEMENT OF THE SLIDING SHOES

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

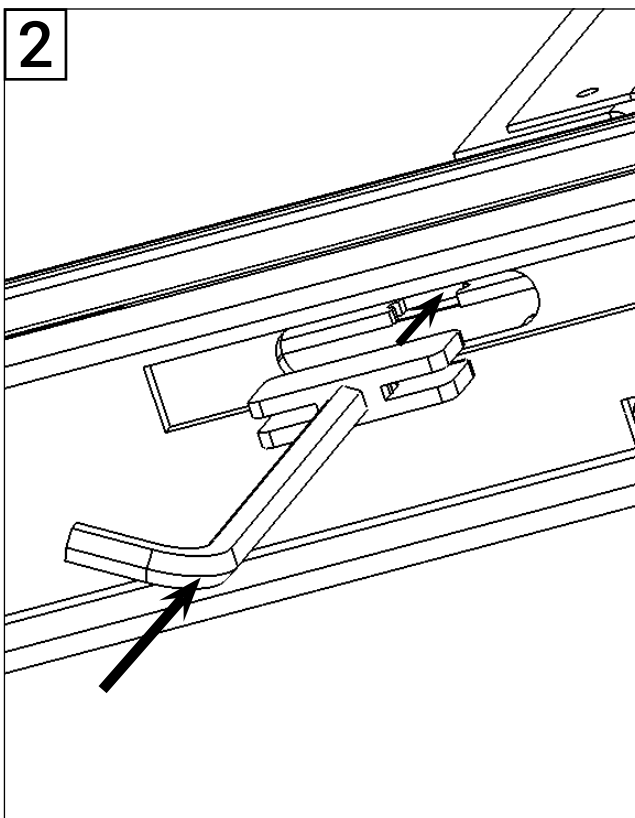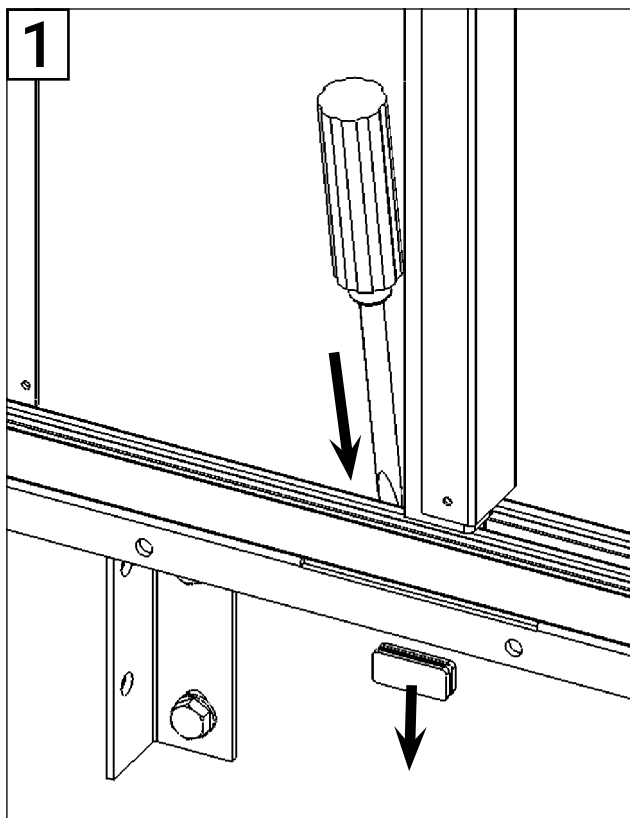

Check failures, break or abrasion.


2.2 REPLACEMENT OF THE ROLLER


Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

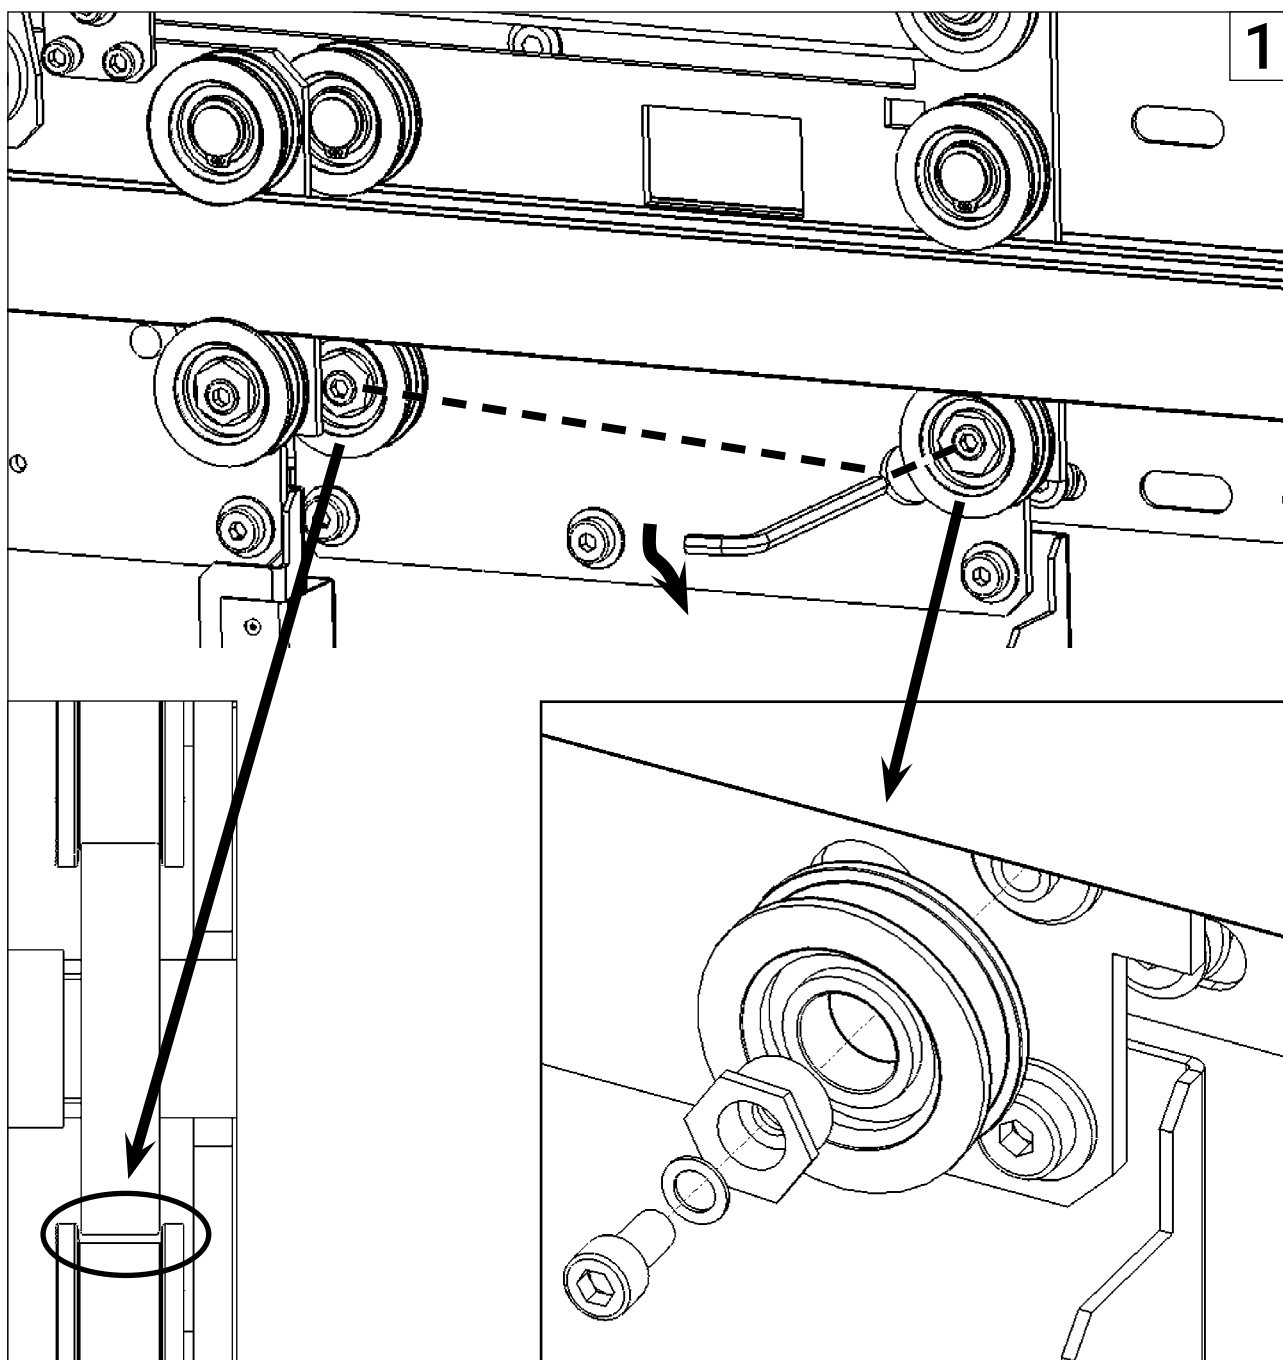

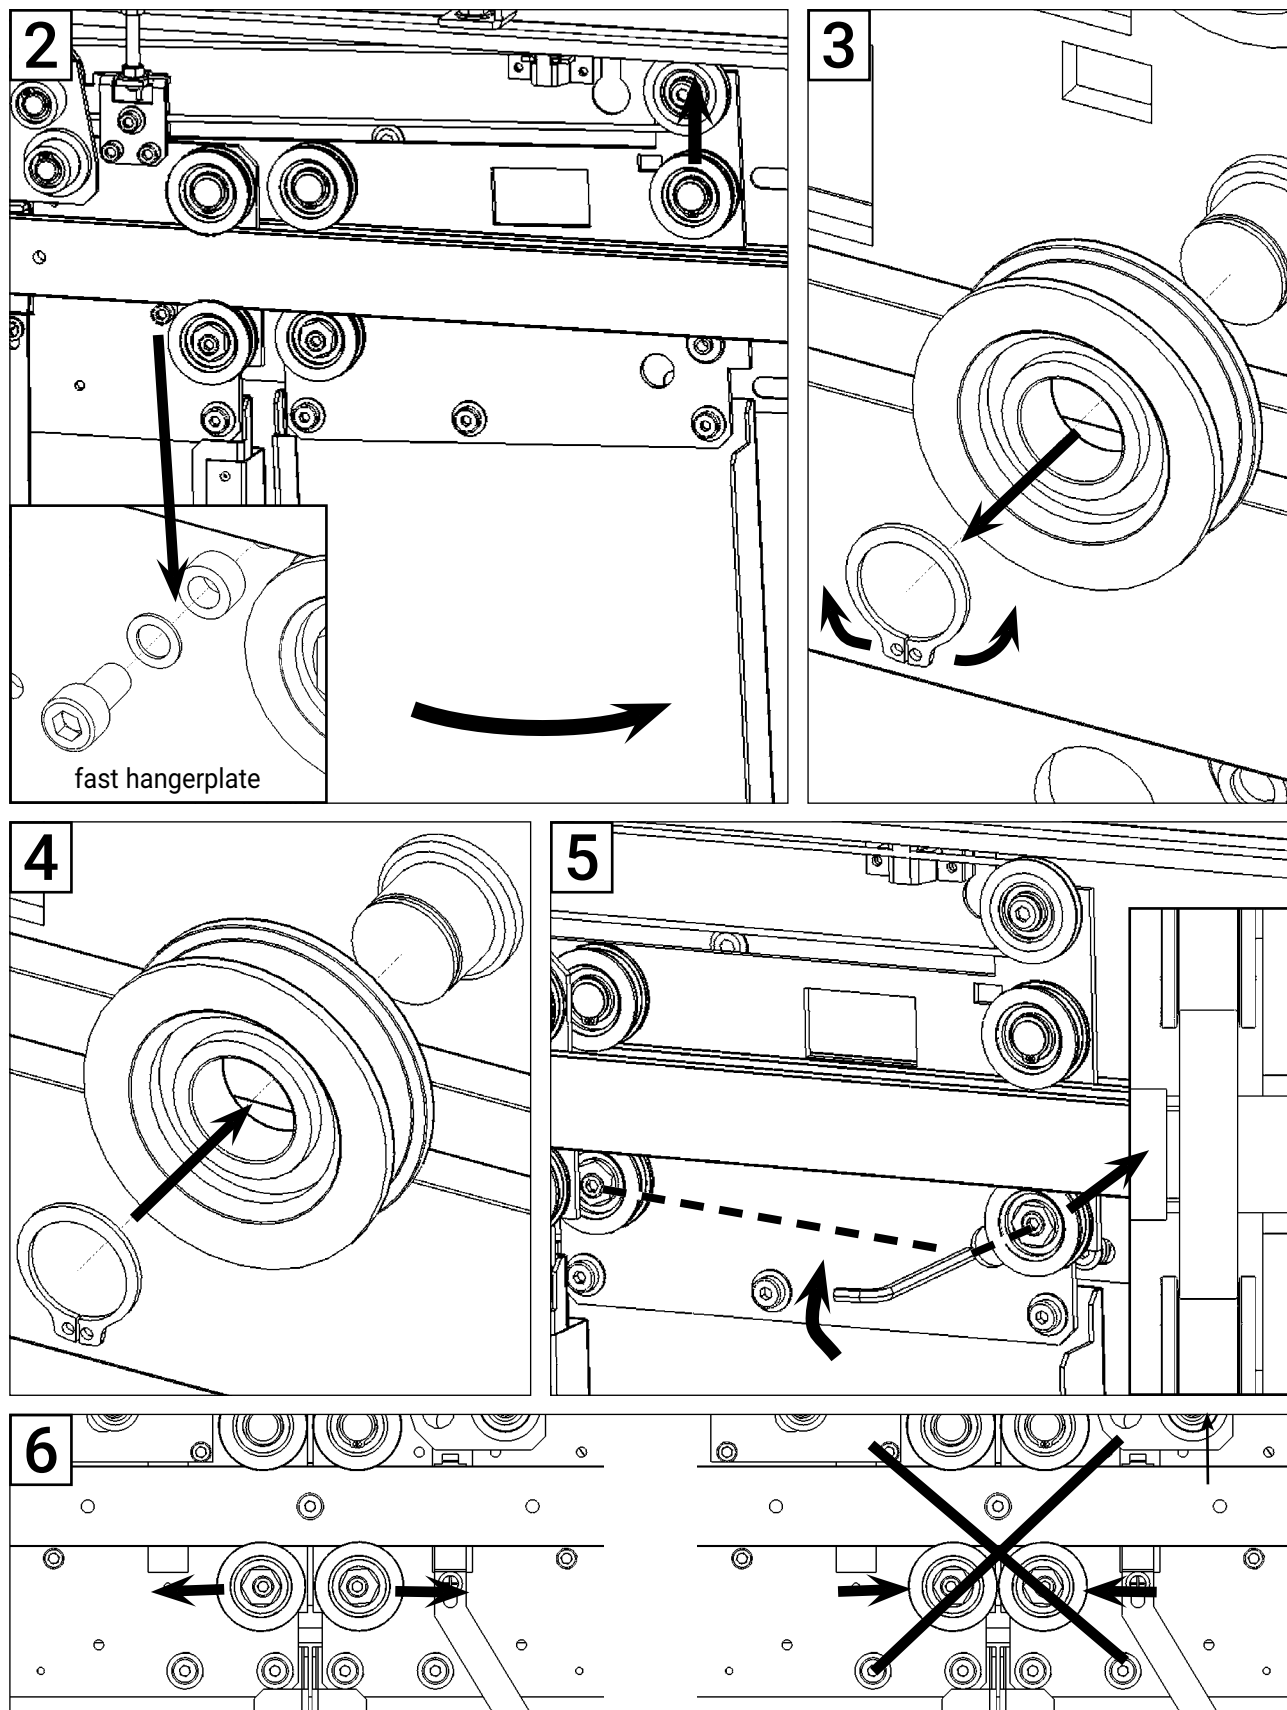

2.3 REPLACEMENT OF THE SYNCHRONISATION ROPE


Ty 11/R-L

Ty 4S

Ty 4AS

2.3.1 Removing the synchronisation rope

Relax the rope pulley (1) and the rope fixing (2), then remove the rope actuator (3). To remove the rope it is necessary to relax the headless pin in the rope actuator.

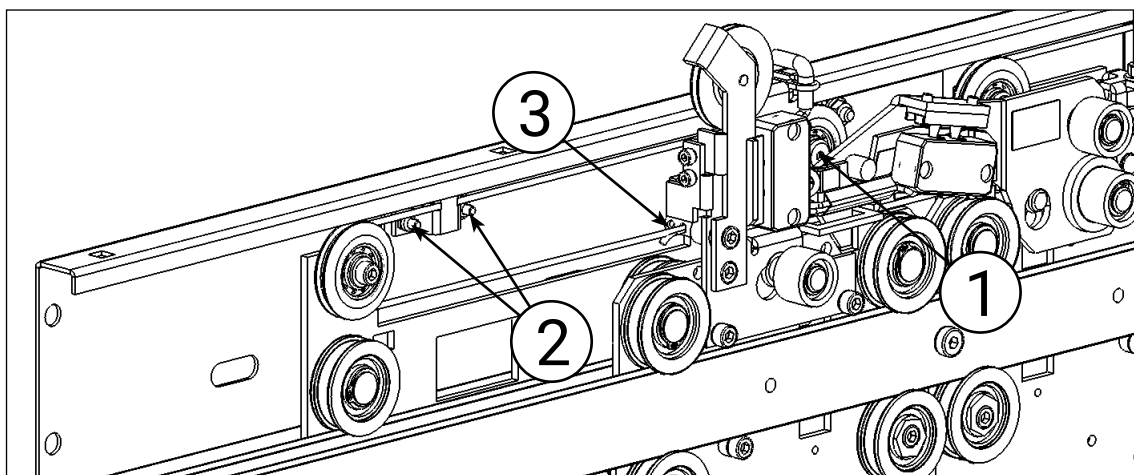


Ty 11/R-L

Ty 4S


Ty 4AS

2.3.2 Synchronisation rope assembly

Mount the synchronisation rope on the rope pulleys (1) and arrange it through the rope fixing (2).

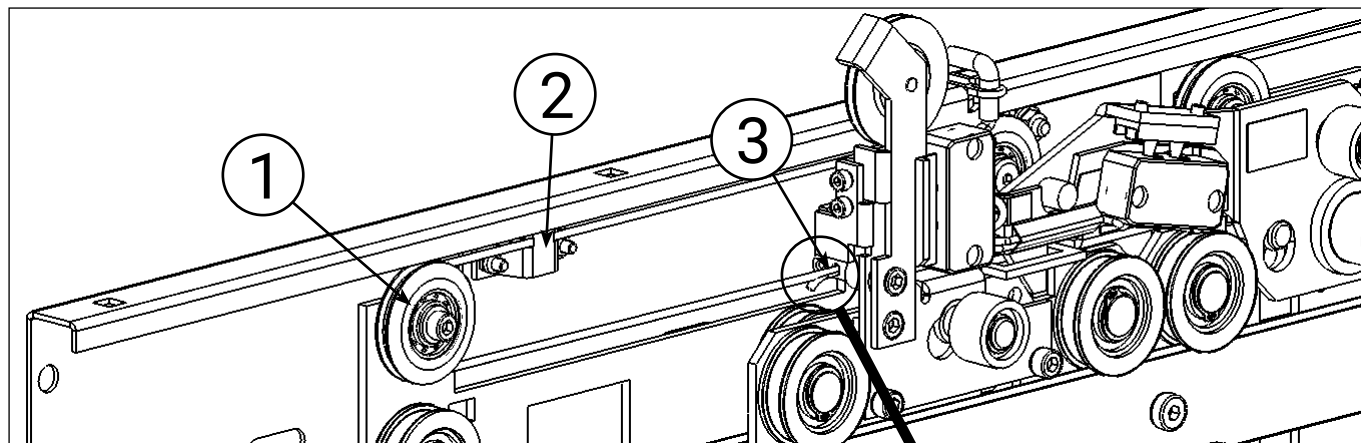

Adjust the rope endings in the rope actuator (3) so that when the door is open the end of the rope is bending down and it doesn't contact the rope pulley. Then fix the rope endings with the headless pin (4) and mount the rope actuator.

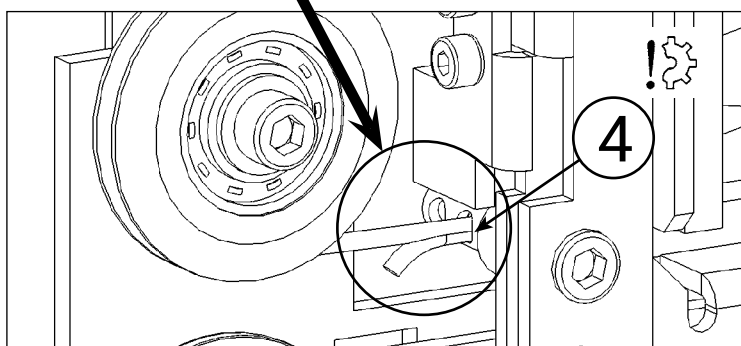


Ty 11/R-L

Ty 4S

Ty 4AS

2.3.3 Clamping the synchronisation rope

Clamp the inner rope pulley with the screw driver (1) and fix the hexagon screw (2).

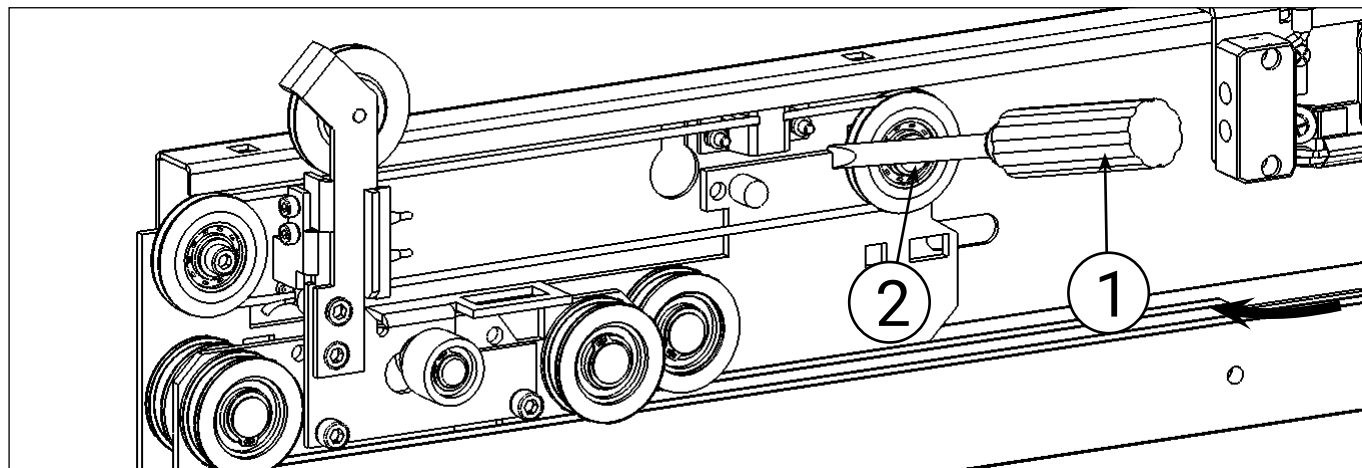


Ty 11/R-L

Ty 4S

Ty 4AS

2.3.4 Synchronizing the door

Open the door as far as the outer edge of the hanger plate has a distance to the mechanism of 12mm. Then fix the rope fixing (3).

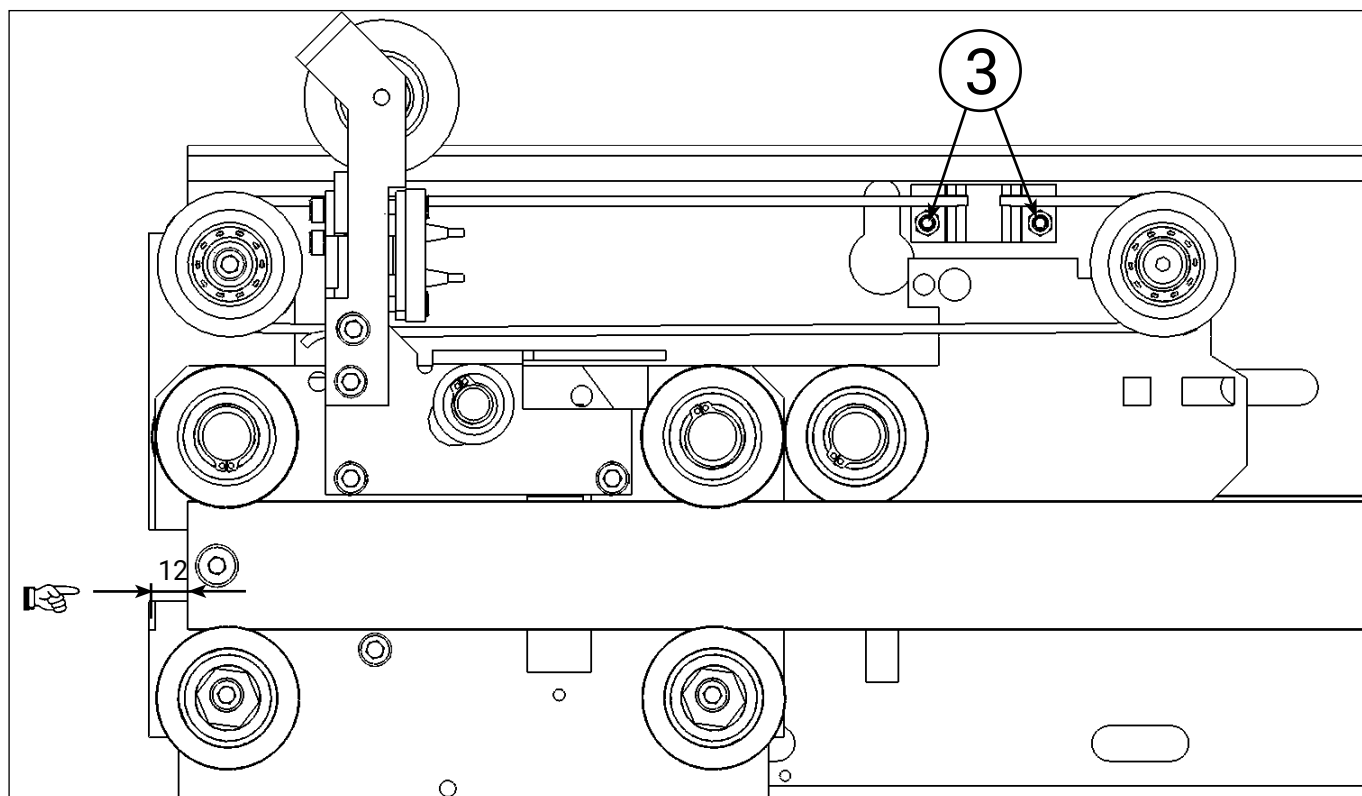

2.4 CHECKING THE LOCKING DEVICE


Ty 01/C

Ty 11/R-L


Ty 4S

Ty 4AS

2.4.1 Lock hook locking device


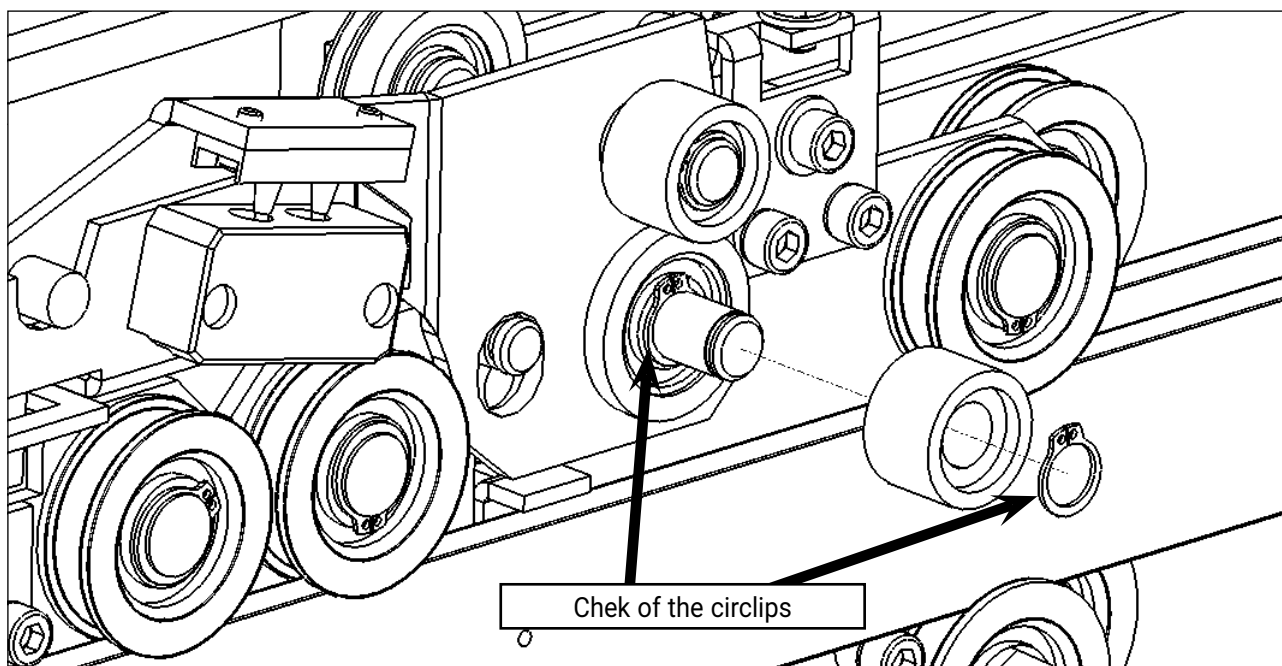


2.4.2 Synchronisation rope


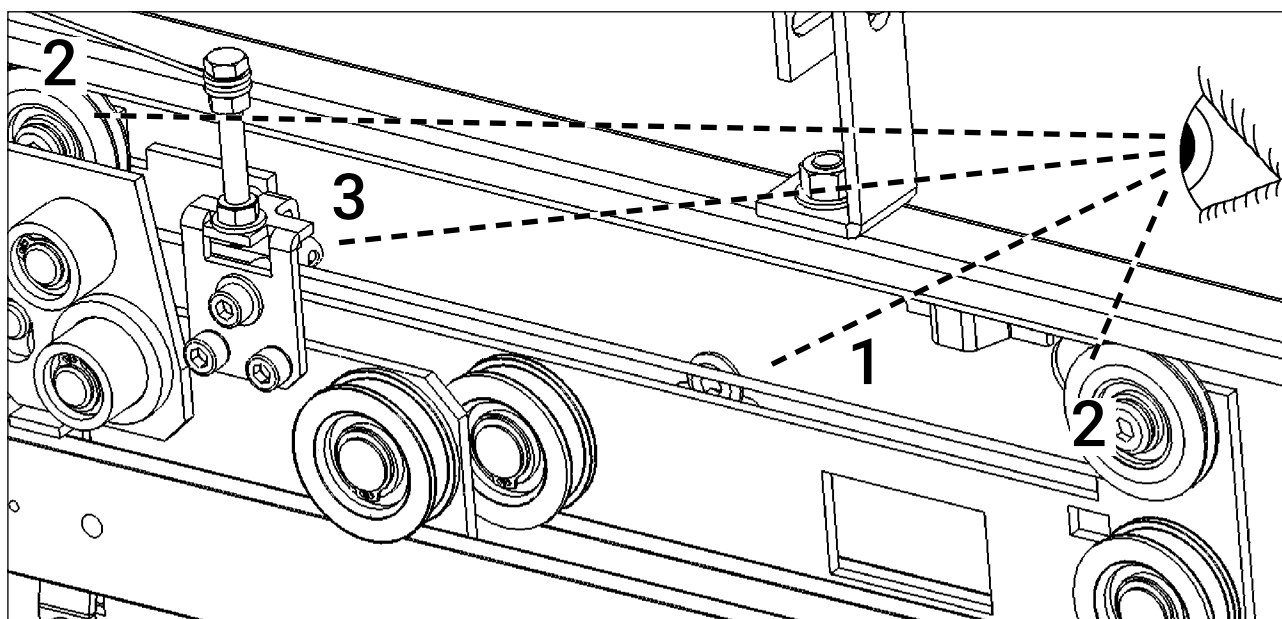


Visual inspection of the synchronisation rope (1), the synchronisation roller (2) and the rope fixing bracket (3).

2.4.3 Emergency drive

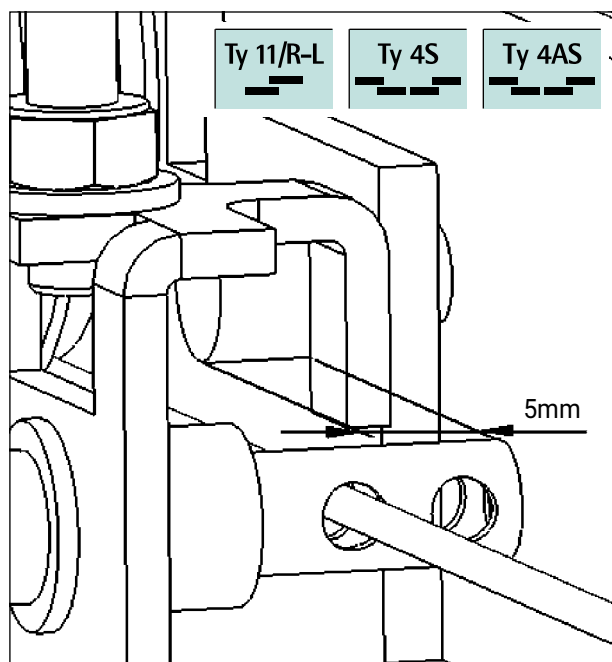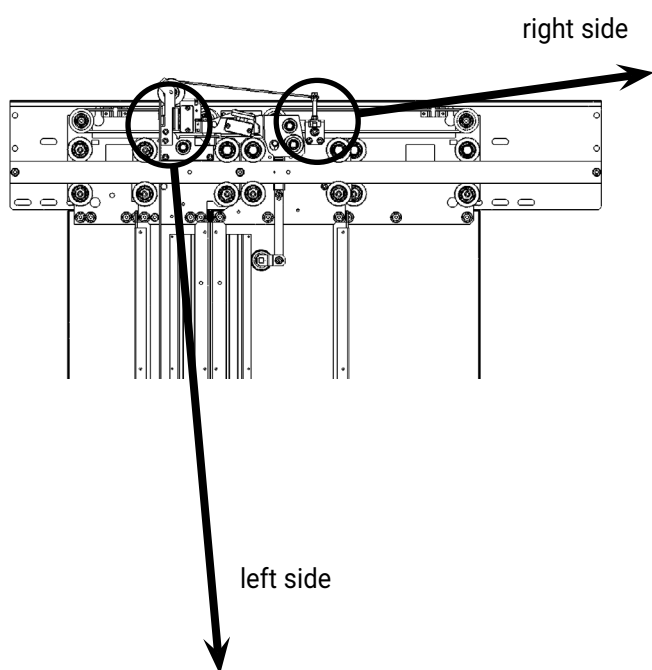

Measurement of the overlap of the emergency hook.

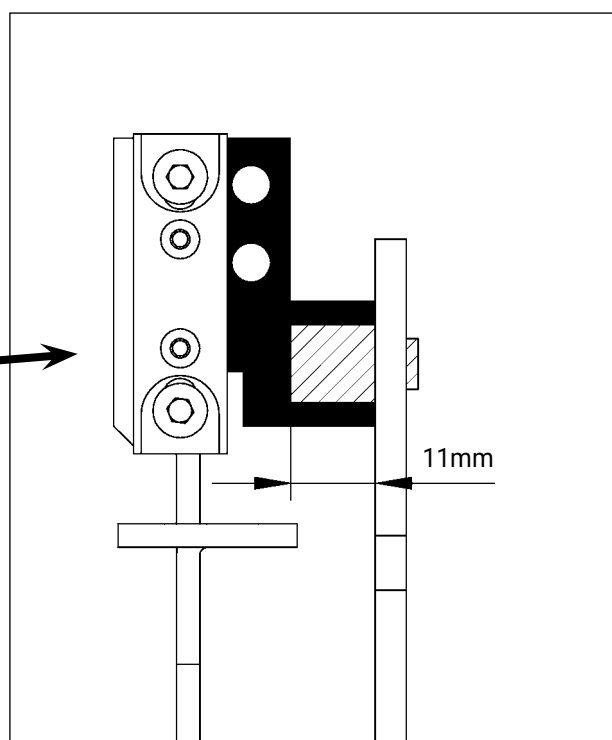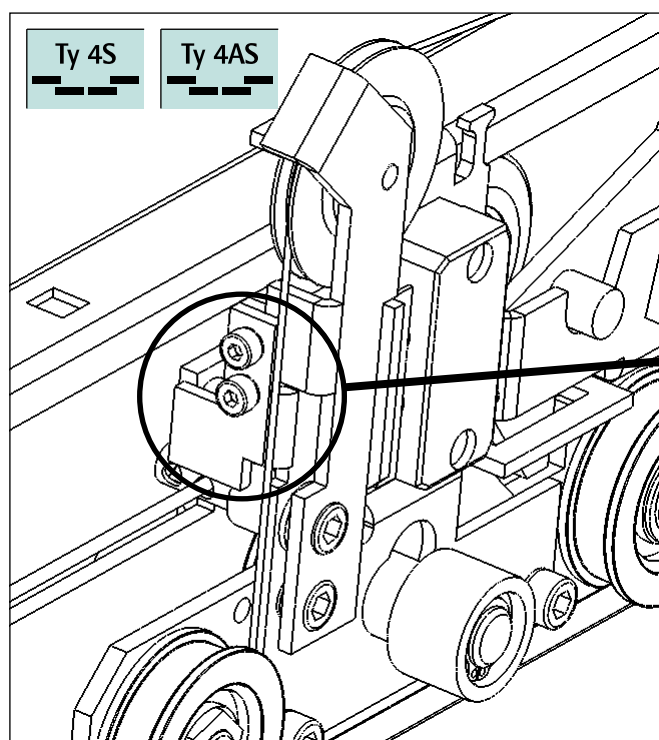

2.4.4 Hanger plate guiding

Ty 01/C


Ty 11/R-L

Ty 4S


Ty 4AS

Visual inspection of the roller on following characteristics:
break, crack, abrasion, failure and correct insatallation.

Deposits and dirt on the running rail and rollers must be removed.

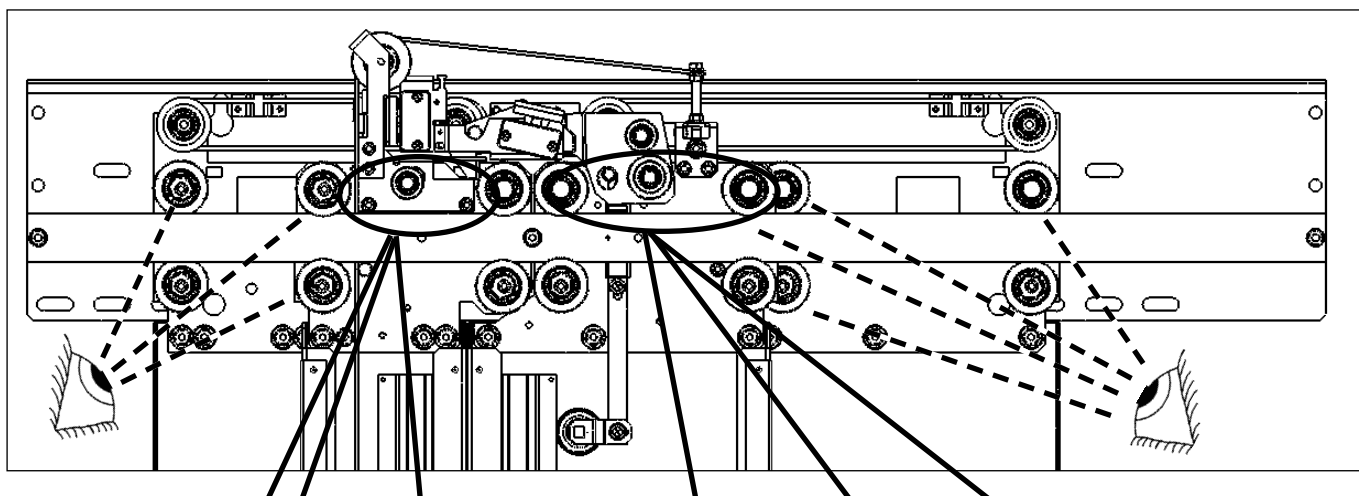

Visual inspection of the Emergency guiding on following characteristics:
break, failure and correct installation.

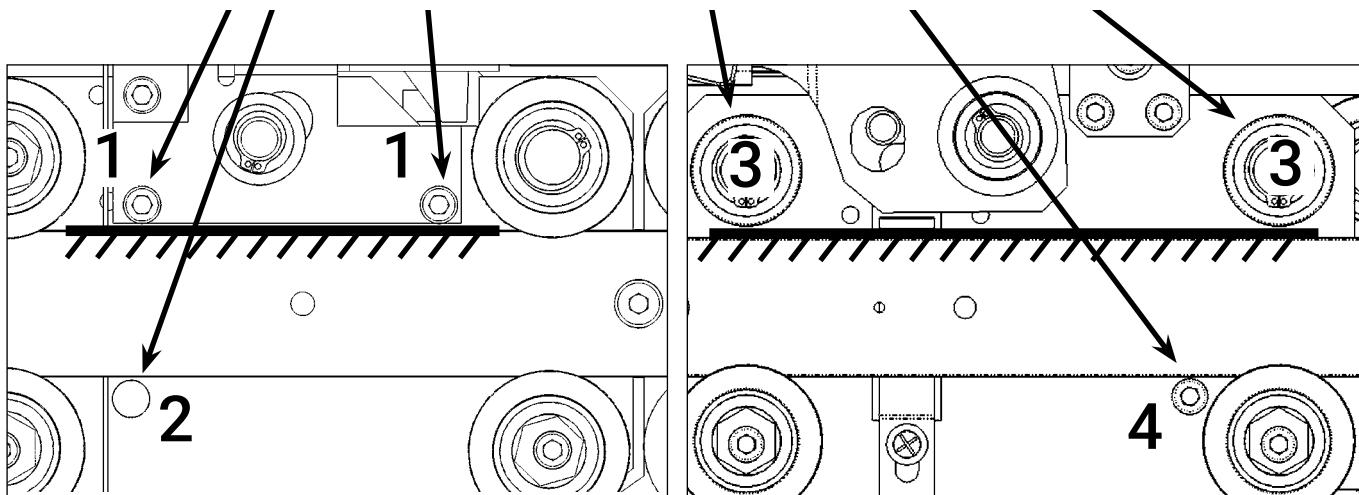

Emergency guiding left side: hexagon screw (1) and lift-out guard (2).

Emergency guiding right side: bushing (3) and lift-out guard (4).

2.4.5 Closing weight rope

Ty 01/C


Ty 11/R-L

Ty 4S

Ty 4AS

Visual inspection of the closing weight rope on following characteristics:
break, abrasion and correct installation

Function test of the emergency closing see paragraph 1.21.3.

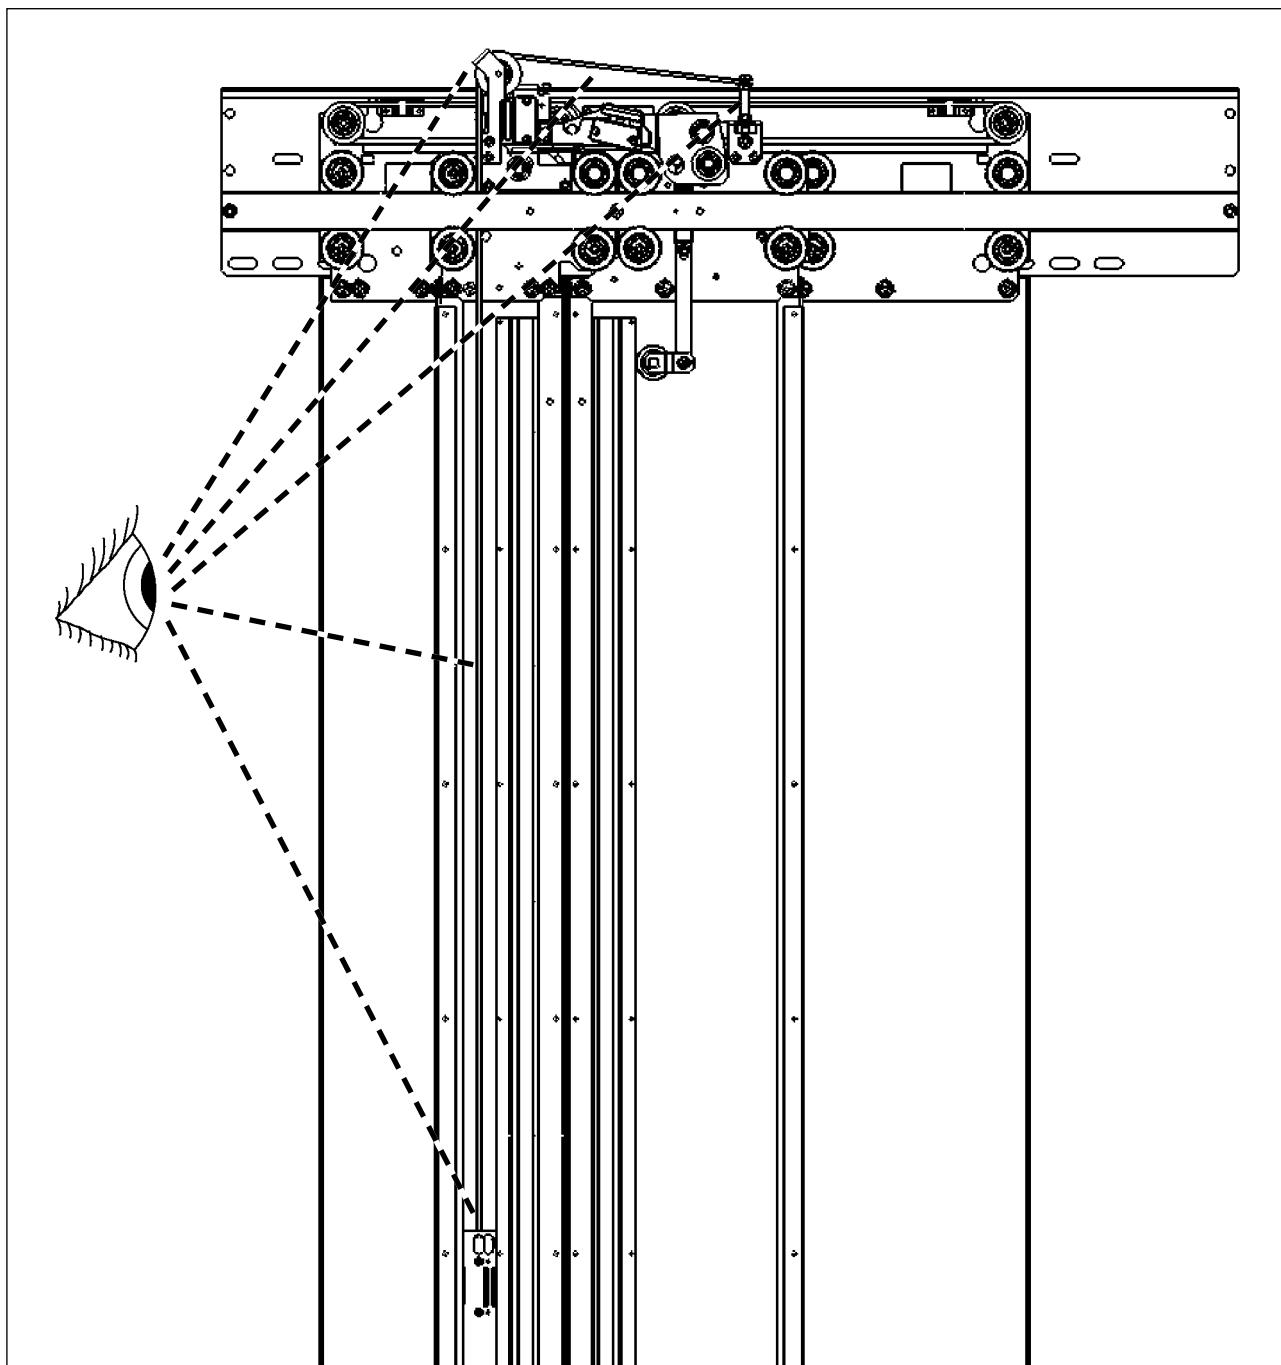

2.4.6 Emergency opening device

Ty 01/C


Ty 11/R-L

Ty 4S

Ty 4AS

Visual inspection of the closing weight rope on following characteristics:
completeness and correct installation.

Check the free movement with the emergency opening device key.

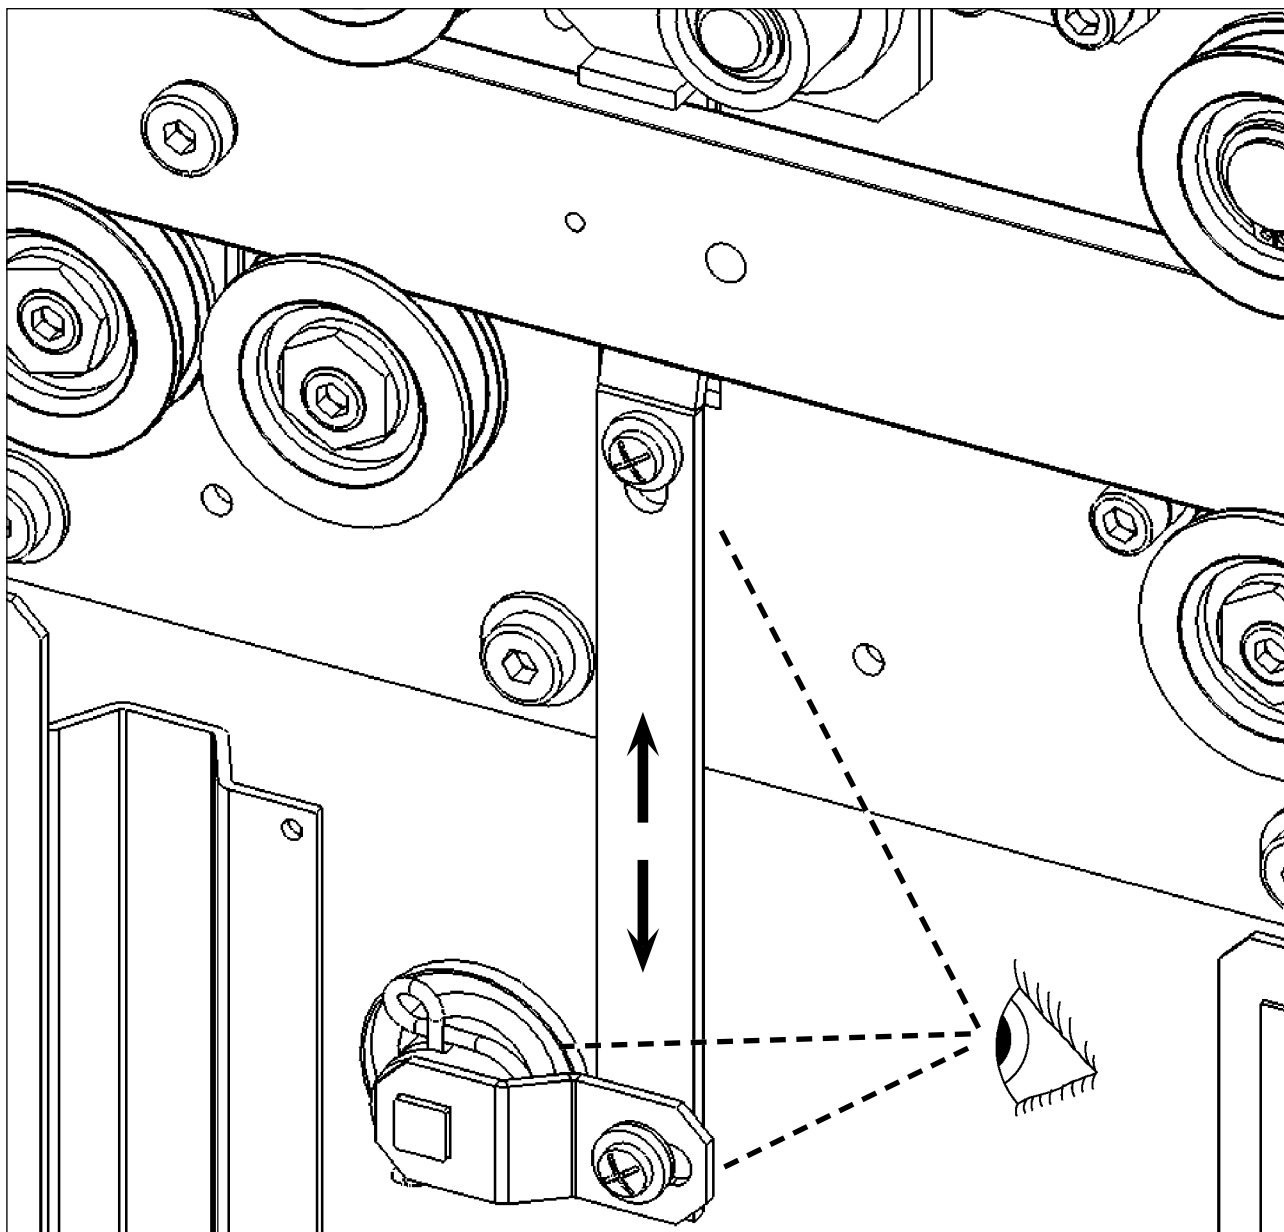

2.4.7 Testing the landing door lock

see paragraph 1.21.


2.5 TOP TRACK - AND PANEL FIXATION

Ty 01/C

Ty 11/R-L

Ty 4S

Ty 4AS

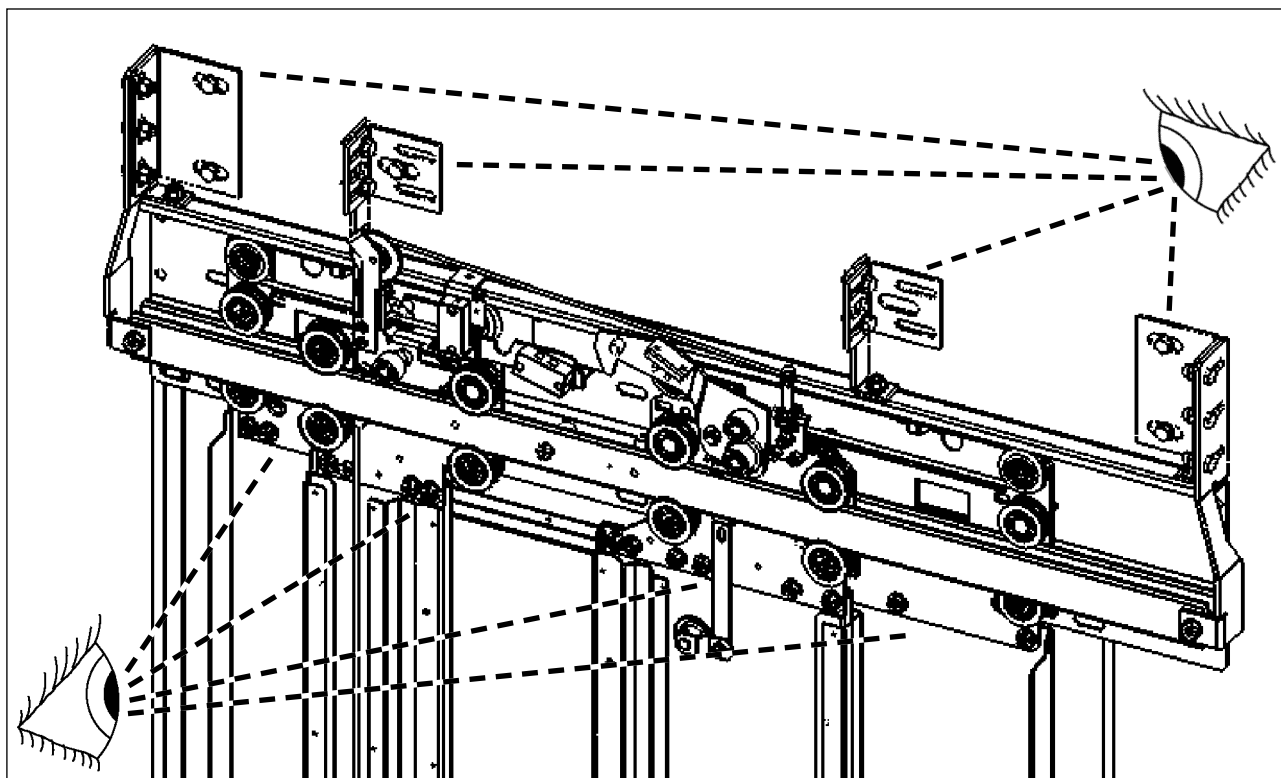

Visual inspection of the fixation on following characteristics:
break, failure and correct installation

2.6 CHECKING THE DOOR GAP

see paragraph 1.21.2.

INSTRUCTION HANDBOOK LANDING DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 81.161

WARNINGS ON HOW TO KEEP THE DOORS IN GOOD OPERATING CONDITIONS



In order to prevent failures or incorrect operation and to maintain the system in good conditions, the technical efficiency of the system should periodically be checked, to ensure compliance with the applicable laws.

The technical efficiency depends on various factors such as:

- Work load
- Years of operation
- Door weight
- Climatic and environmental conditions
- Cleanness of environment
- Correct maintenance
- Etc.

And it can affect:

- Clearance/interference between the doors, and between the doors and posts according to the applicable laws
- Clearance of coupling device
- Status/conditions of fixing and coupling elements
- Conditions of parts affected by wear
- Efficiency of the lock and relevant contacts
- Any other parts that may be affected by the type of application.

For these reasons it is not possible to establish a general part replacement programme beforehand.




All screws used for the assembly of our product are screwed by means of a tightening torque as shown on following table:

Screw	Max torque (Nm)	Min torque (Nm)
M3	1,1	0,9
M4	2,6	2,1
M5	5,1	4,1
M6	9	7
M8	21	17
M10	42	34
M12	71,4	57,1

In case of need please refer to above table.

CAR DOOR

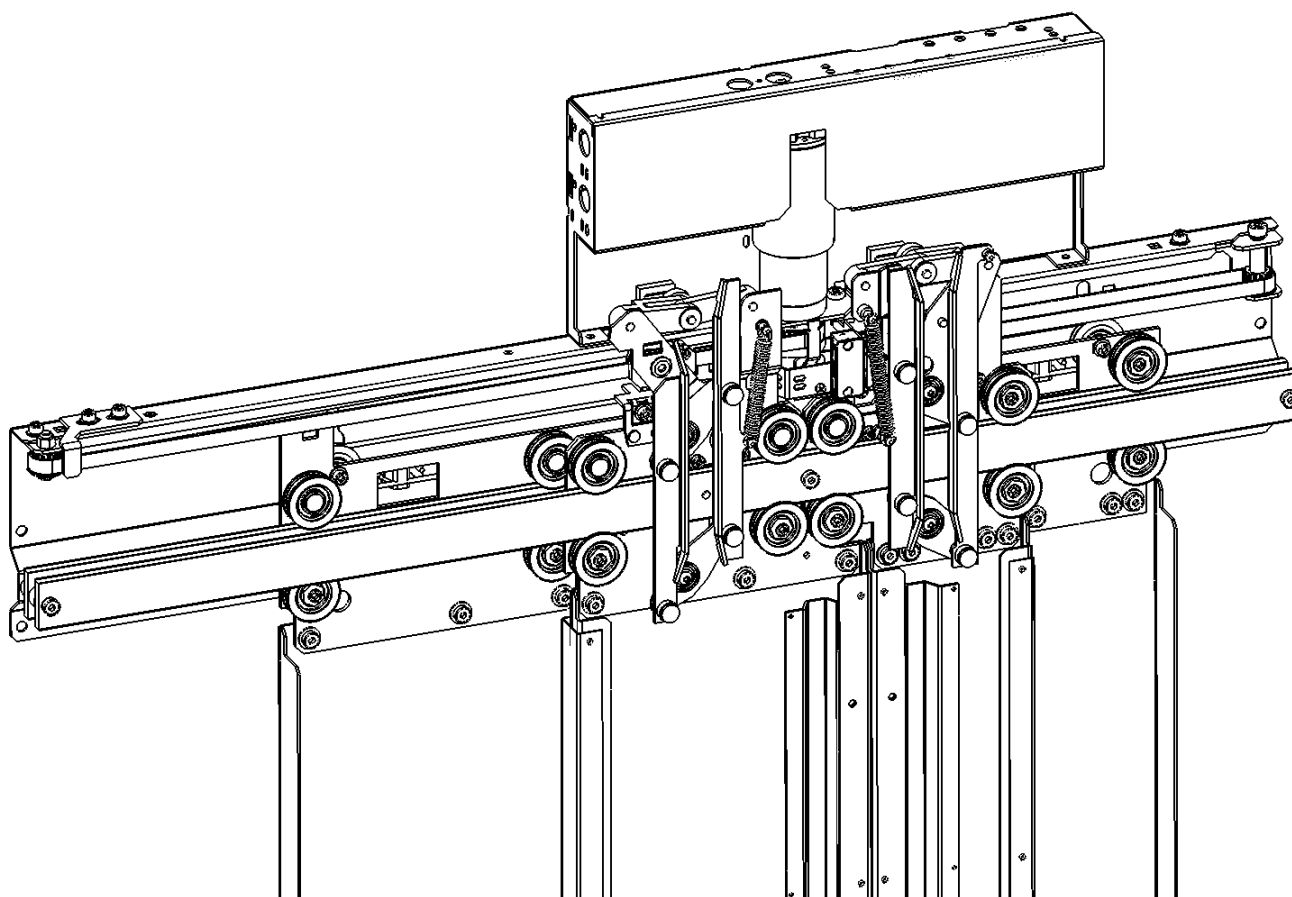

Mod. INDEX

Warnings on how to keep the doors in good operating conditions	Pag. 81
Symbols used	Pag. 84
Foreword and Warnings	Pag. 85
Suggestions, Installation tools and Delivery	Pag. 86
1. Installation	Pag. 87
1.1 General description: TY 4AS, TY 4S	Pag. 87
1.2 General description: TY 02/C, TY 12/R-L	Pag. 88
1.3 Car door alignment with landing door	Pag. 89
1.4 Identification	Pag. 91
1.5 Assembly of the sill	Pag. 92
1.6 Assembly of the operator	Pag. 95
1.7 Door panels' assembly	Pag. 100
1.8 Toe guard assembling	Pag. 105
1.9 Placing the mechanisms on the thresholds	Pag. 106
1.10 Assembly of the panel buffers	Pag. 107
1.11 Assembly of the infillplate	Pag. 109
1.12 Assembly of the light sensor system	Pag. 111
1.13 Assembly of the panel- and sill extension	Pag. 114
1.14 Coupler with car door lock	Pag. 115
1.15 Emergency opening device for coupler with car door lock	Pag. 116
1.16 Car door lock	Pag. 117
1.17 Instruction on how to keep the doors in good operating conditions	Pag. 118
1.18 Testing the functions	Pag. 119
1.19 Adjustment of the open-end position	Pag. 120
2. General information prior to installation	Pag. 122
2.1 Description and function	Pag. 122
3. Electronic assembly layout	Pag. 122
3.1 Insulation test	Pag. 122
4. Commissioning	Pag. 123
4.1 Power Supply	Pag. 123
4.2 Safety Circuit	Pag. 126
5. Exchange of electronic box	Pag. 126
5.1 Preparation and learning of door parameters	Pag. 126
5.2 Driving the doors with the elevator controller	Pag. 128
5.3 Driving the doors by the service drive buttons	Pag. 128
5.4 Reset of coupler width	Pag. 128
5.5 Reset of all door parameters	Pag. 128
5.6 Connection of DC motor (e.g: replacement of old electronic)	Pag. 128
6. Adjustments always to be done	Pag. 129
6.1 Closing Force Adjustment	Pag. 129
6.2 Adjustment of the speed	Pag. 130
6.3 Setting speed according to Disabled People Regulations	Pag. 130
7. Description of LED's	Pag. 131
7.1 LED's Inputs	Pag. 131
7.2 LED's Outputs	Pag. 131
7.3 Different LED's	Pag. 131
8. Electrical Interfaces	Pag. 132
8.1 Inputs	Pag. 132

INDEX

8.2 Passenger protection device input and supply	Pag. 133
8.3 Outputs	Pag. 133
9. DIP-SWITCHES.....	Pag. 134
9.1 DIP Switch for ECO BUS 2.0 Doors	Pag. 135
10. Troubleshooting.....	Pag. 136
10.1 The door does not move	Pag. 136
10.2 The door does not reopen/reclose	Pag. 136
10.3 Faults causing reset or switch off (STATE LED is blinking, blinkcode (x))	Pag. 137
10.4 Faults decreasing performance of door	Pag. 137
11. Eco+ wiring diagram Drive	Pag. 138
11.1 With Detector (No EN 81-20)	Pag. 138
11.2 With W2D Photocell (No EN 81-20)	Pag. 139
11.3 With Detector EN 81-20	Pag. 140
12. Wittur Programming Tool Interface Software description	Pag. 141
12.1 Introduction	Pag. 141
12.2 Connecting the Wittur Programming Tool to the ECO+ - electronic	Pag. 141
12.3 Menu structure of Programming Tool	Pag. 141
12.4 Door adjustment with the Programming Tool	Pag. 142
13. Default adjustment of ECO+ software.....	Pag. 148
14. Maintenance.....	Pag. 149
14.1 Operator-and panel fixation.....	Pag. 149
14.2 Checking the door gap.....	Pag. 149
14.3 Synchronisation rope	Pag. 150
14.4 Emergency drive	Pag. 151
14.5 Hanger plate guiding	Pag. 152
14.6 Assembly of the spare parts.....	Pag. 153
14.7 Replacement of the synchronisation rope	Pag. 159
Warnings on how to keep the doors in good operating conditions	Pag. 161

The points that are important under the safety viewpoint and danger warnings are indicated with these symbols:



Danger general



Important warnings



Risk of personal injury (e.g. sharp edges, protruding parts)



Risk of damage to mechanical parts (e.g. incorrect installation)



Live parts

Congratulations on choosing a **WITTUR** product!

Before starting the installation of this product, read the information contained in this document.

Before installation work begins, it is in your own interests to clarify what structural and spatial conditions are available for installation work, so that you can see which installation procedures should/must be carried out. Therefore it is recommended that all circumstances be taken into consideration, and to mentally plan the installation sequence before any rash or badly planned work is carried out. Check the goods or parts for correct and full delivery upon receipt.

You will find important warnings on how to assemble and maintain your **WITTUR** product in good operating conditions and to get the maximum of your investment.

You will also find important information concerning the product care and maintenance which are an important factor to ensure safety at all times.

WITTUR has long been involved in research aimed at reducing noise level and in design that takes into due consideration the product quality and the conservation of environment.

 This document is an integral part of the supply and must be available in the lift power room at all times.

All products are provided with identification type label and in case with certification marks in accordance with the current rules.

In case of need concerning the product, the identification data on the label must be always communicated to us.

We hope you will get full satisfaction from this **WITTUR** product. Yours faithfully.

WITTUR

WARNINGS

- **WITTUR** will not be held liable for any damage caused by tampering of the packing material by thirds.
- Before starting assembly, check that the product received corresponds to the order and to the packing list and that no damage has occurred in transit.
- Within its policy of continual research, **WITTUR** reserves to make changes to its products without notice. The figures, descriptions and data contained in this manual are intended as purely indicative and not binding.



- To ensure the safety of the product, avoid any alteration or tampering.
- **WITTUR** liability will be limited to the original components only.

- **WITTUR** product is intended for use in the lift sector only, therefore **WITTUR** liability shall be limited to such use.
- This product is intended for professional use. Any improper use, including for hobby or DIY, is prohibited.



- In order to prevent any injury to persons and damage to property, the handling, installation, adjustment and maintenance must be carried out by suitably trained personnel, using appropriate clothing and equipment.
- Any masonry work connected with the correct installation of the product must be executed in a workman-like manner according to the applicable laws.
- The connection of the electric/electronic units to the local power supply must be executed in a workman-like manner according to the applicable laws.
- All metal parts supporting the electric/electronic units must be connected to an earth system in a workmanlike manner according to the applicable laws.
- Before connecting the product to the power supply check that the product's requirement corresponds with the power supply available.
- Before starting any work on the electric/electronic components disconnect power from the system.
- **WITTUR** shall have no responsibility on the execution of masonry works or the connection of electric/electronic components to the power supply.
- **WITTUR** shall not be liable for damages/injury to property/persons caused by improper use of the emergency opening devices.

INSTRUCTION HANDBOOK CAR DOOR

Code	GM.2.001049.EN
Version	Q
Date	17.04.2025
Page	86.161



SUGGESTIONS

- Keep the material in the original packing, protected from bad weather and direct exposure to sun during the storage period in order to avoid the accumulation of water/condensation inside the packing material.
- Never dispose of packing material in the environment.
- Once dismantled, the product should be conveniently disposed as provided for by the local laws; never dispose of in the environment.
- Whenever possible, re-cycling is preferable to disposal in dump sites.
- Before re-cycling check the nature of the various materials and re-cycle in the appropriate way.



INSTALLATION TOOLS

Following tools are needed:

- hexagon keys 3mm, 5mm and 6mm
- Screw drivers (flat and crossheaded)
- Ratchet + extension; sockets 10mm and 13mm
- box spanner 17mm
- circlip plier

The landing toptrack is preadjusted at the factory. No other mechanical adjustments other mentioned in this instruction are required at site!




DELIVERY

- car door operator
- panels
- sill
- coupler (optional)
- swing door unlocking (optional)
- fixings


Only to be stored in the original package (plastic wrap).

The components must not be unpacked until the installation begins.

1.1 GENERAL DESCRIPTION: TY 4AS, TY 4S

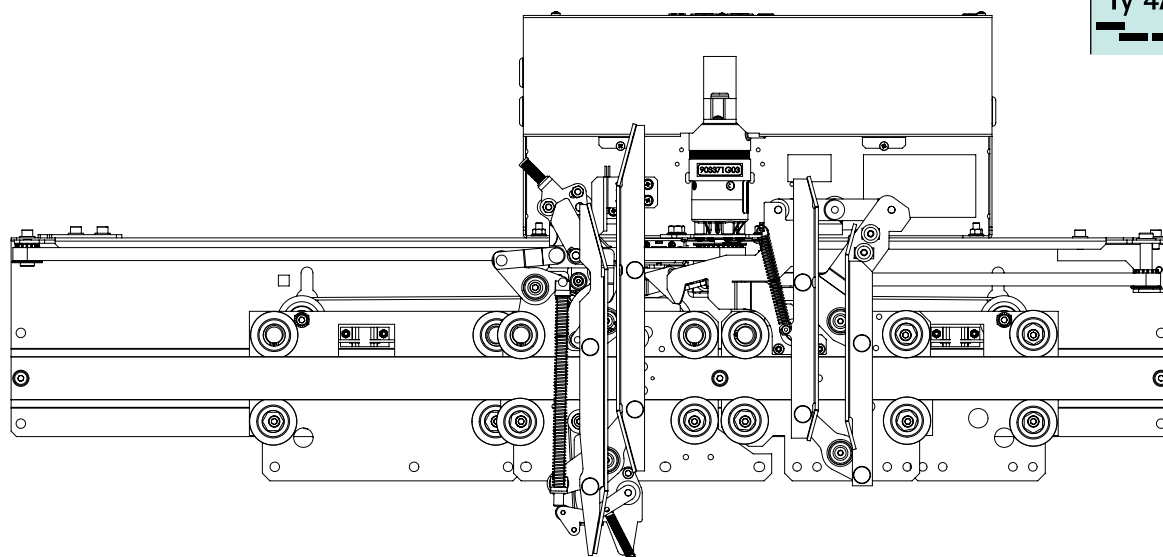

Ty 4AS

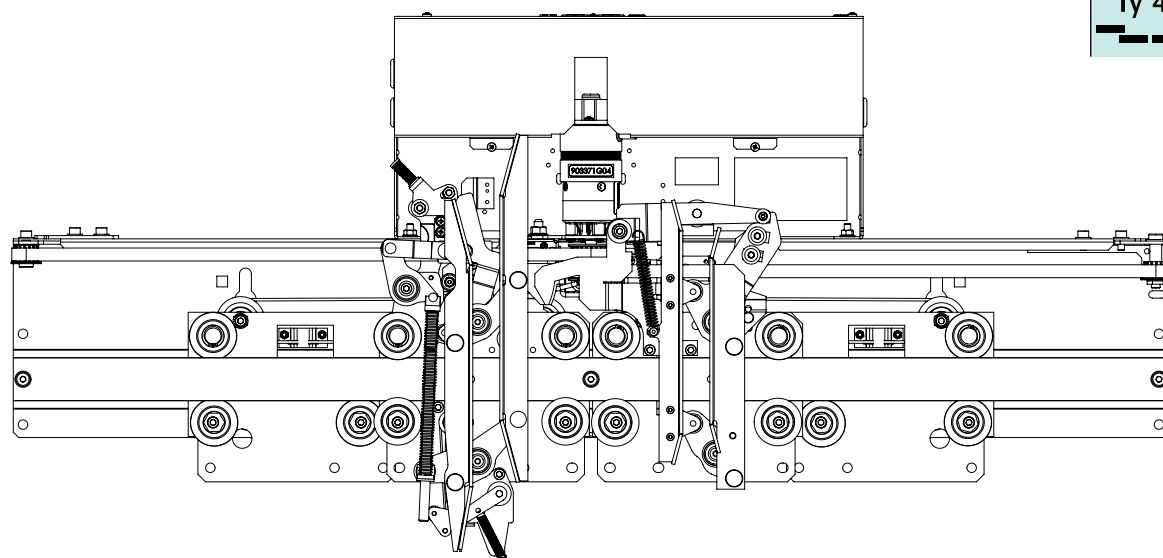

Ty 4S


INSTRUCTION HANDBOOK CAR DOOR

Code	GM.2.001049.EN
Version	Q
Date	17.04.2025
Page	88.161

1.2 GENERAL DESCRIPTION: TY 02/C, TY 12/R-L


Fineline Car Door Central Opening

Ty 02/C

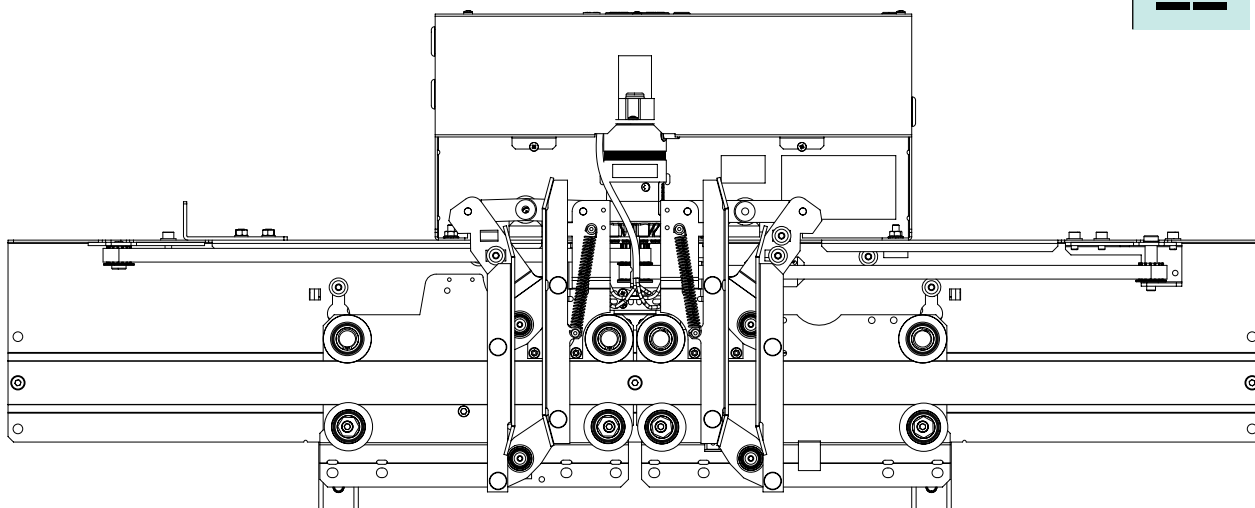

Fineline Car Door Side Opening

Ty 12/R-L


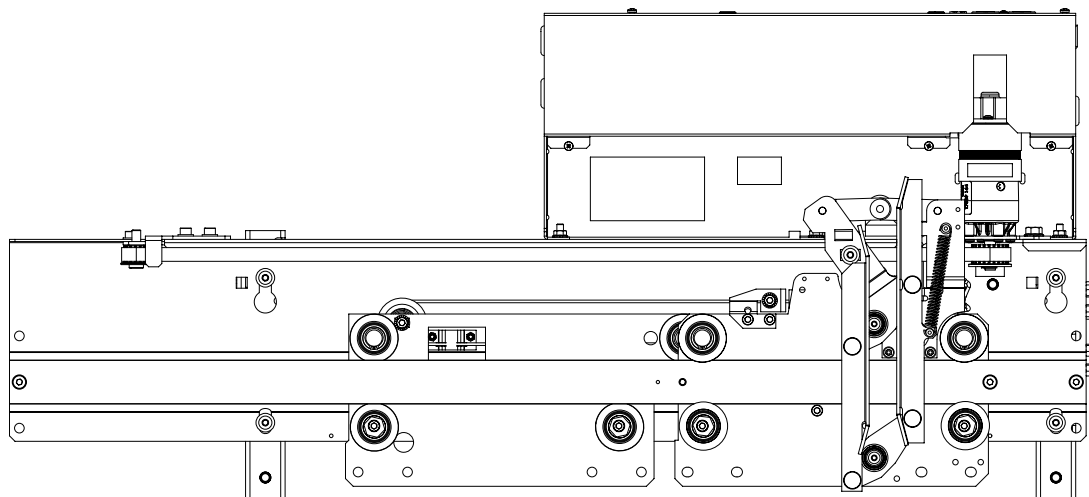


1.3 CAR DOOR ALIGNMENT WITH LANDING DOOR

Each car door has a mark in the operator area which is representing the center of the clear opening. While for the symmetric door the hexagon screw indicates the door's clear opening line, for asymmetric doors a hole with a diameter of 3mm indicates the center of the clear opening line.



FLC symmetric

Ty 4S

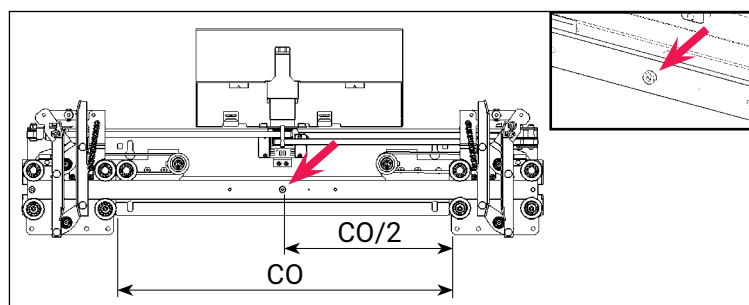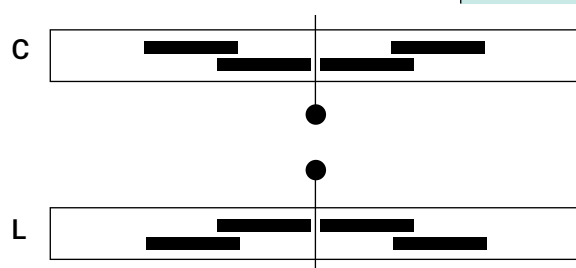



FLC asymmetric - left opening

Ty 4AL

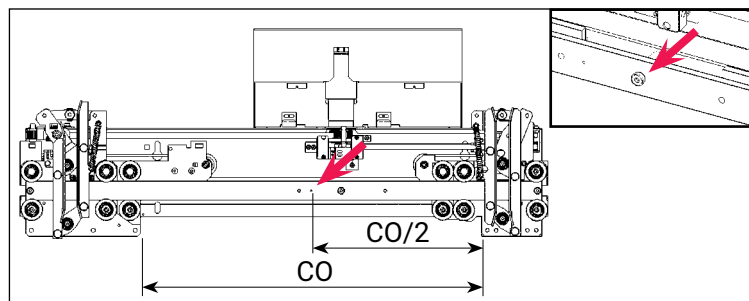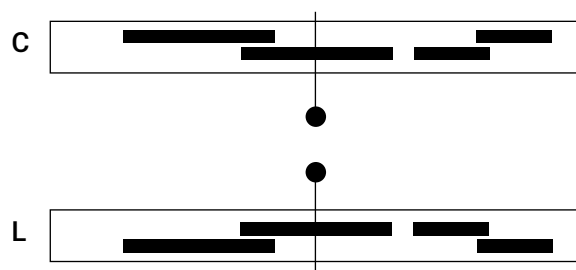

FLC asymmetric - right opening



Ty 4AR

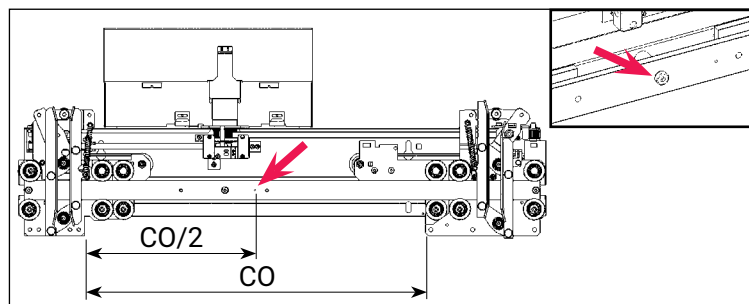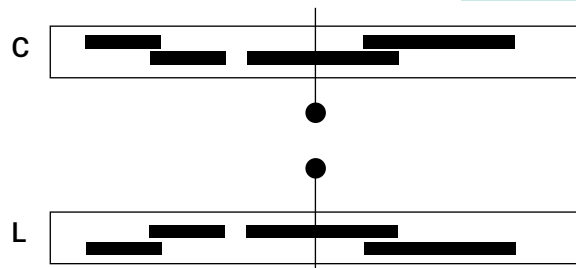

Each car door has a mark in the operator area which is representing the center of the clear opening. While for the central opening and side opening door the hexagon screw indicates the door's clear opening line.


FLC central opening

Ty 02/C

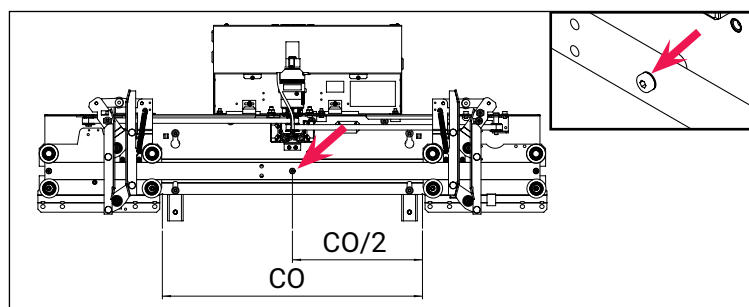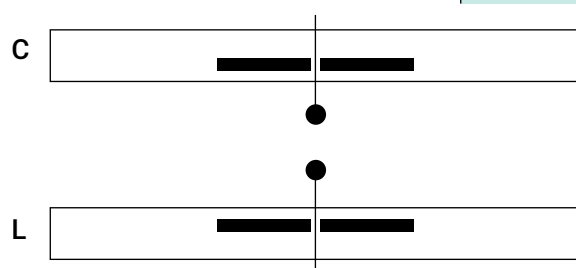



FLC left side opening

Ty 12/L

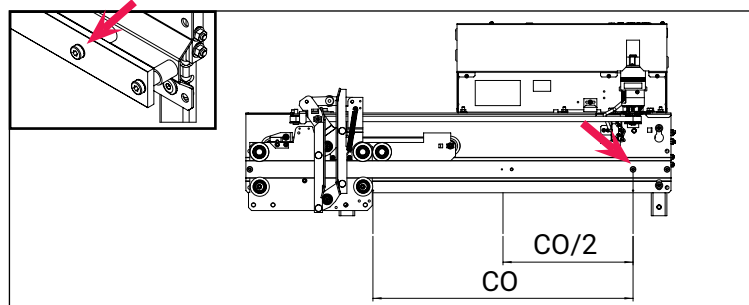


FLC right side opening

Ty 12/R

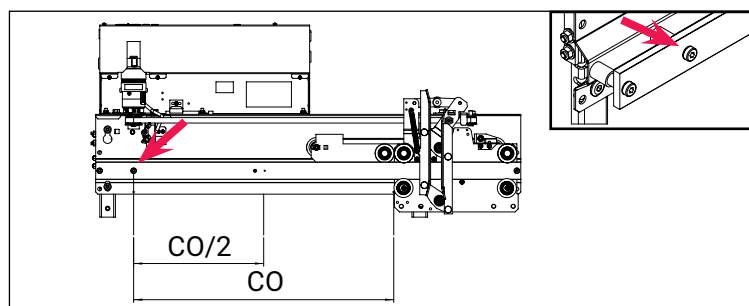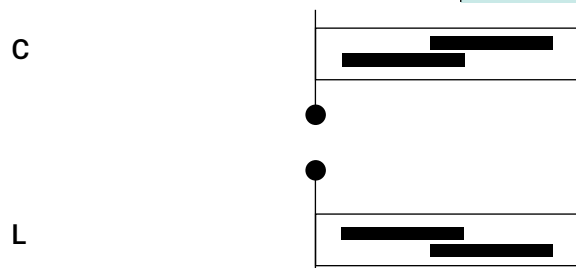


1.4 IDENTIFICATION


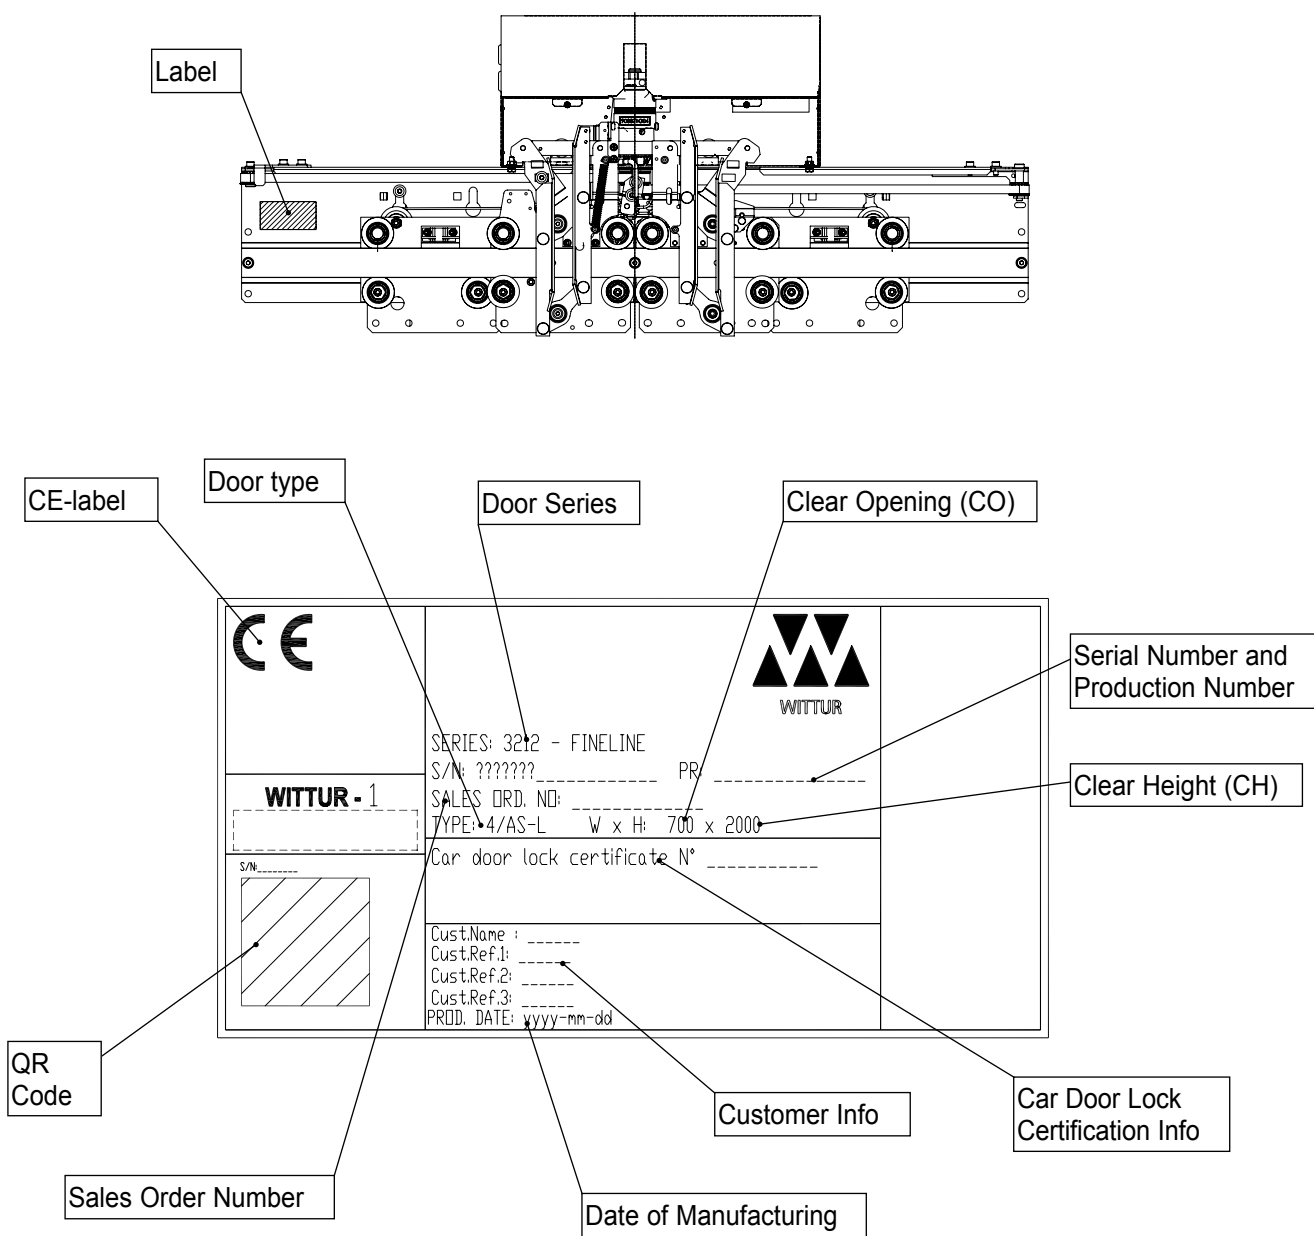




1.5 ASSEMBLY OF THE SILL

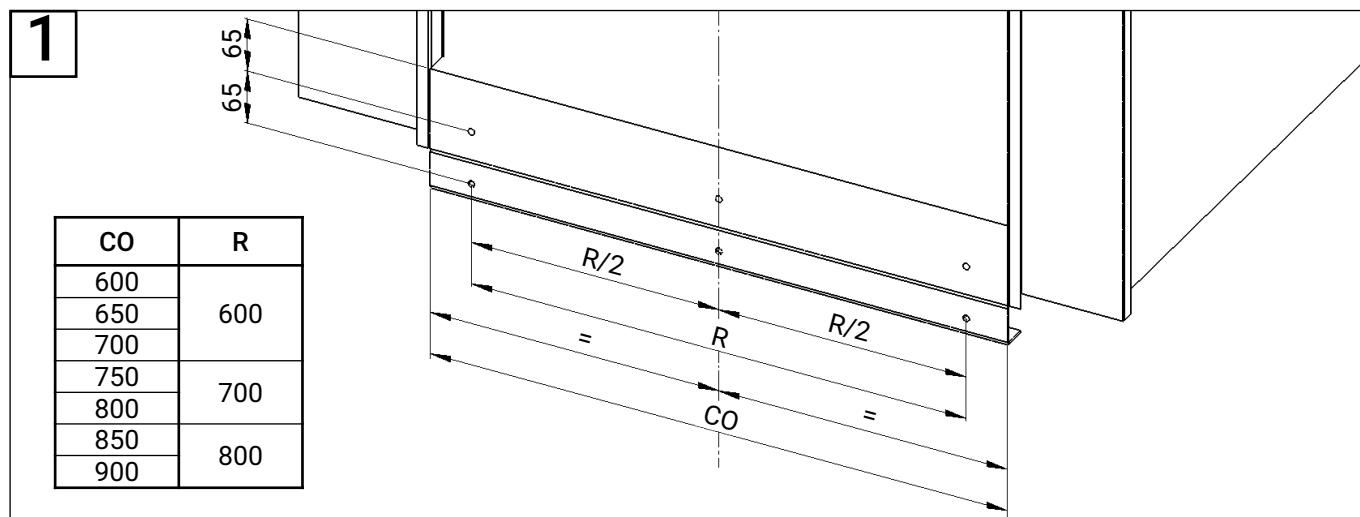


 To ensure a correct installation the fixing elements (dowel, strike armature,...) must be used according to the wall construction and the future forces.


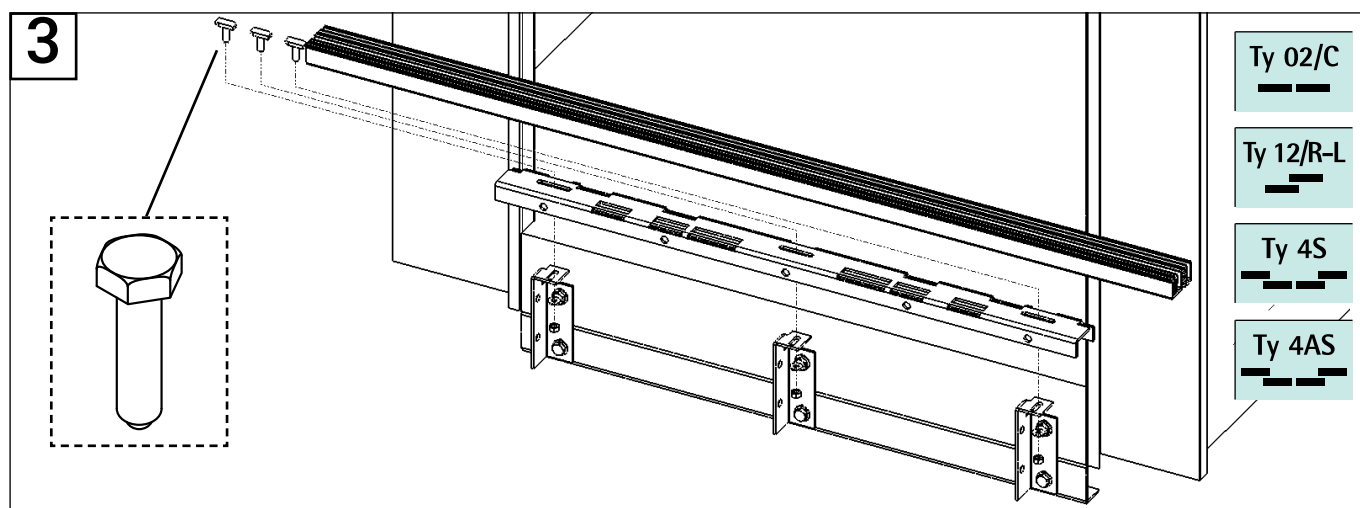
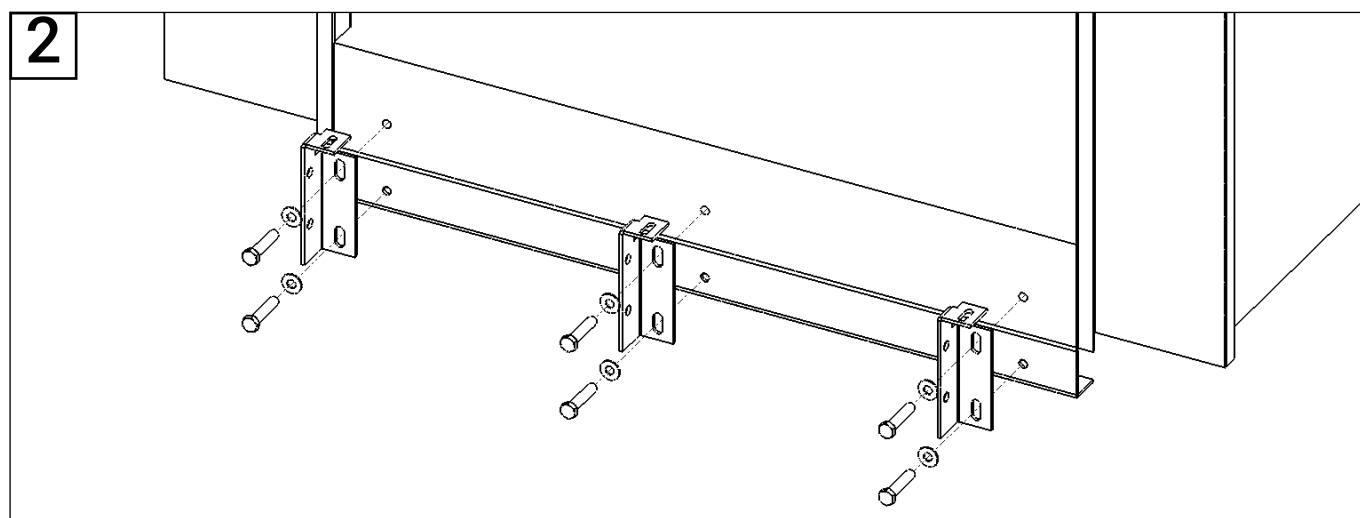


Subject to change without notice!

New

OPTIONAL: ONLY FOR TY.4S & 4AS VANDAL RESISTAN CAT.1

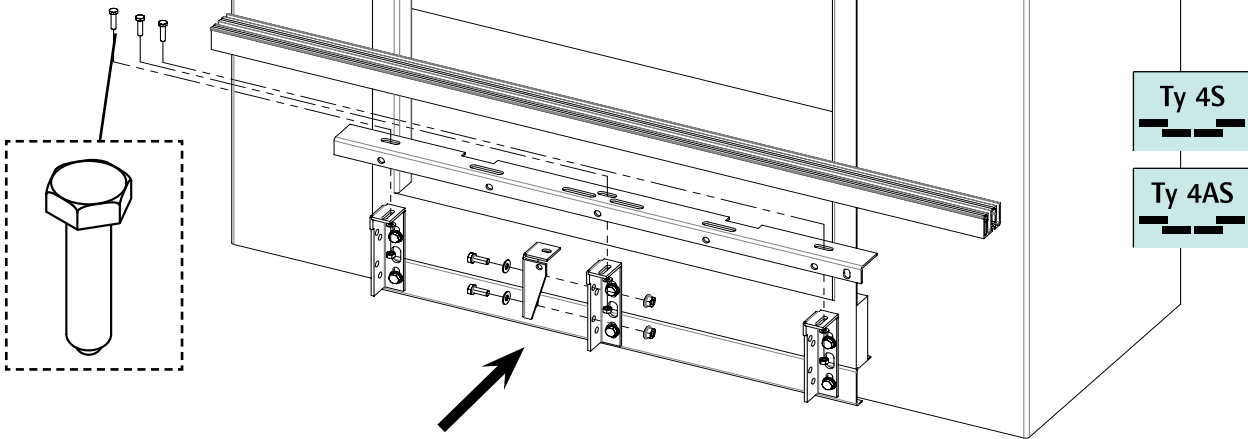

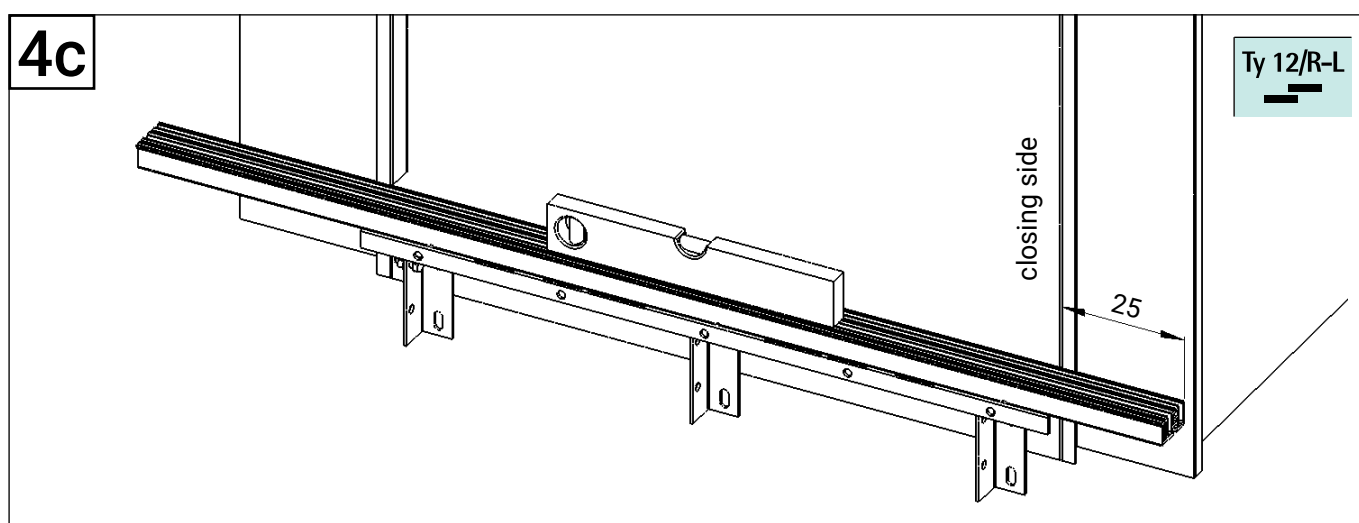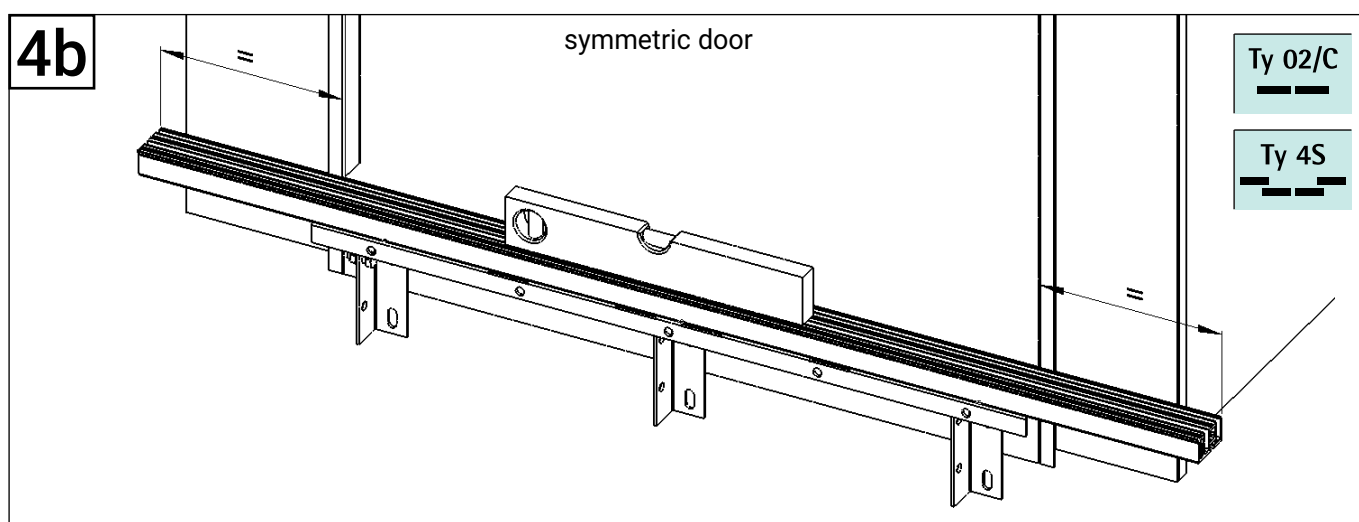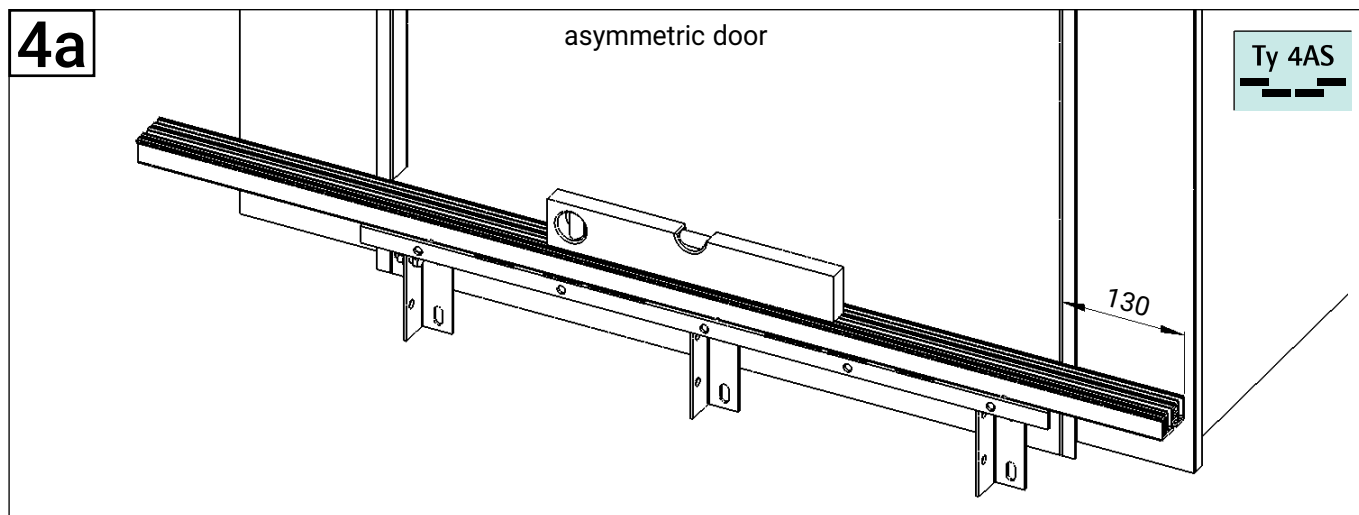





1.6 ASSEMBLY OF THE OPERATOR

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

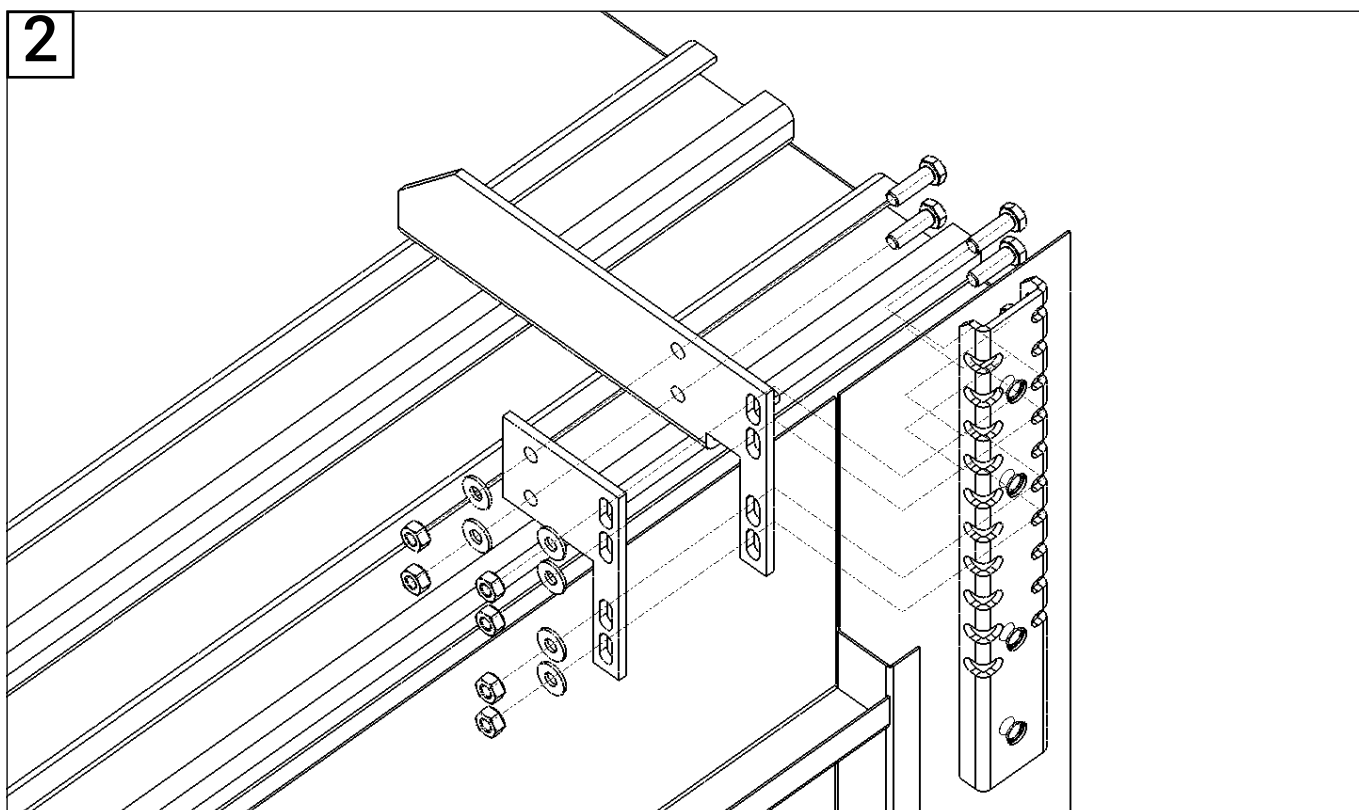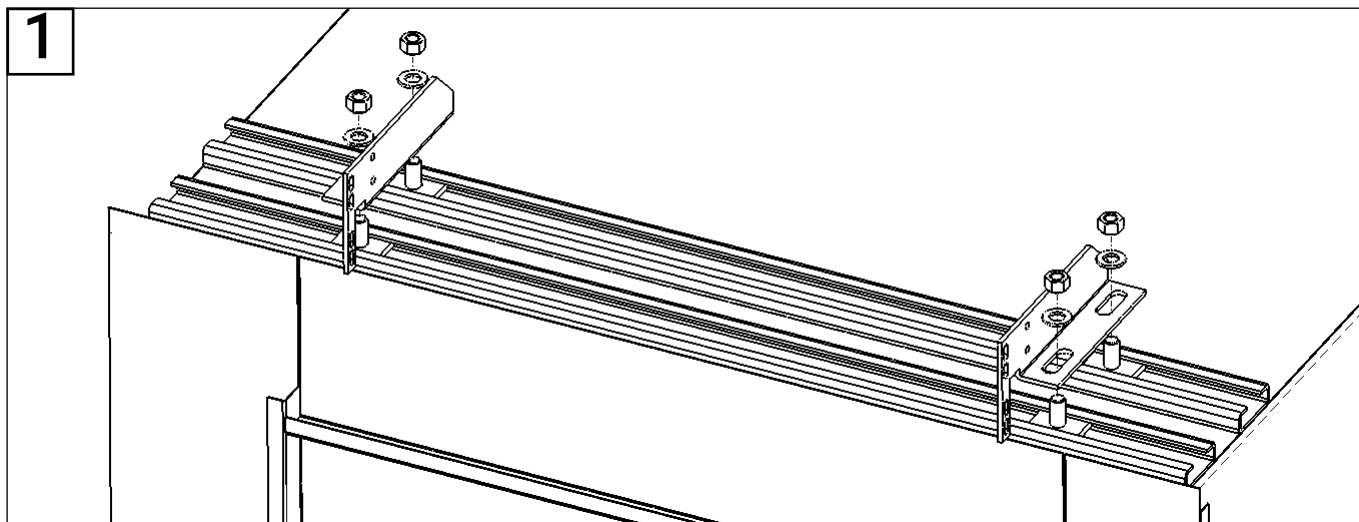

INSTRUCTION HANDBOOK CAR DOOR


Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 96.161

Ty 02/C

Ty 4S


Ty 4AS

3a

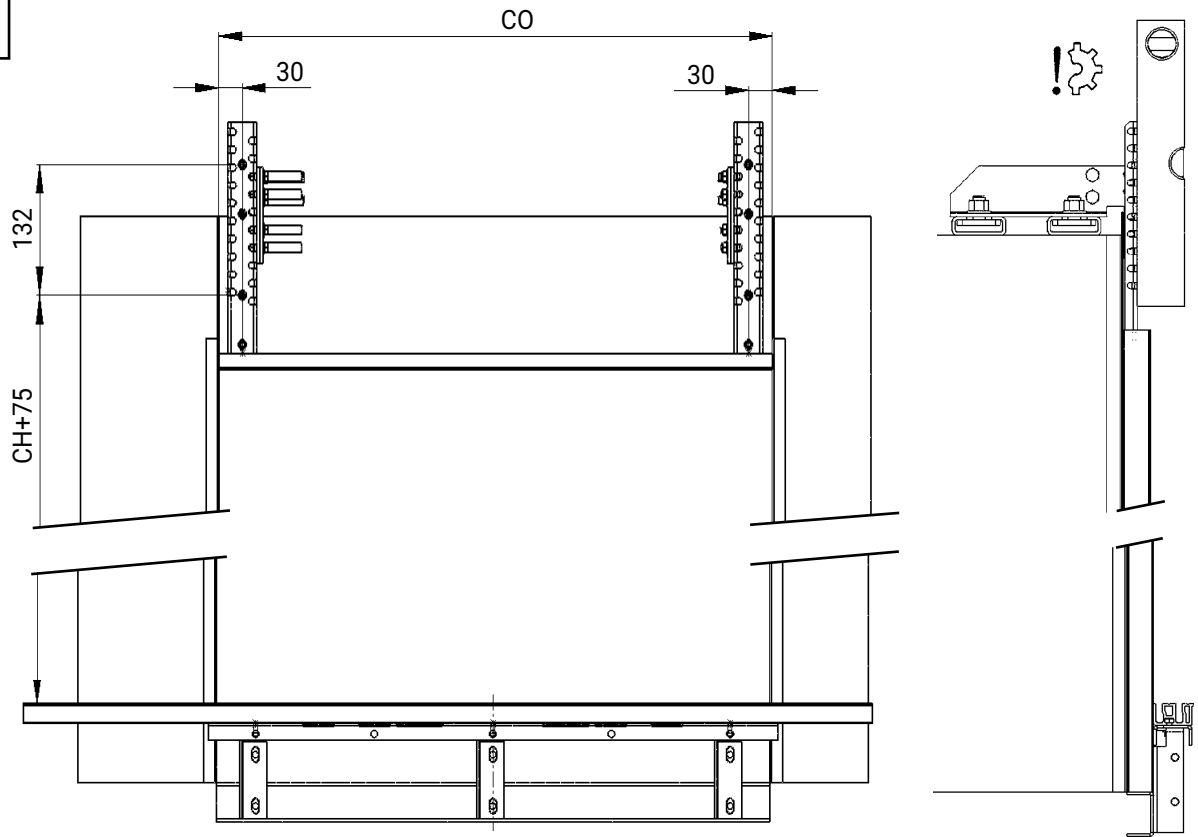


3b


Ty 12/R-L

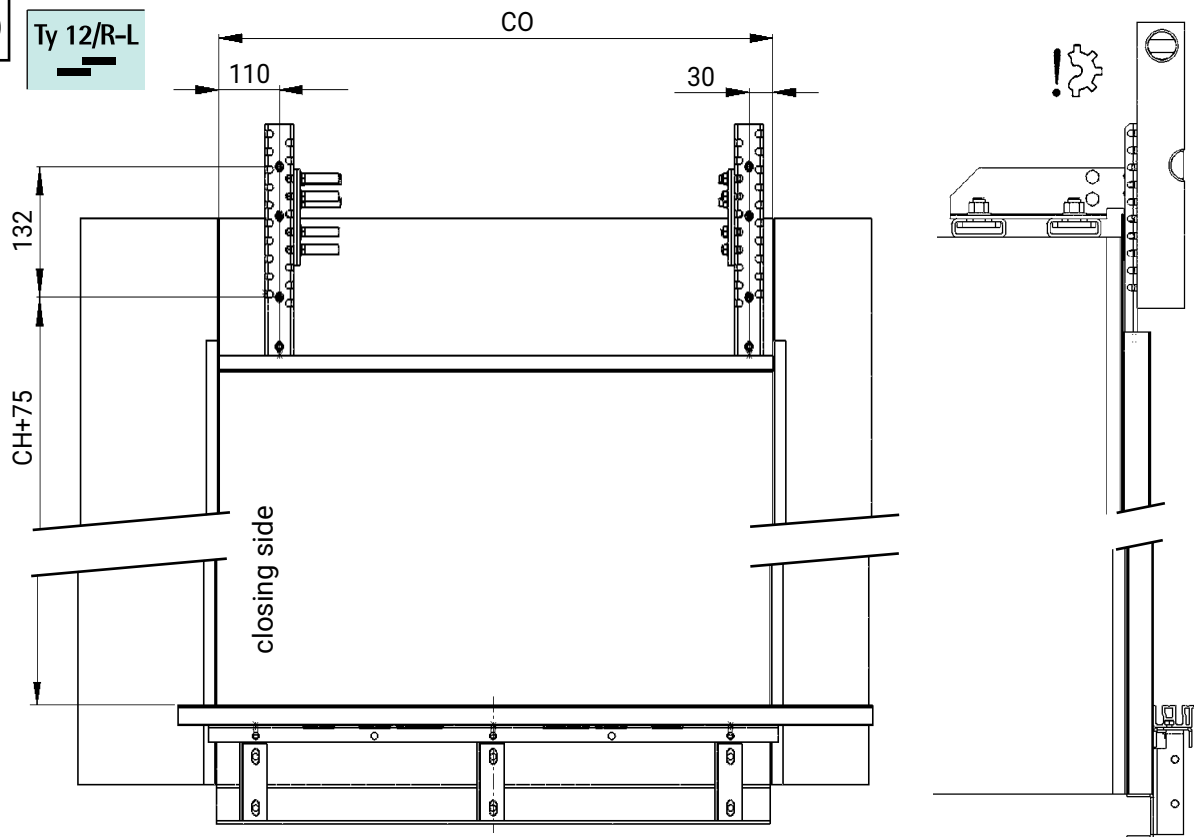

New


OPTIONAL: ONLY FOR VANDAL RESISTAN CAT.1

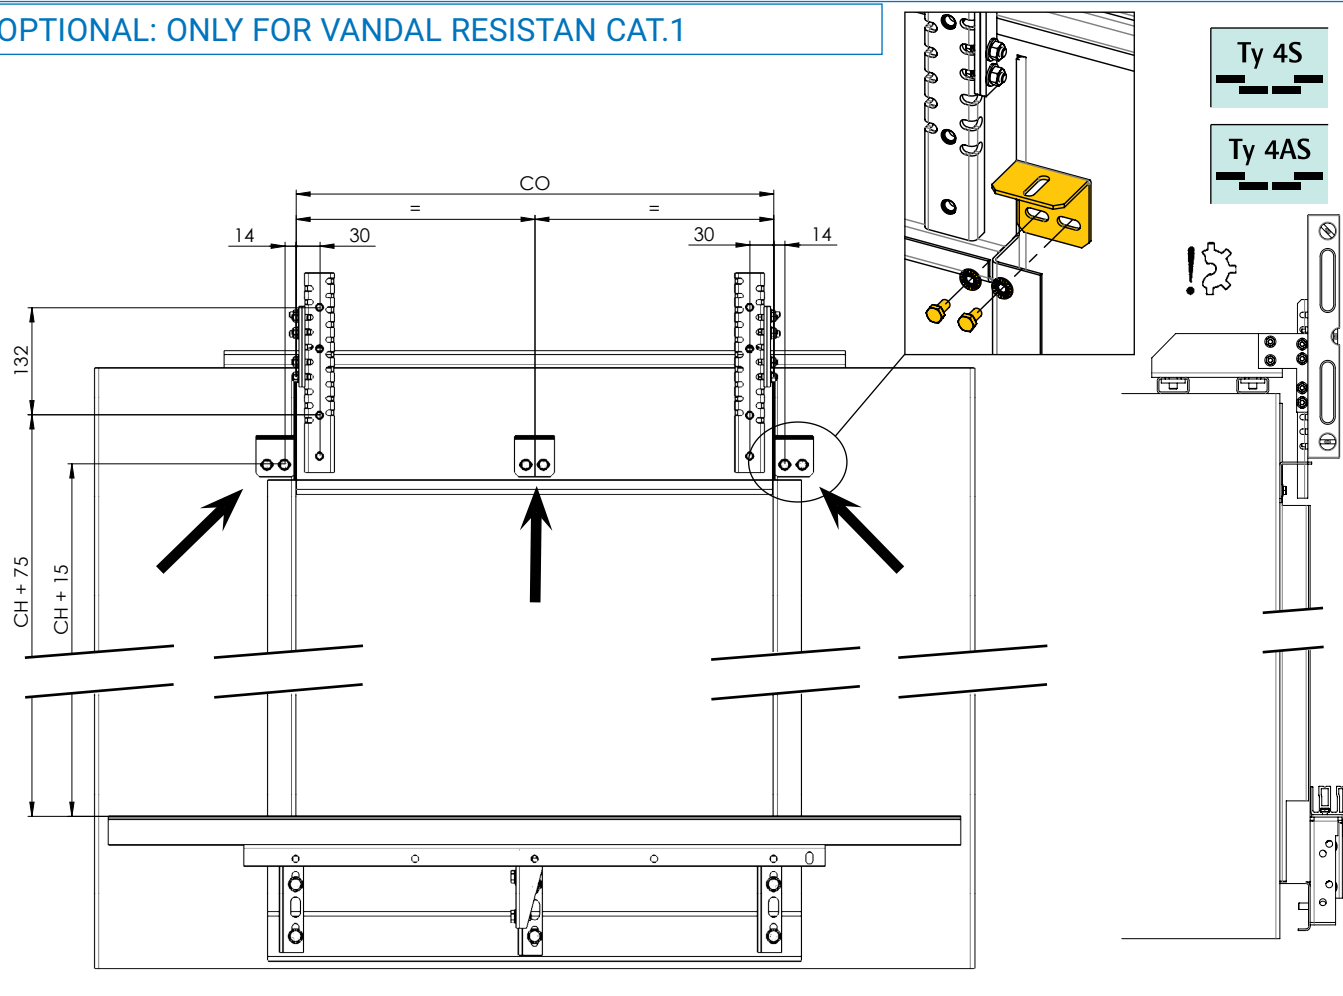


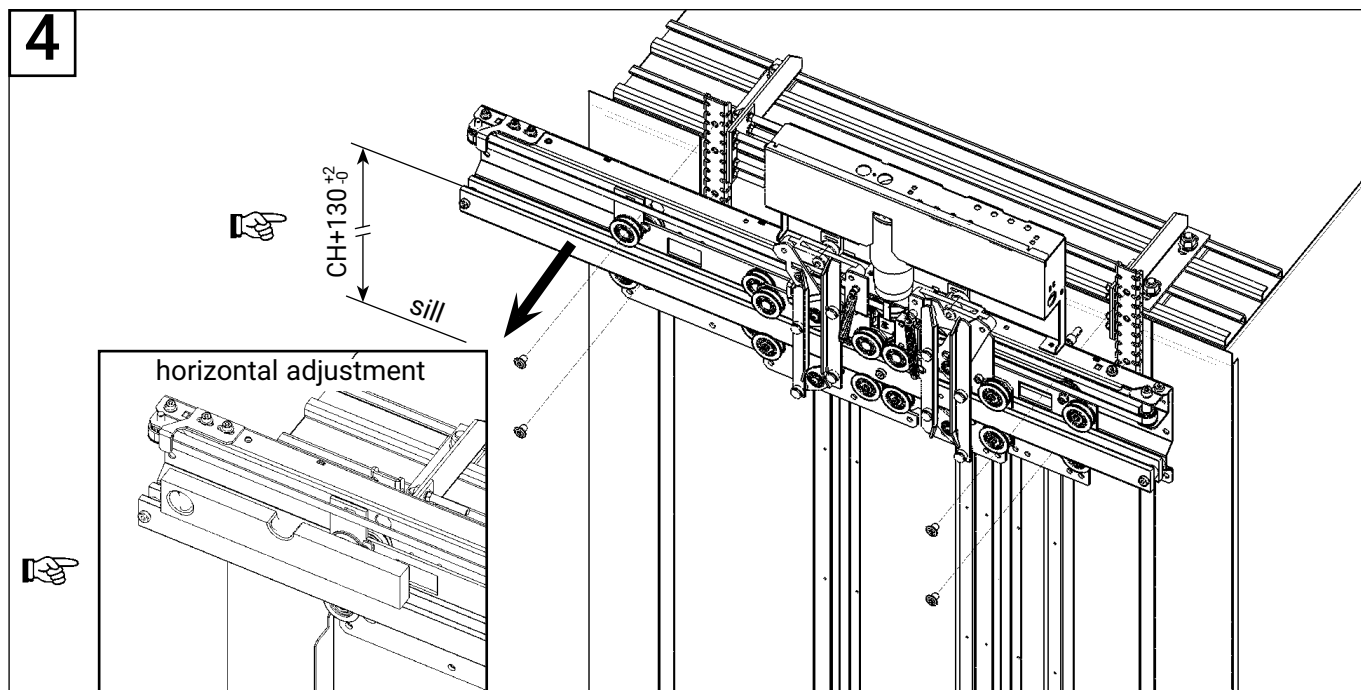

OPTIONAL: ONLY FOR VANDAL RESISTAN CAT.1


New

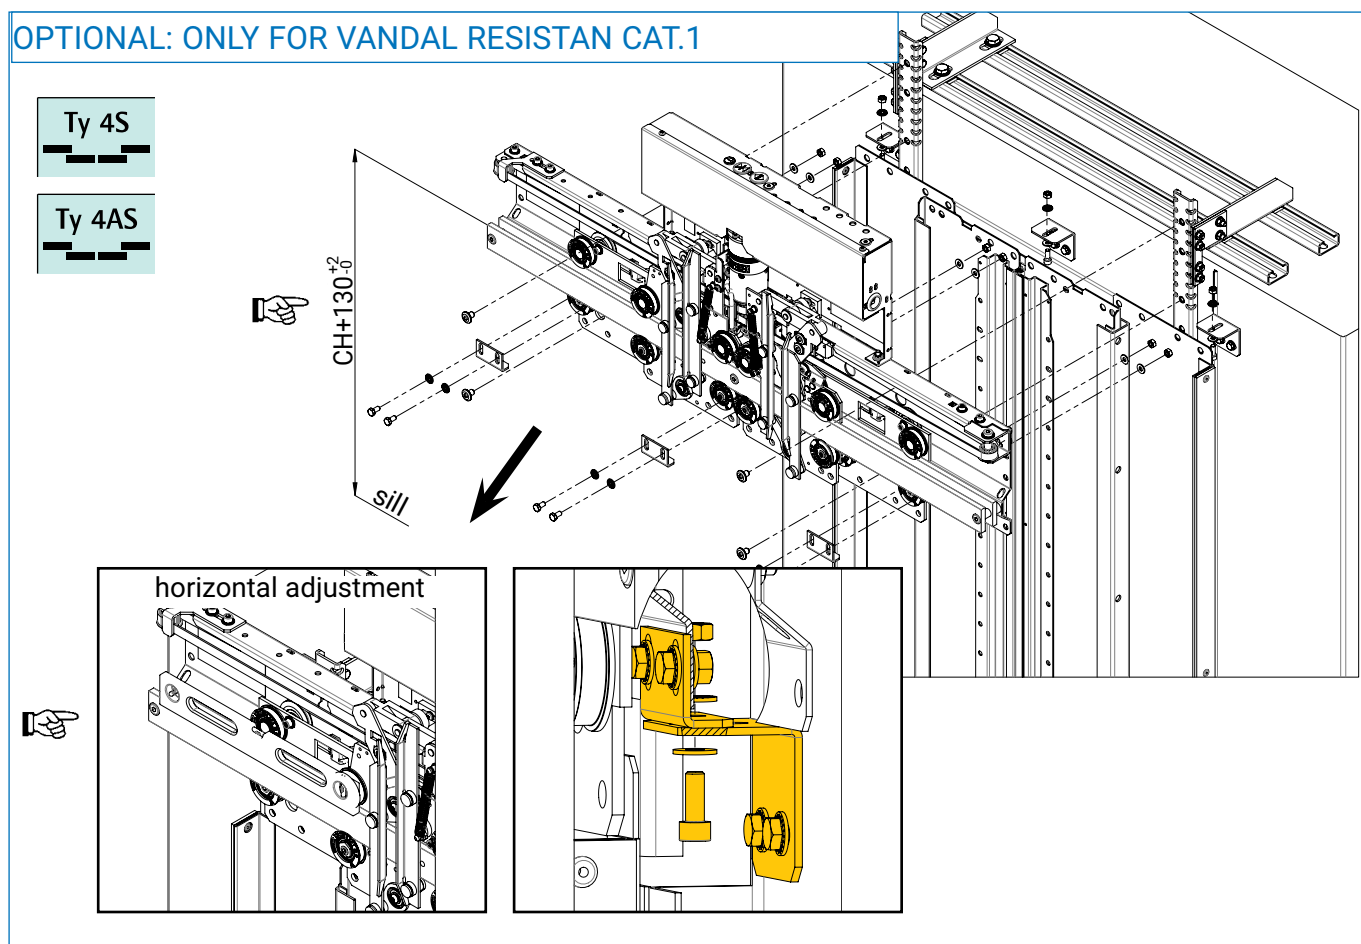

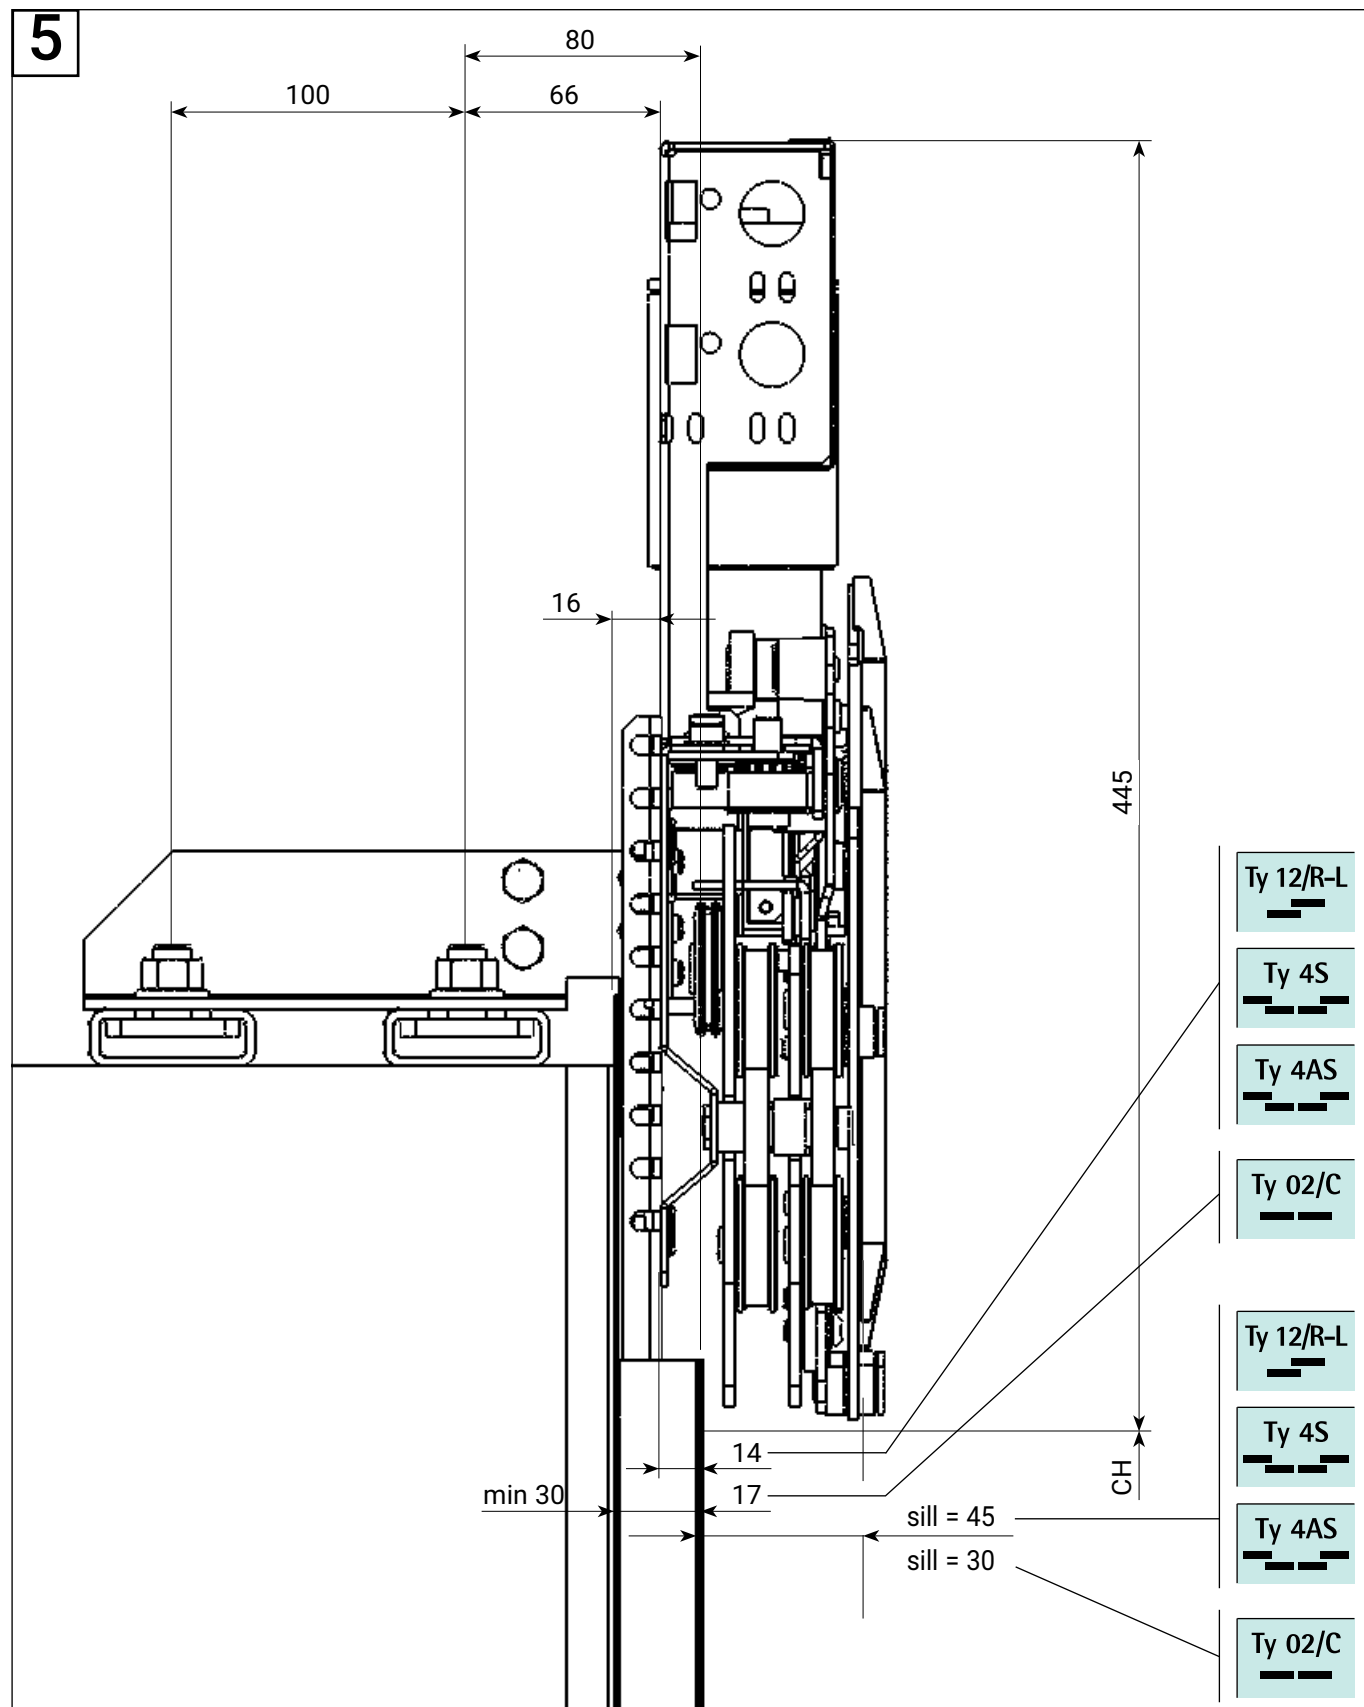

1.7 DOOR PANELS' ASSEMBLY

1.7.1 Panel shoes assembly

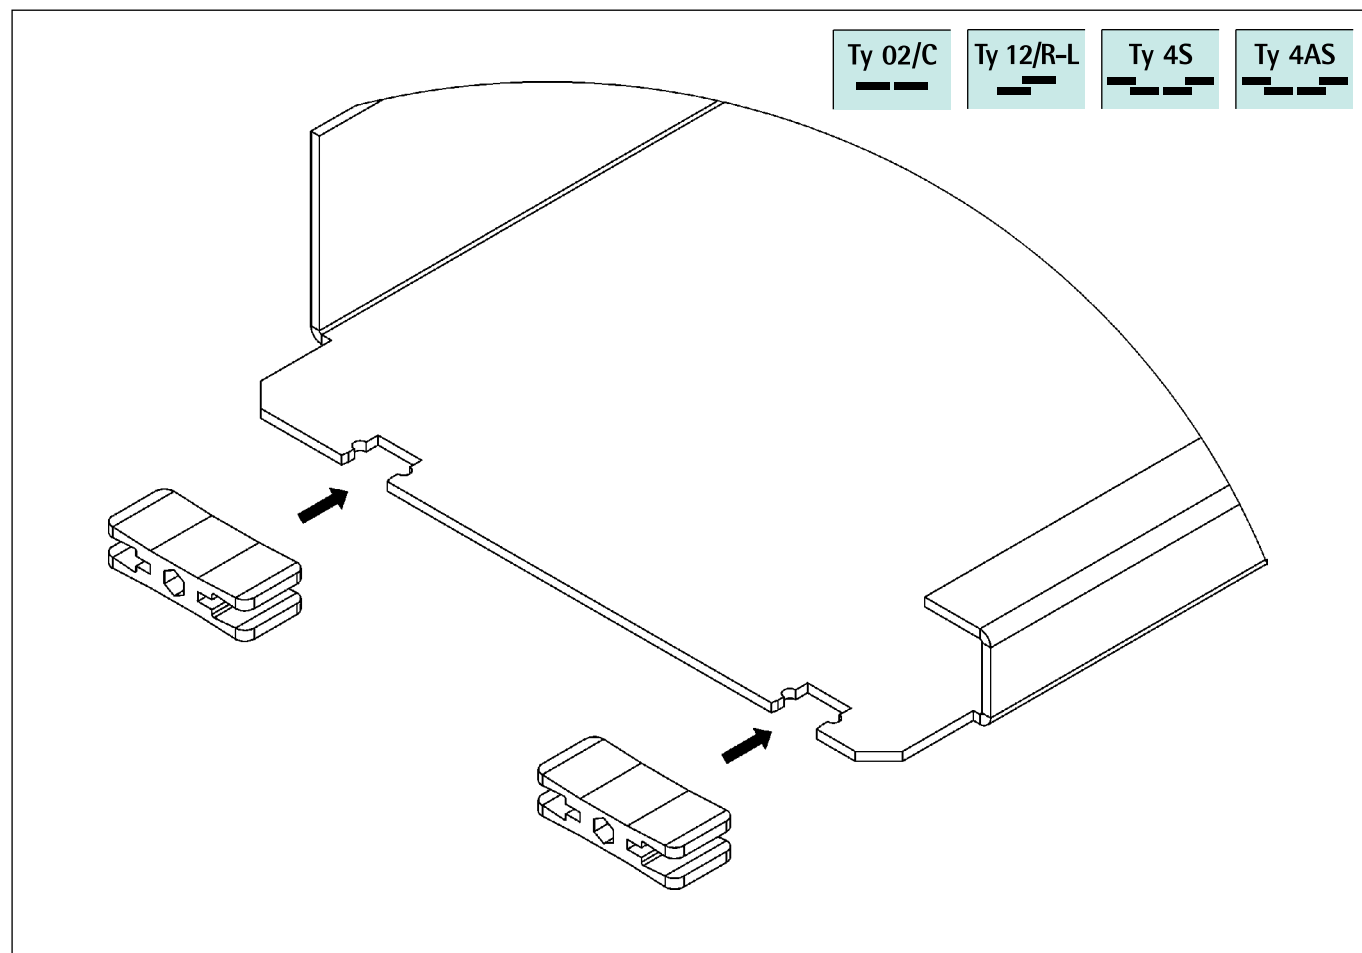


1.7.2 Insert of the door panels

Ty 12/R-L

Ty 4S

Ty 4AS

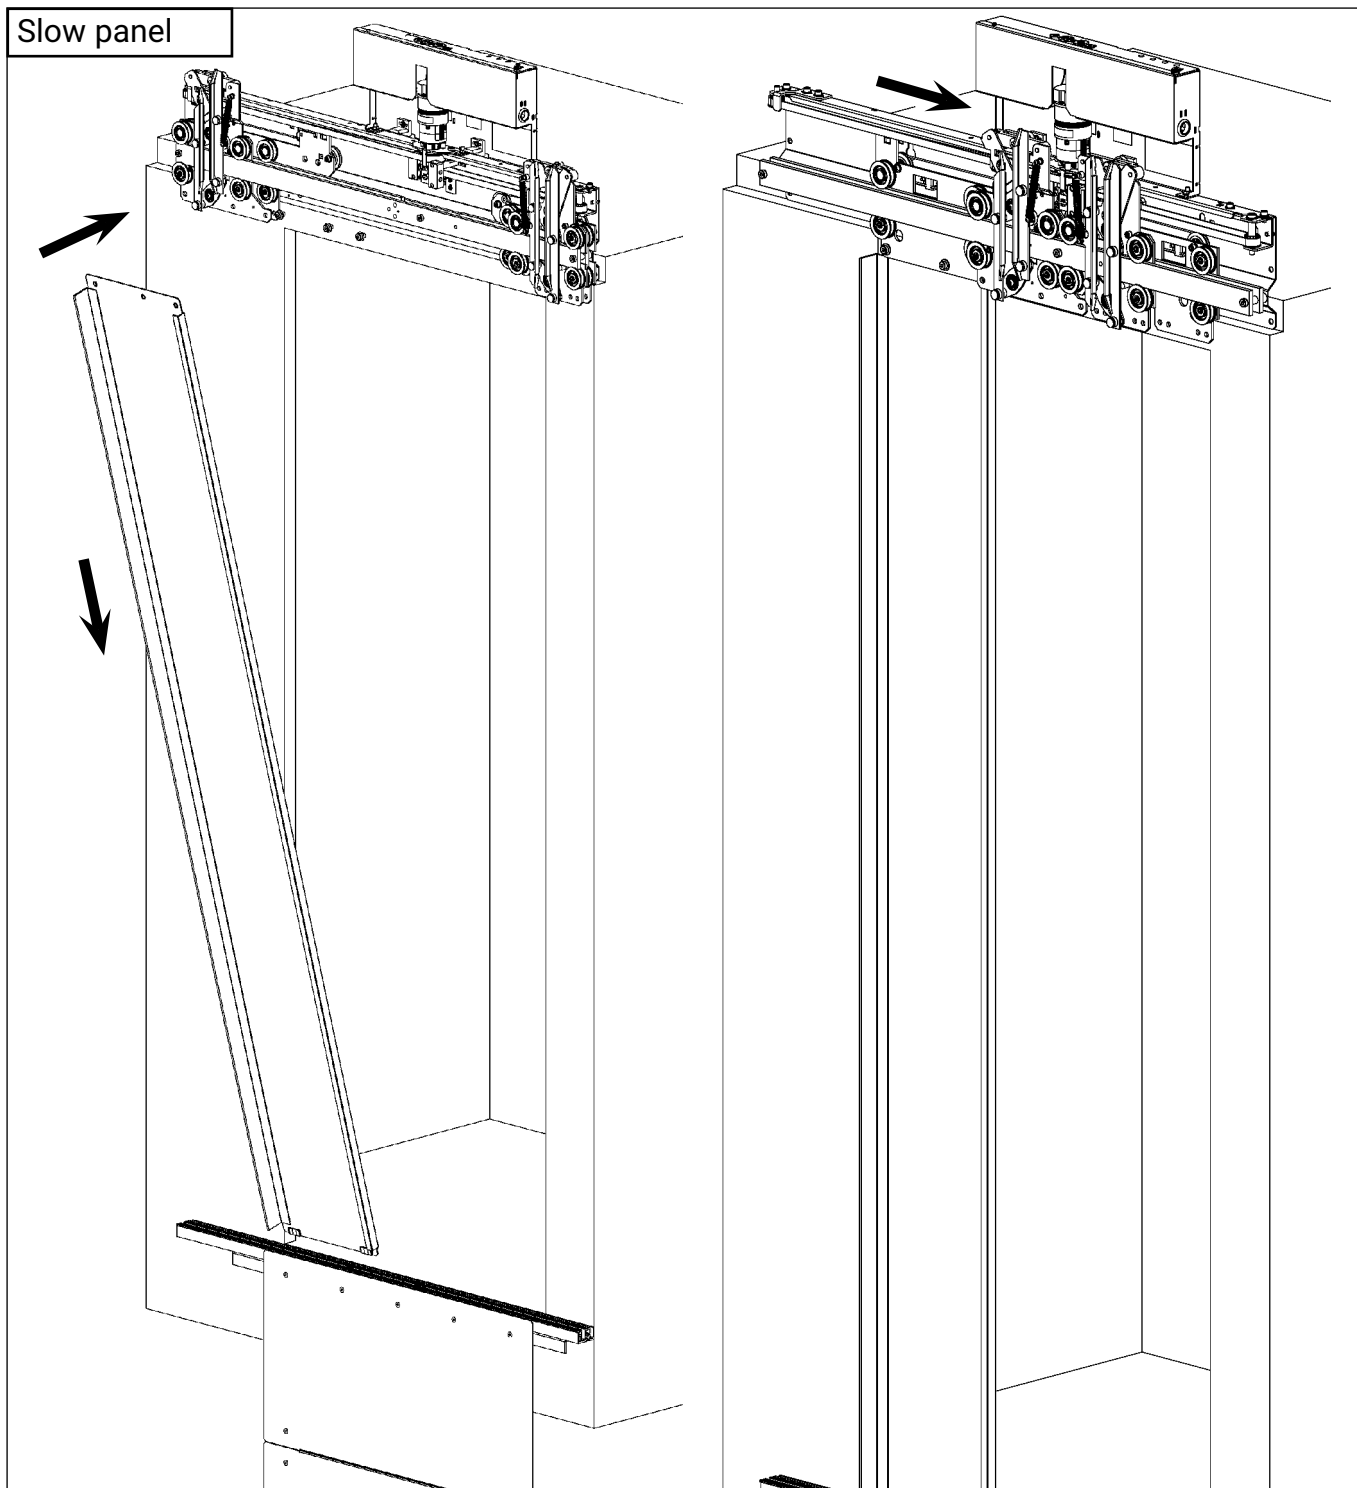


Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

Fast panel

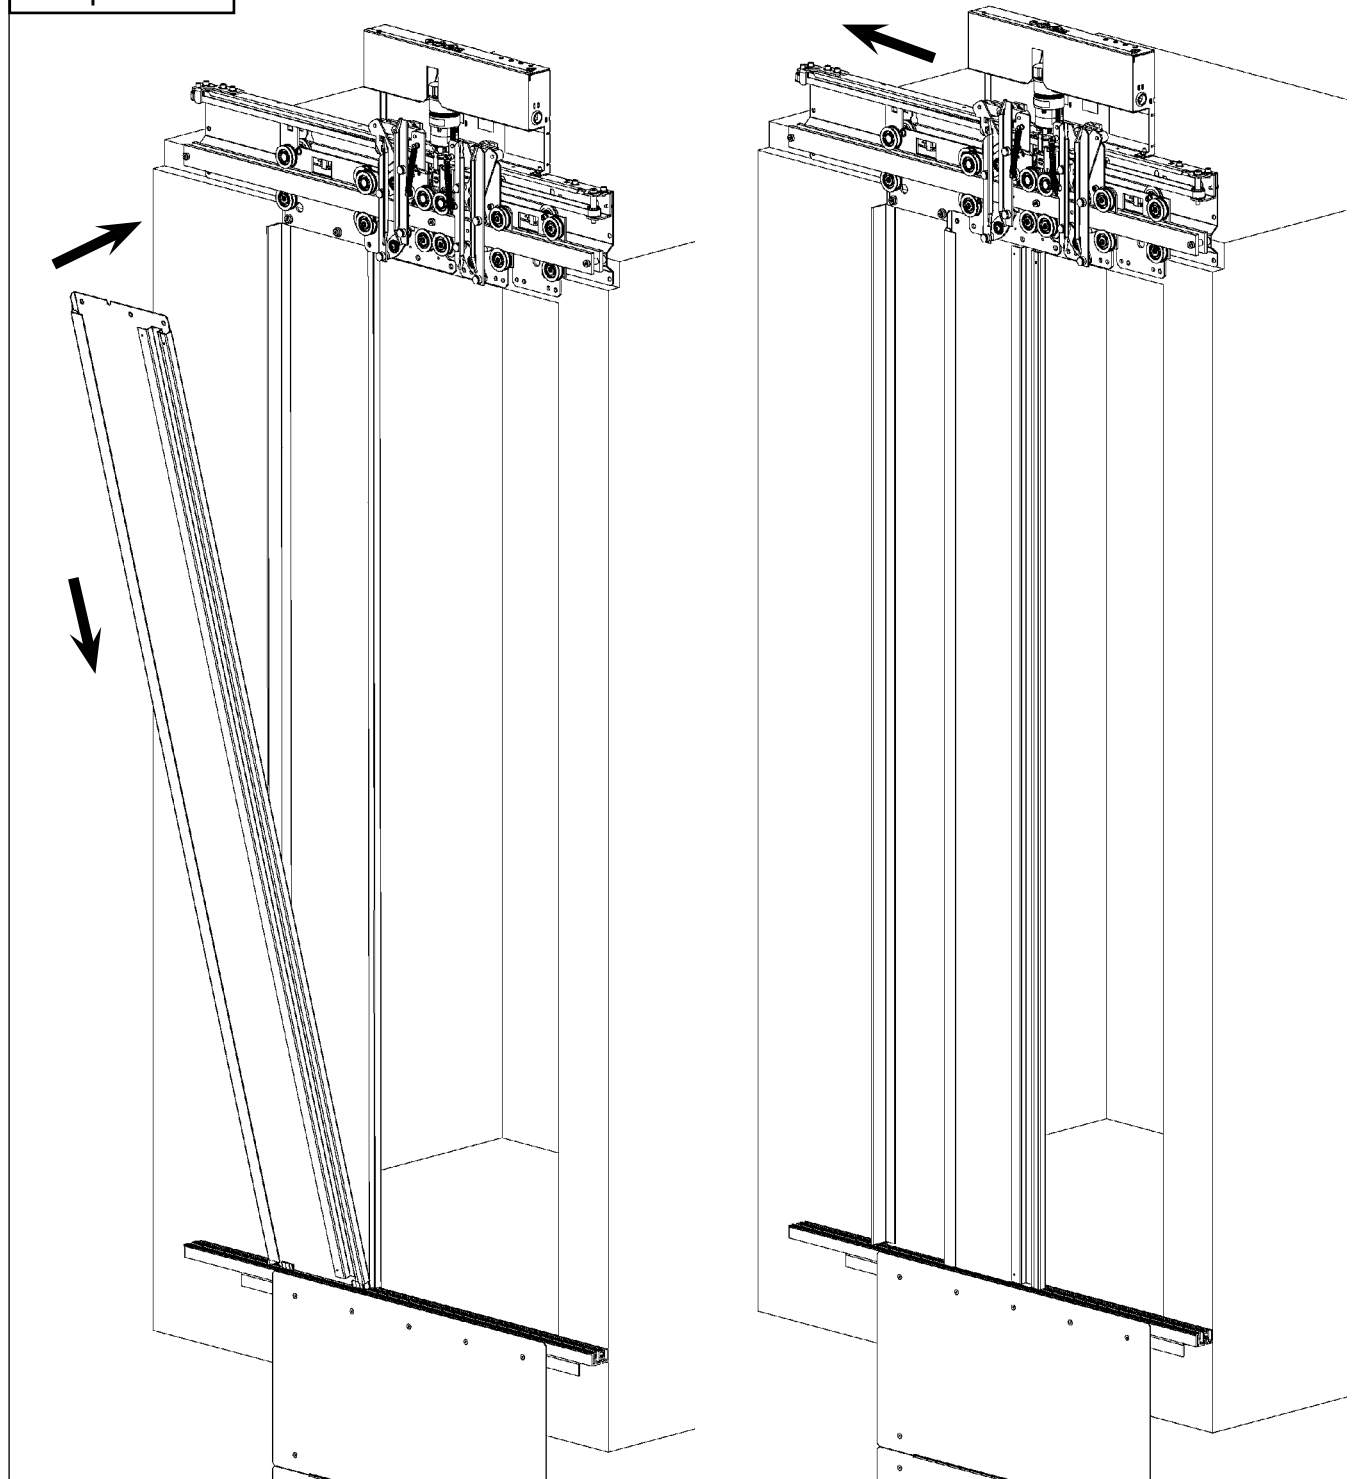


1.7.3 Assembly of the rear door panels

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

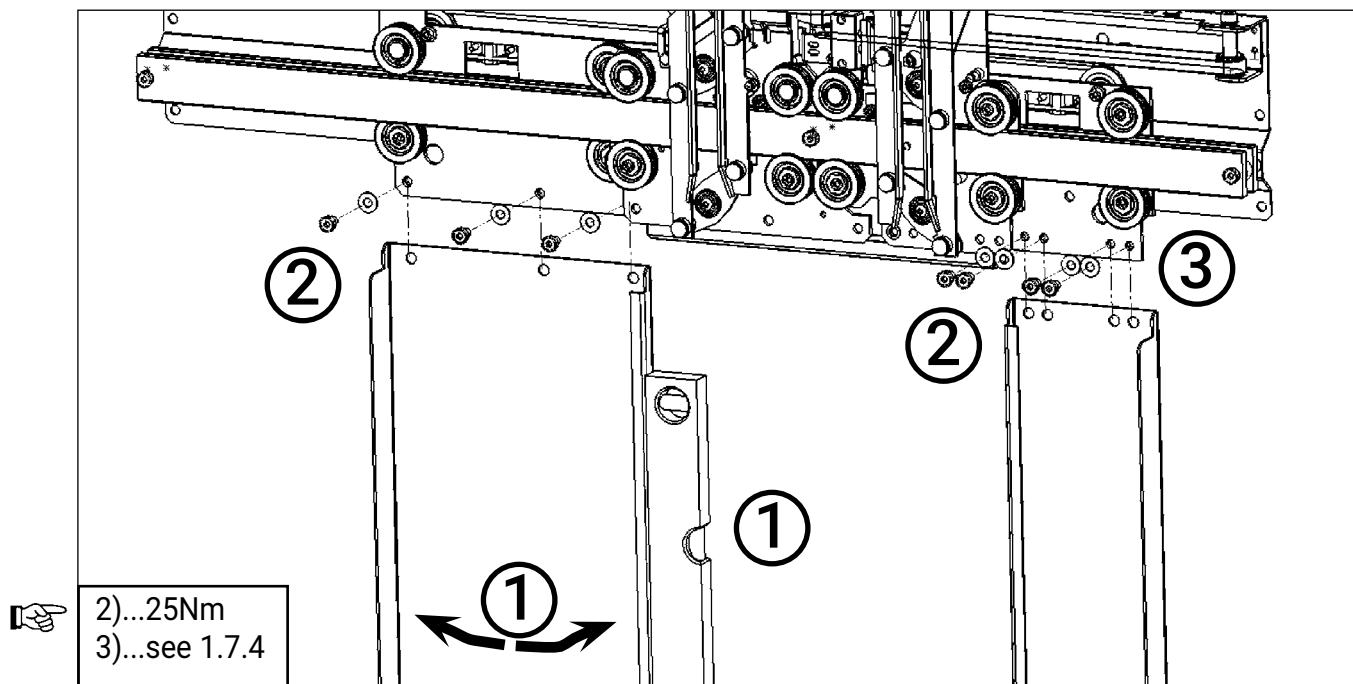


1.7.4 Assembly of the front door panels

Ty 02/C


Ty 12/R-L

Ty 4S

Ty 4AS

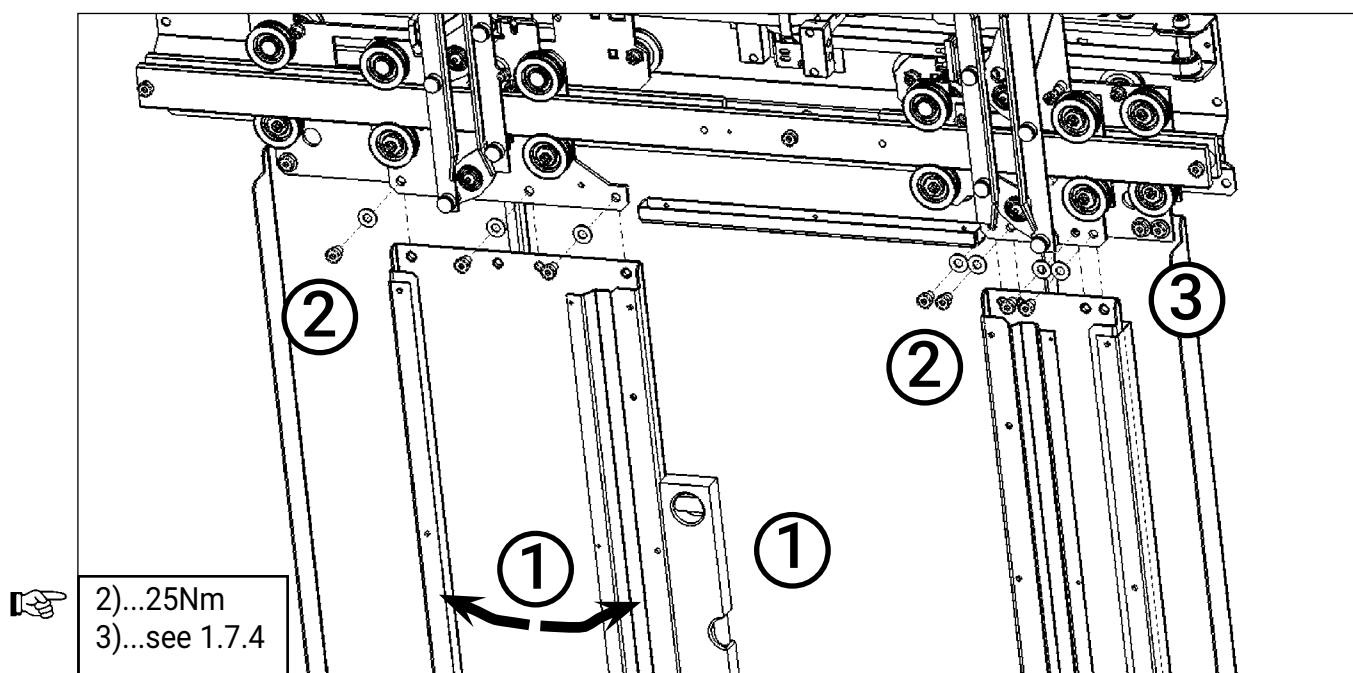

1.7.5 Adjustment of the narrow door panels (asymmetric door)

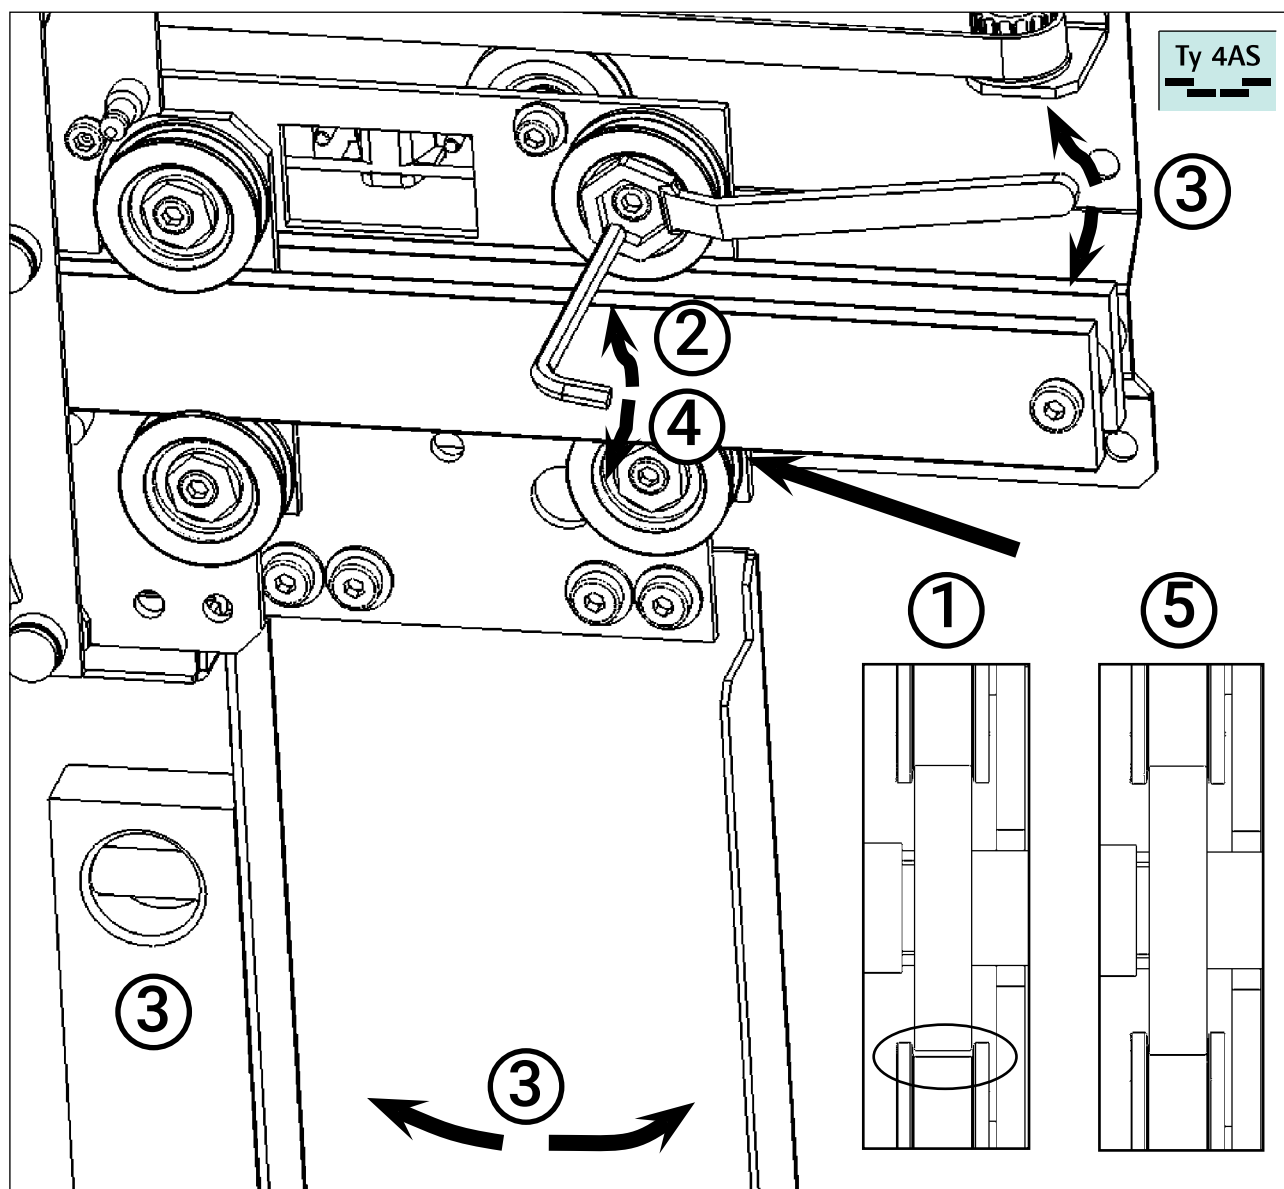

- 1) Relax counter roller
- 2) Relax hexagon screw
- 3) Adjust the door panel
- 4) Fix the hexagon screw
- 5) Adjust the counter roller (for all counter roller available; tighten the counter roller with the hexagon screw so, that it is still barely rotatable)


1.8 TOE GUARD ASSEMBLING

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

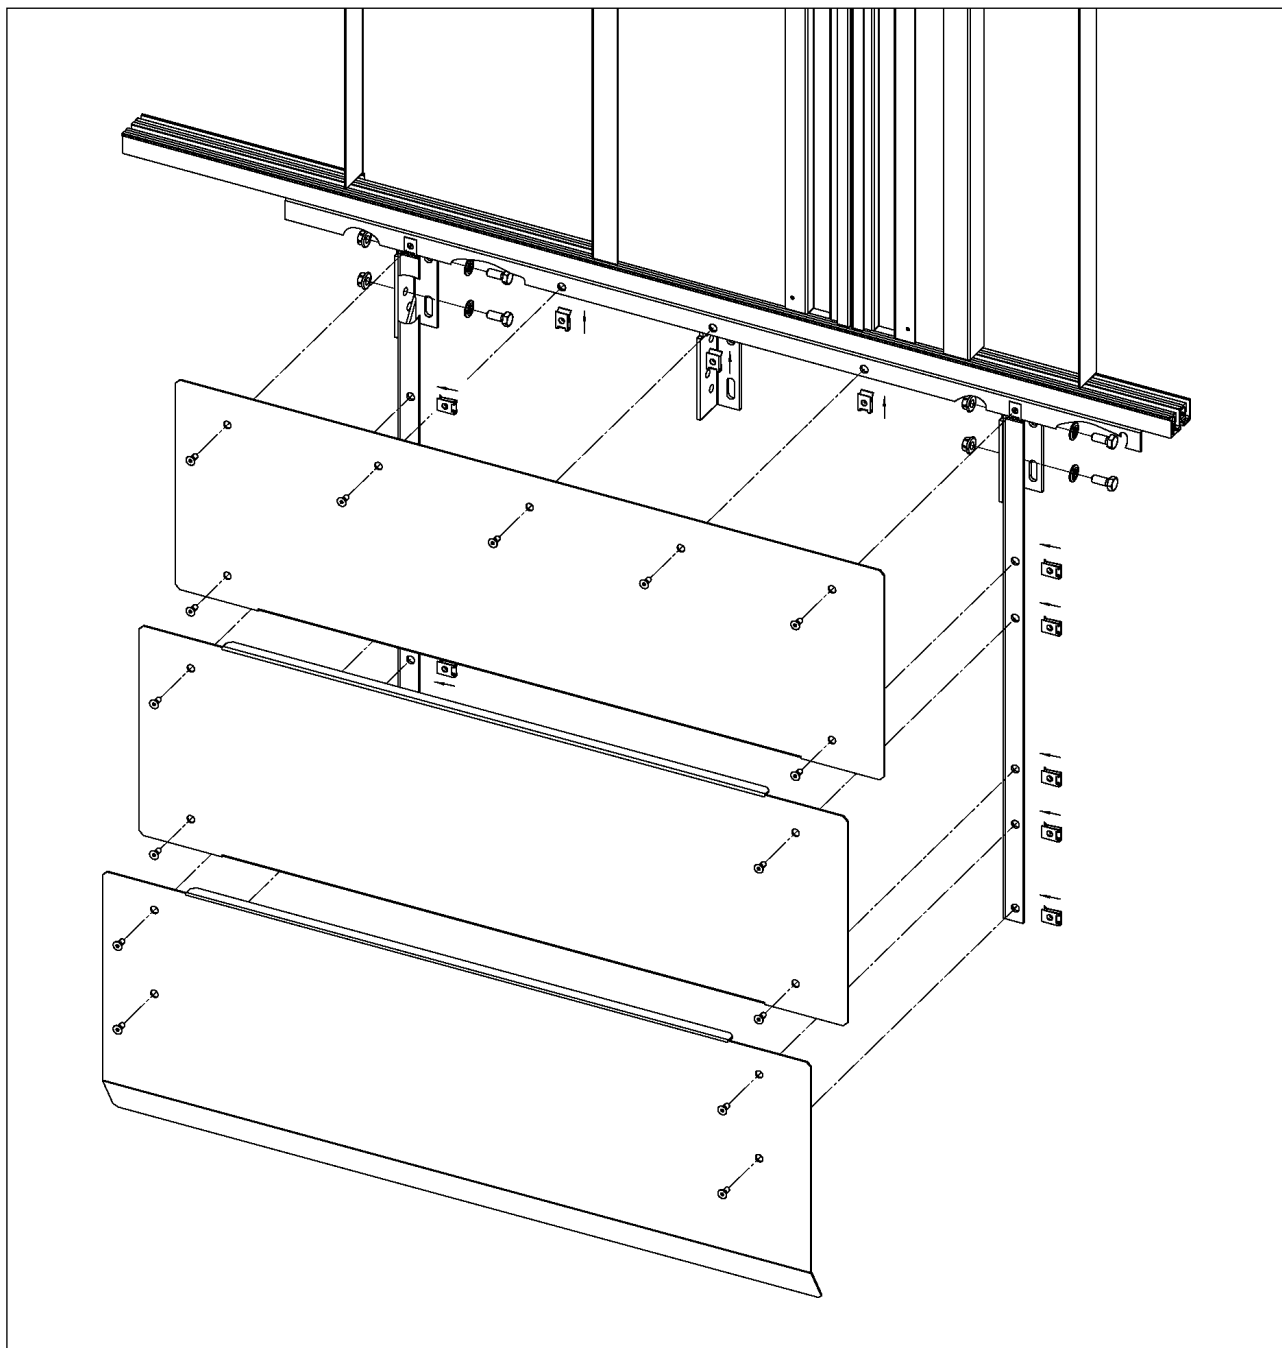


1.9 PLACING THE MECHANISMS ON THE THRESHOLDS

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

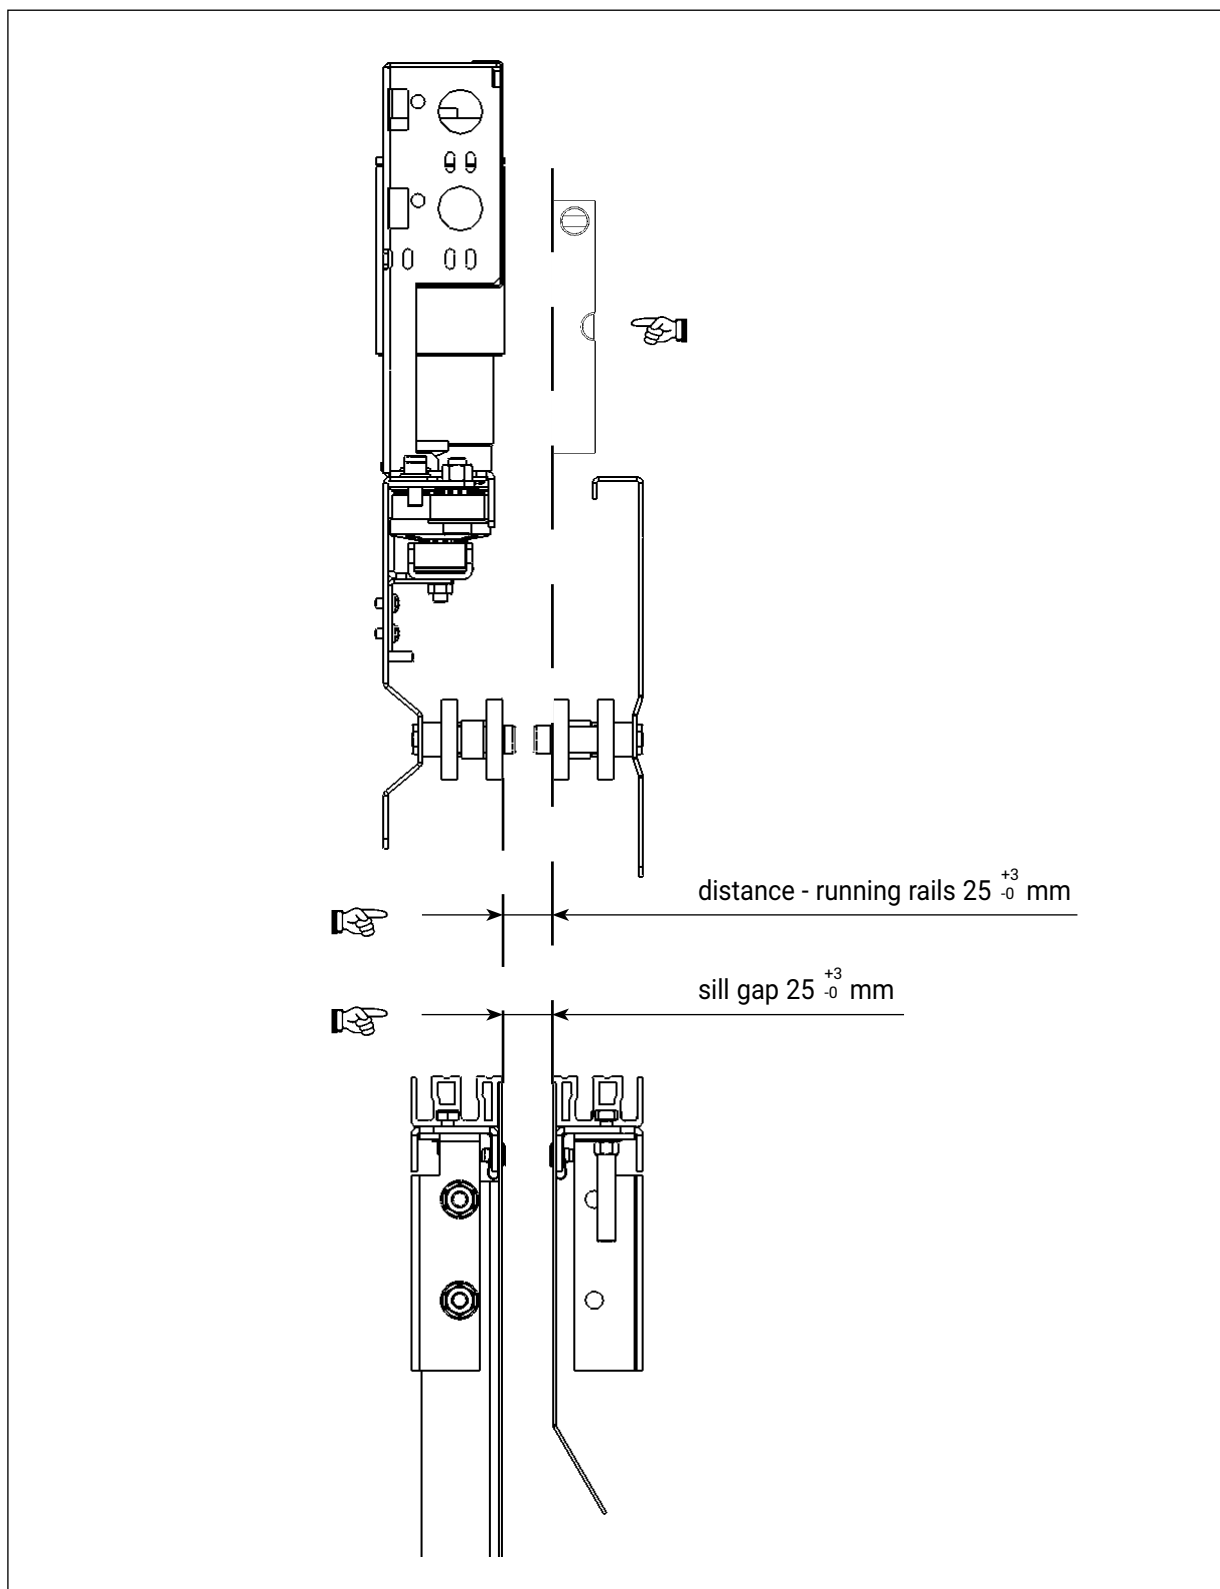


1.10 ASSEMBLY OF THE PANEL BUFFERS

Ty 02/C

Ty 12/R-L


Ty 4S

Ty 4AS

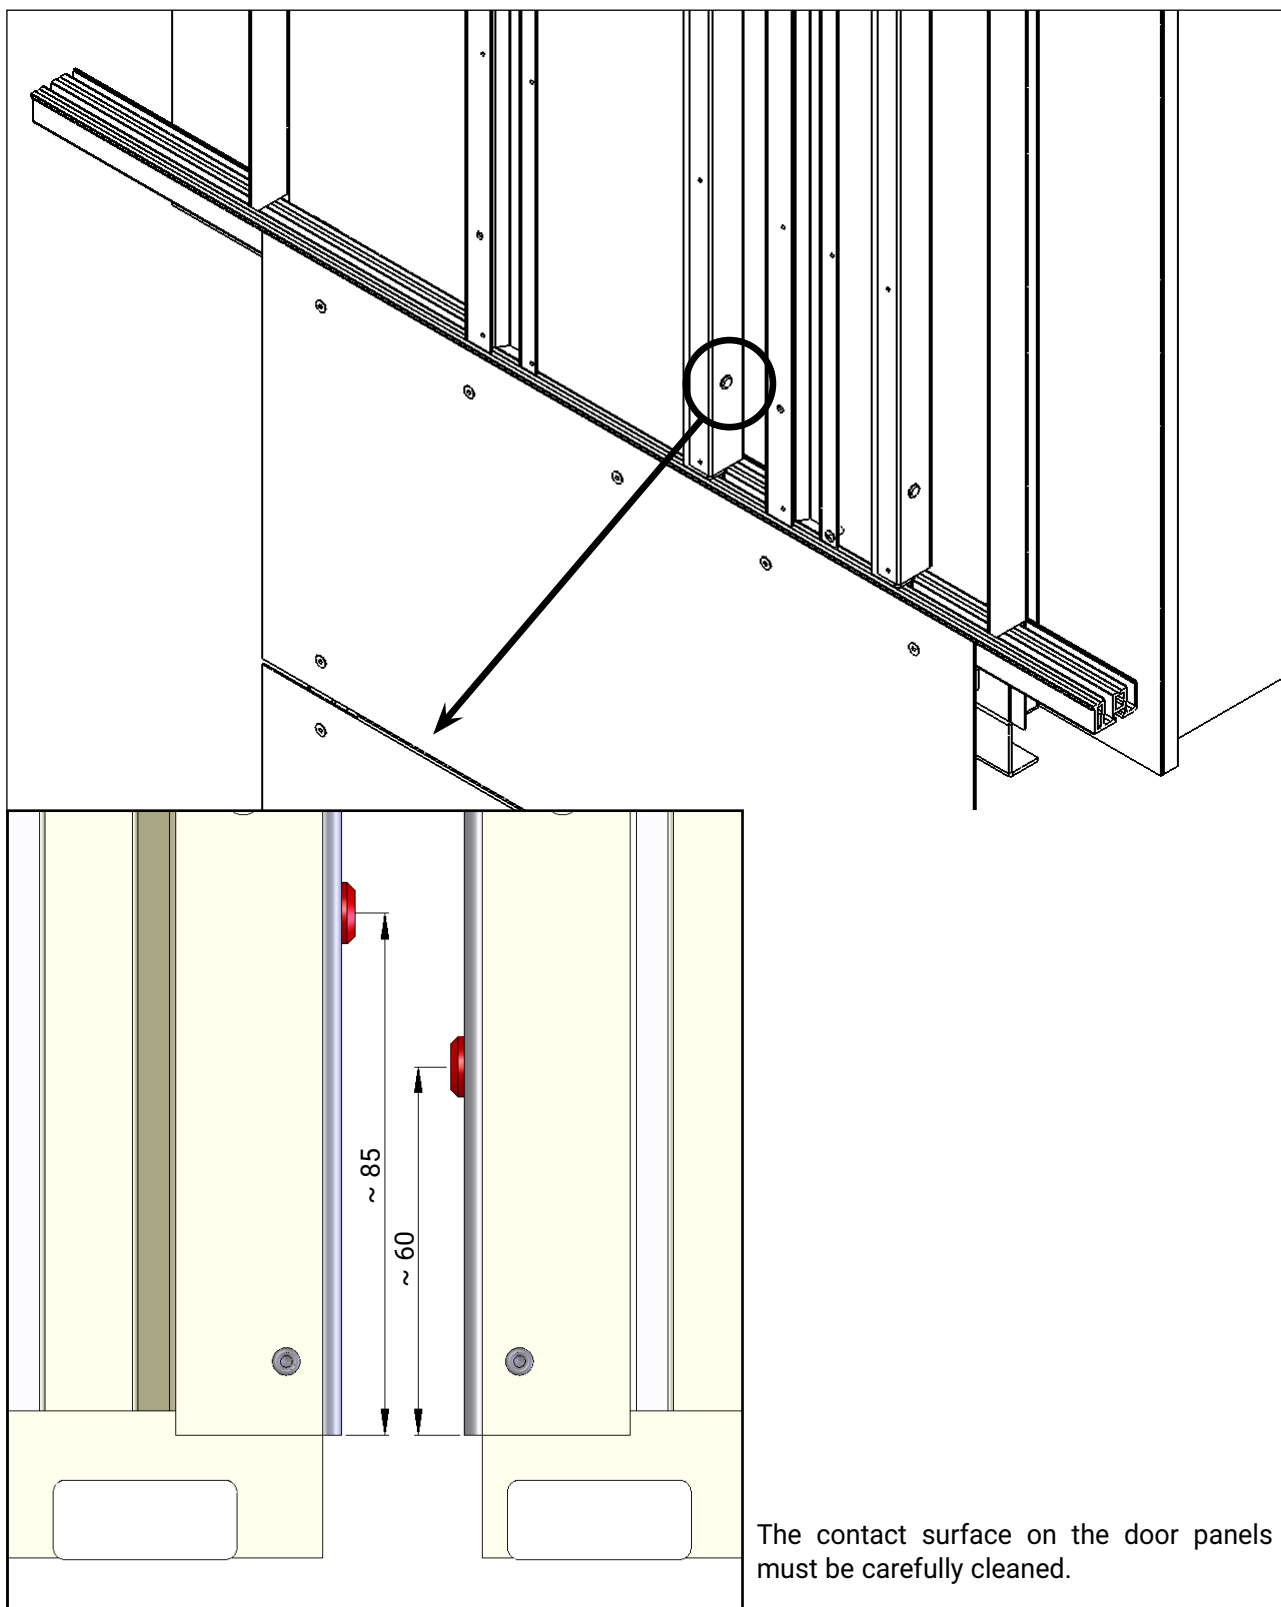


1.10.1 Assembly of the panel buffers

Ty 12/R-L

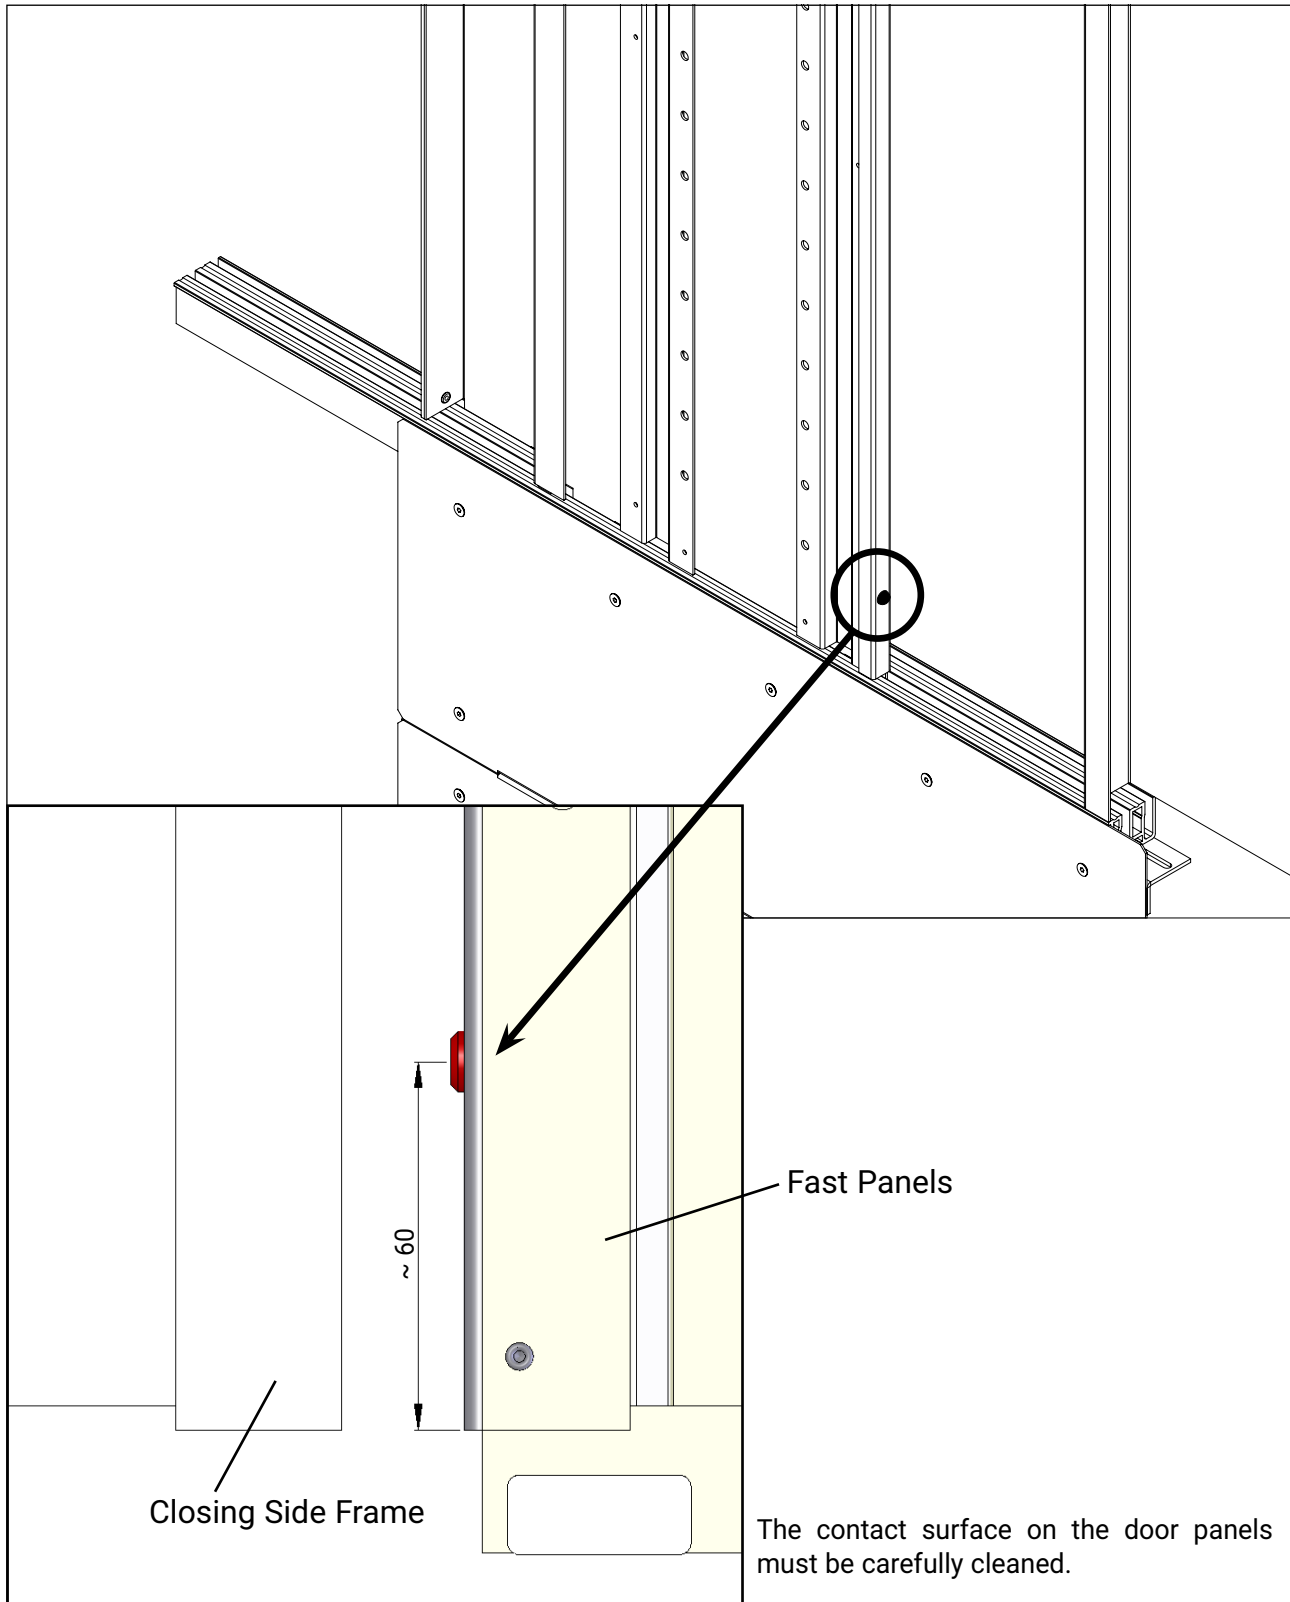


1.11 ASSEMBLY OF THE INFILLPLATE


1.11.1 Asymmetric Door

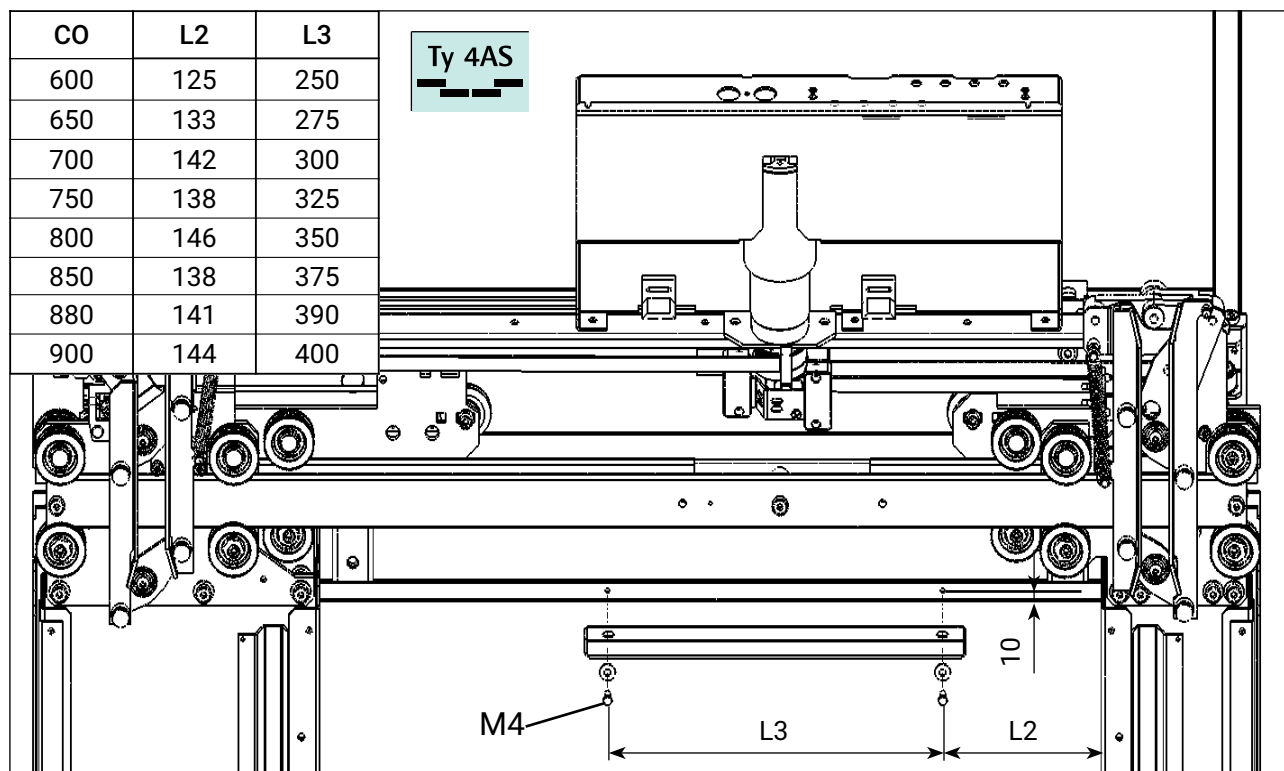

1.11.2 Symmetric door

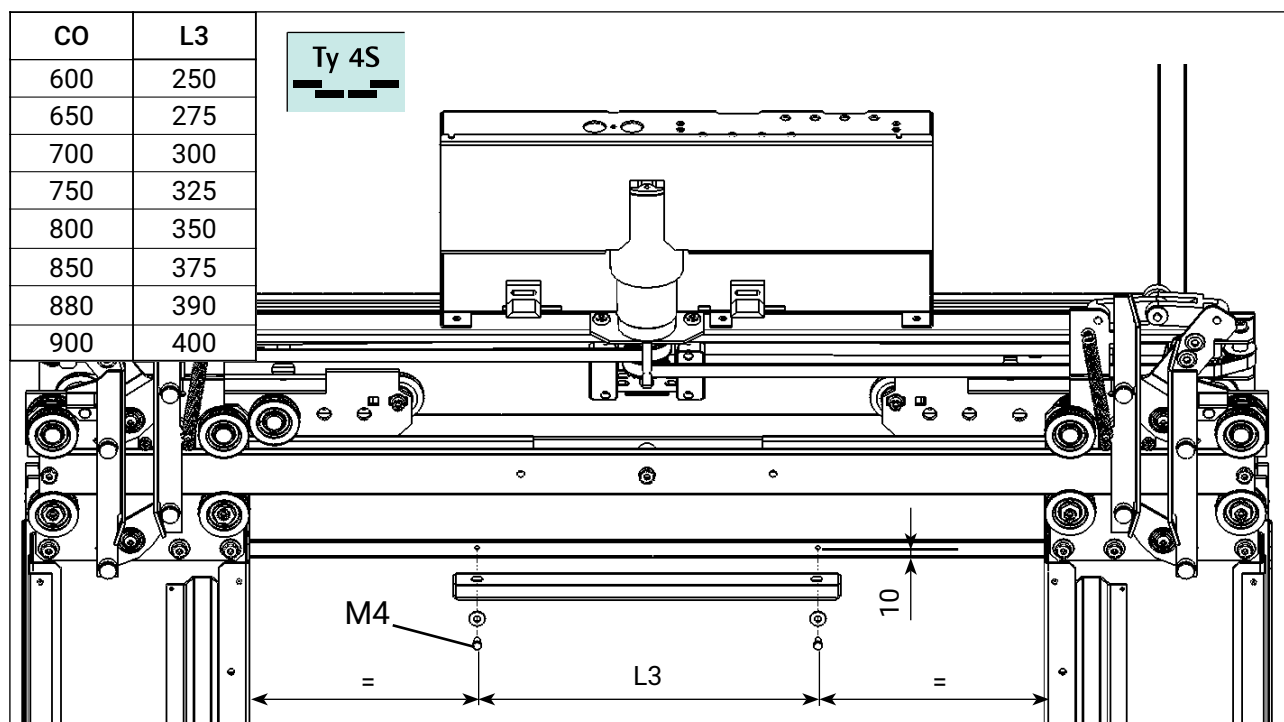

1.11.3 Side opening landing door Lintel

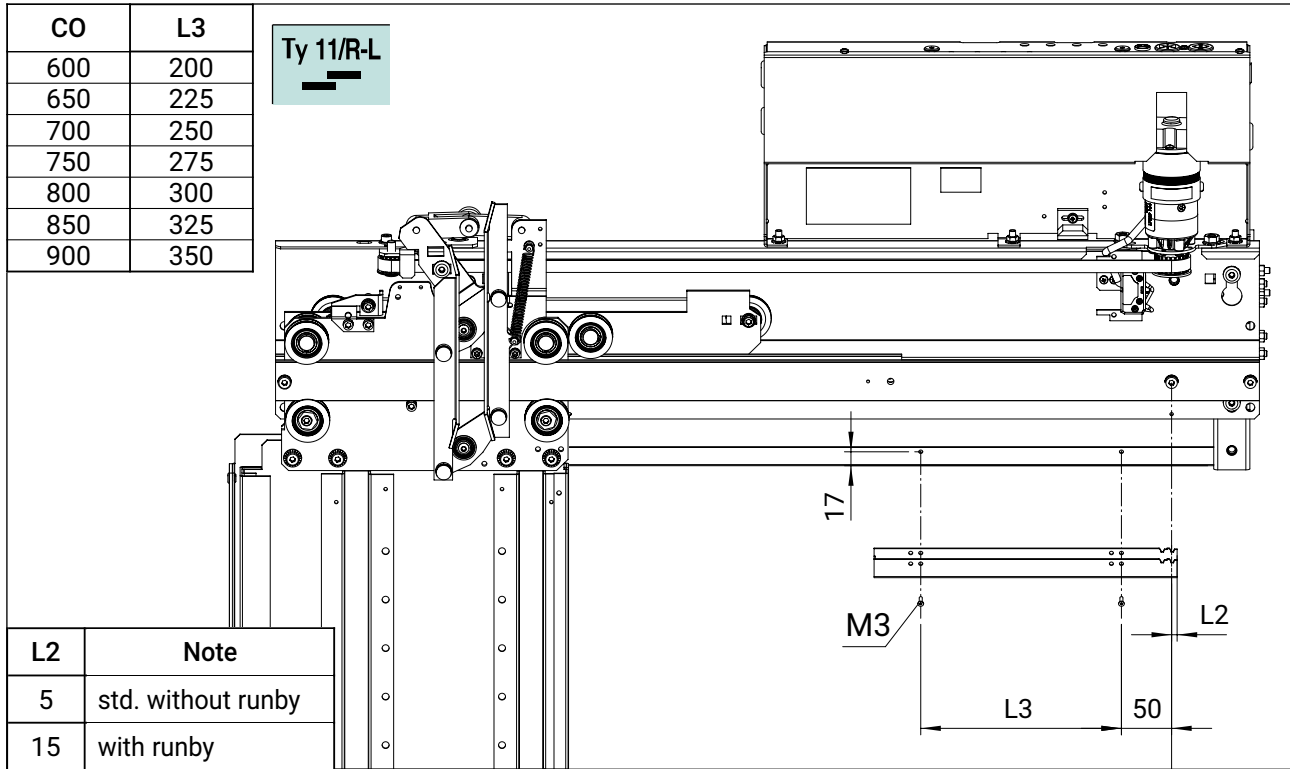

1.12 ASSEMBLY OF THE LIGHT SENSOR SYSTEM


Ty 02/C

Ty 12/R-L


Ty 4S

Ty 4AS


1.12.1 Preassembly

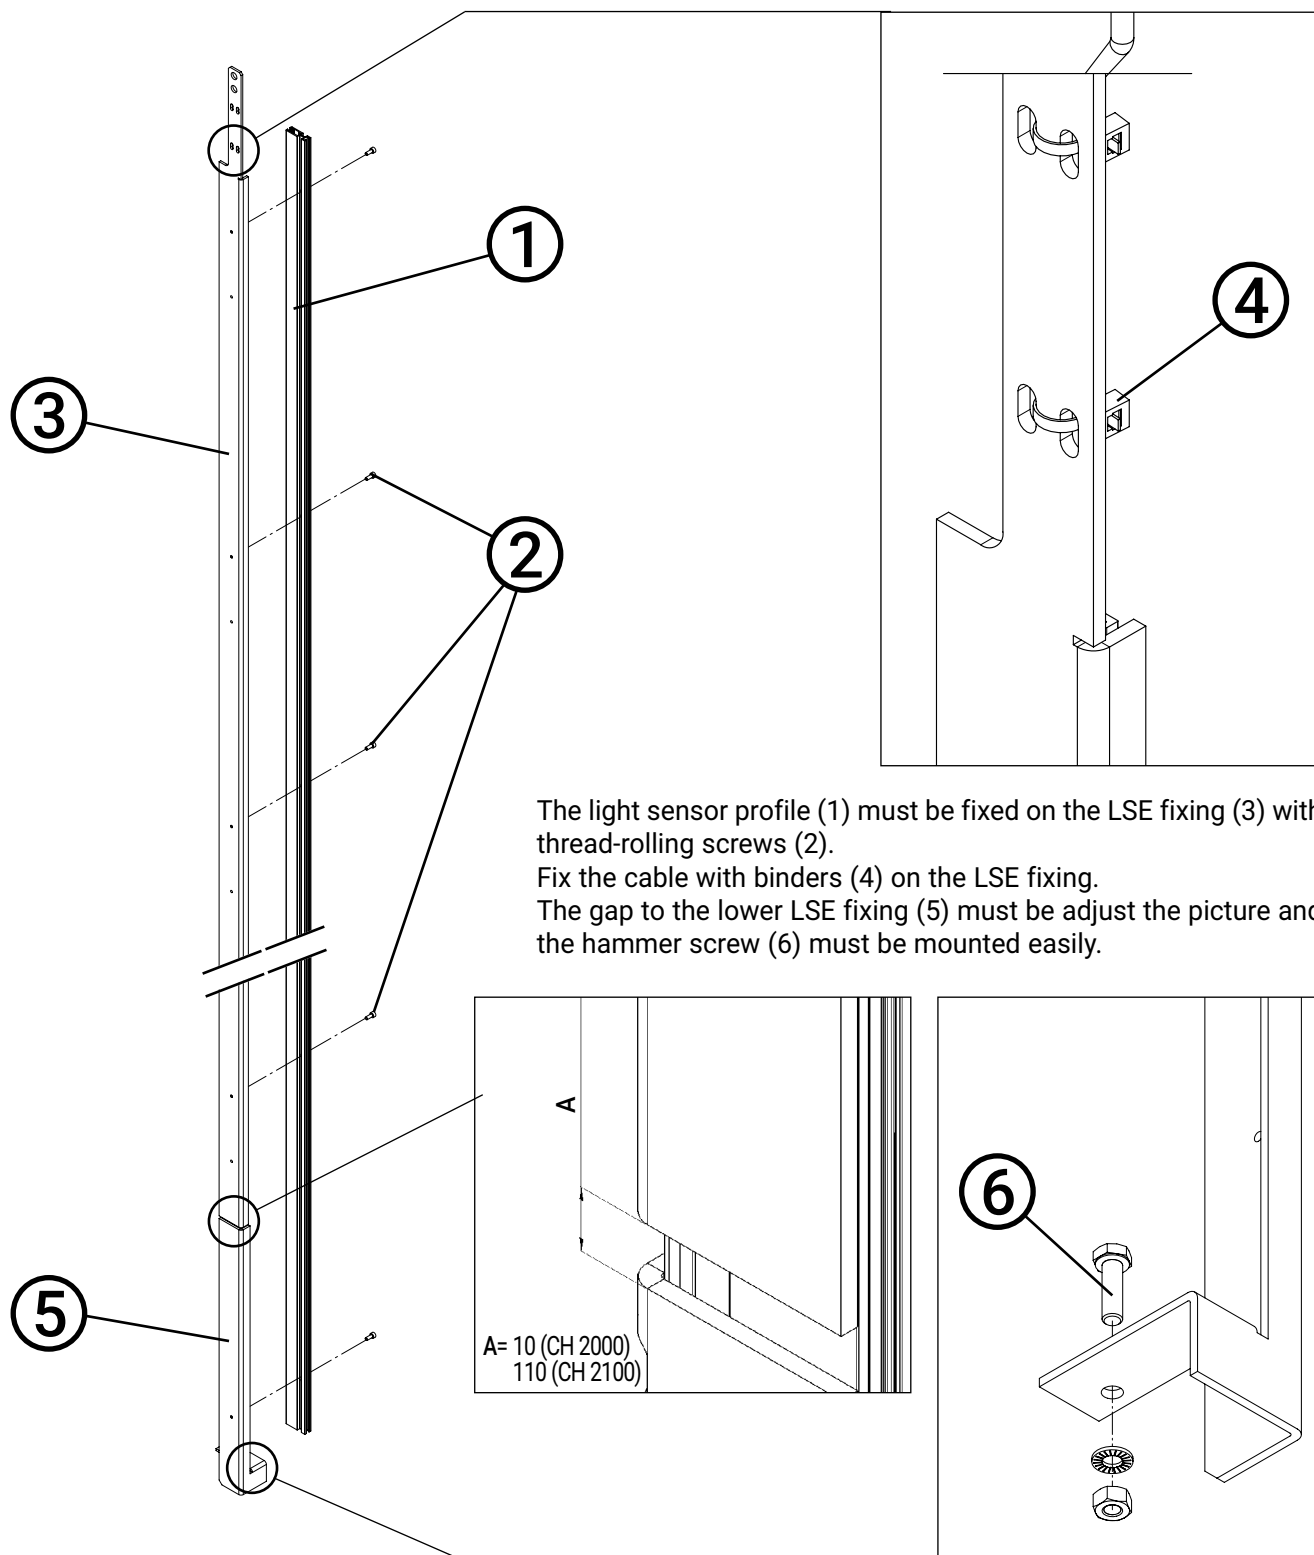

1.12.2 Assembly on the operator

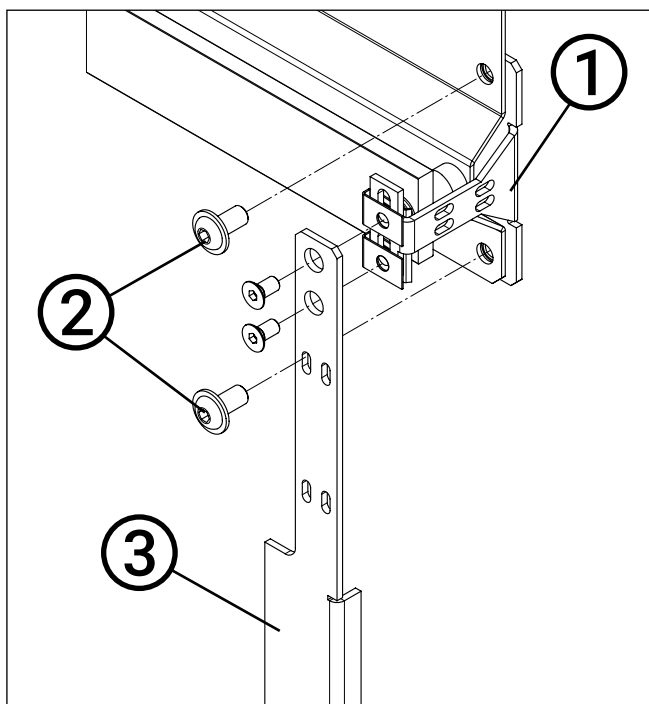

Fix the LSE bracket (1) with the screws (2).
Accordingly mount the pre-assembled LSE fixing (3)
on the LSE bracket without fixing the screws completely.
Fix the cable on the LSE bracket official the picture.

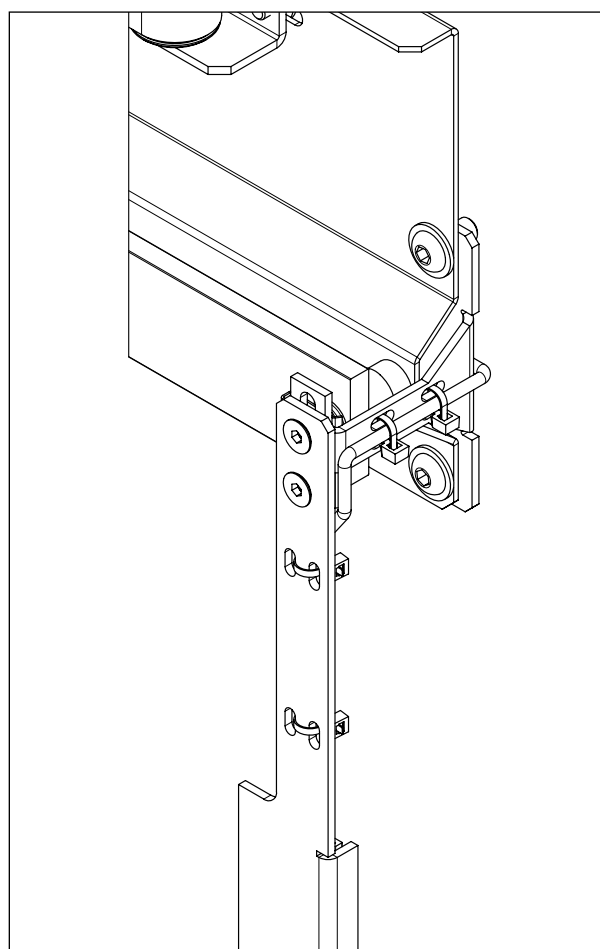

1.12.3 Assembly on the sill




Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

The lower LSE fixing (4) must be moved into the sill (5) from the side so that the screw can be mounted with the sill.

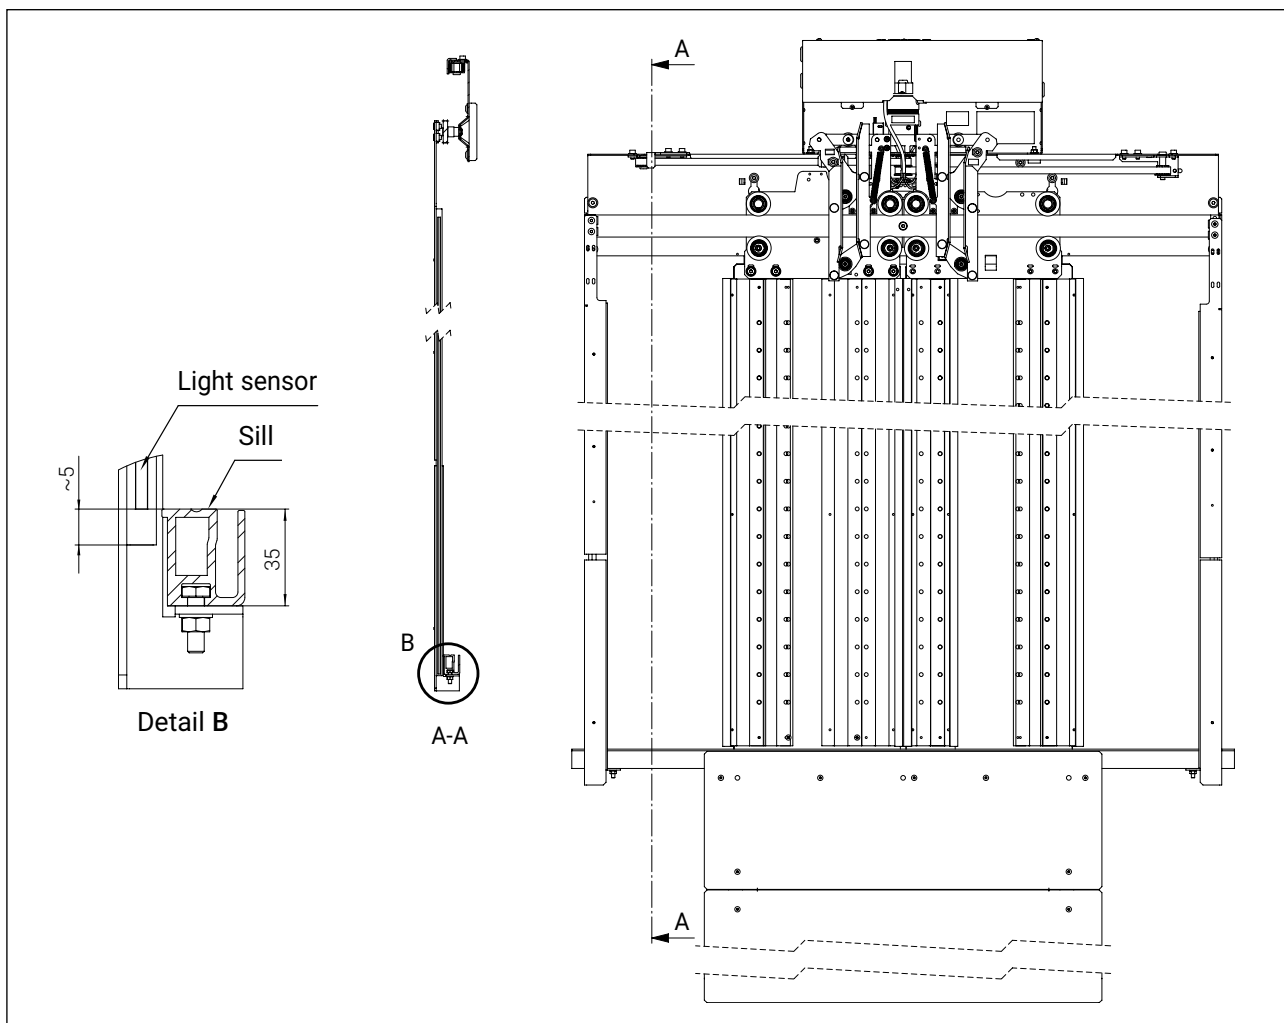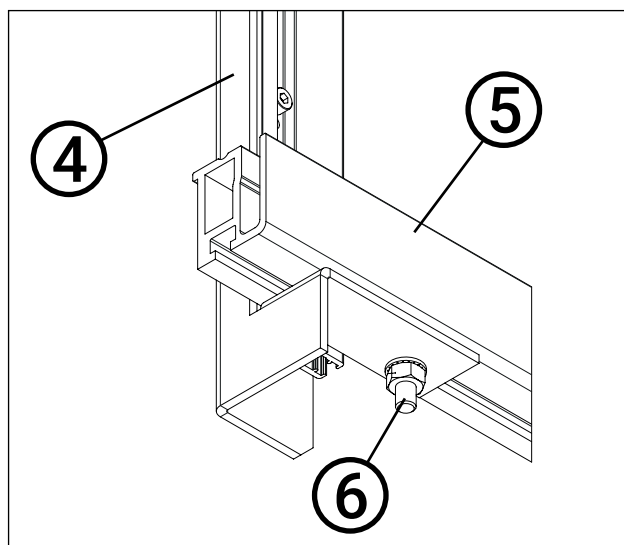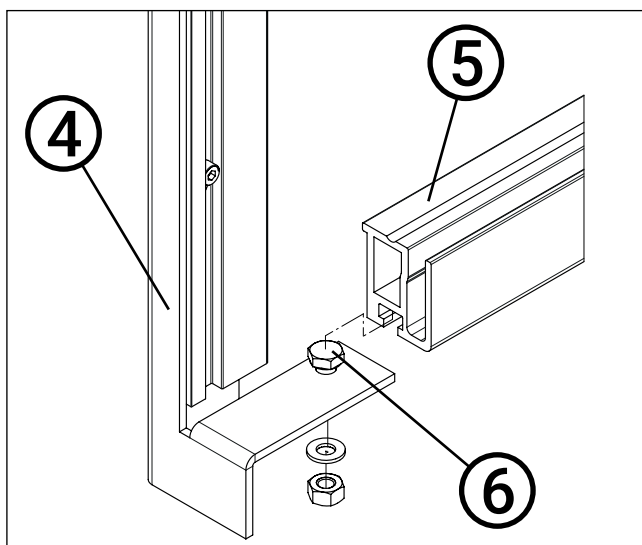


1.13 ASSEMBLY OF THE PANEL- AND SILL EXTENSION

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

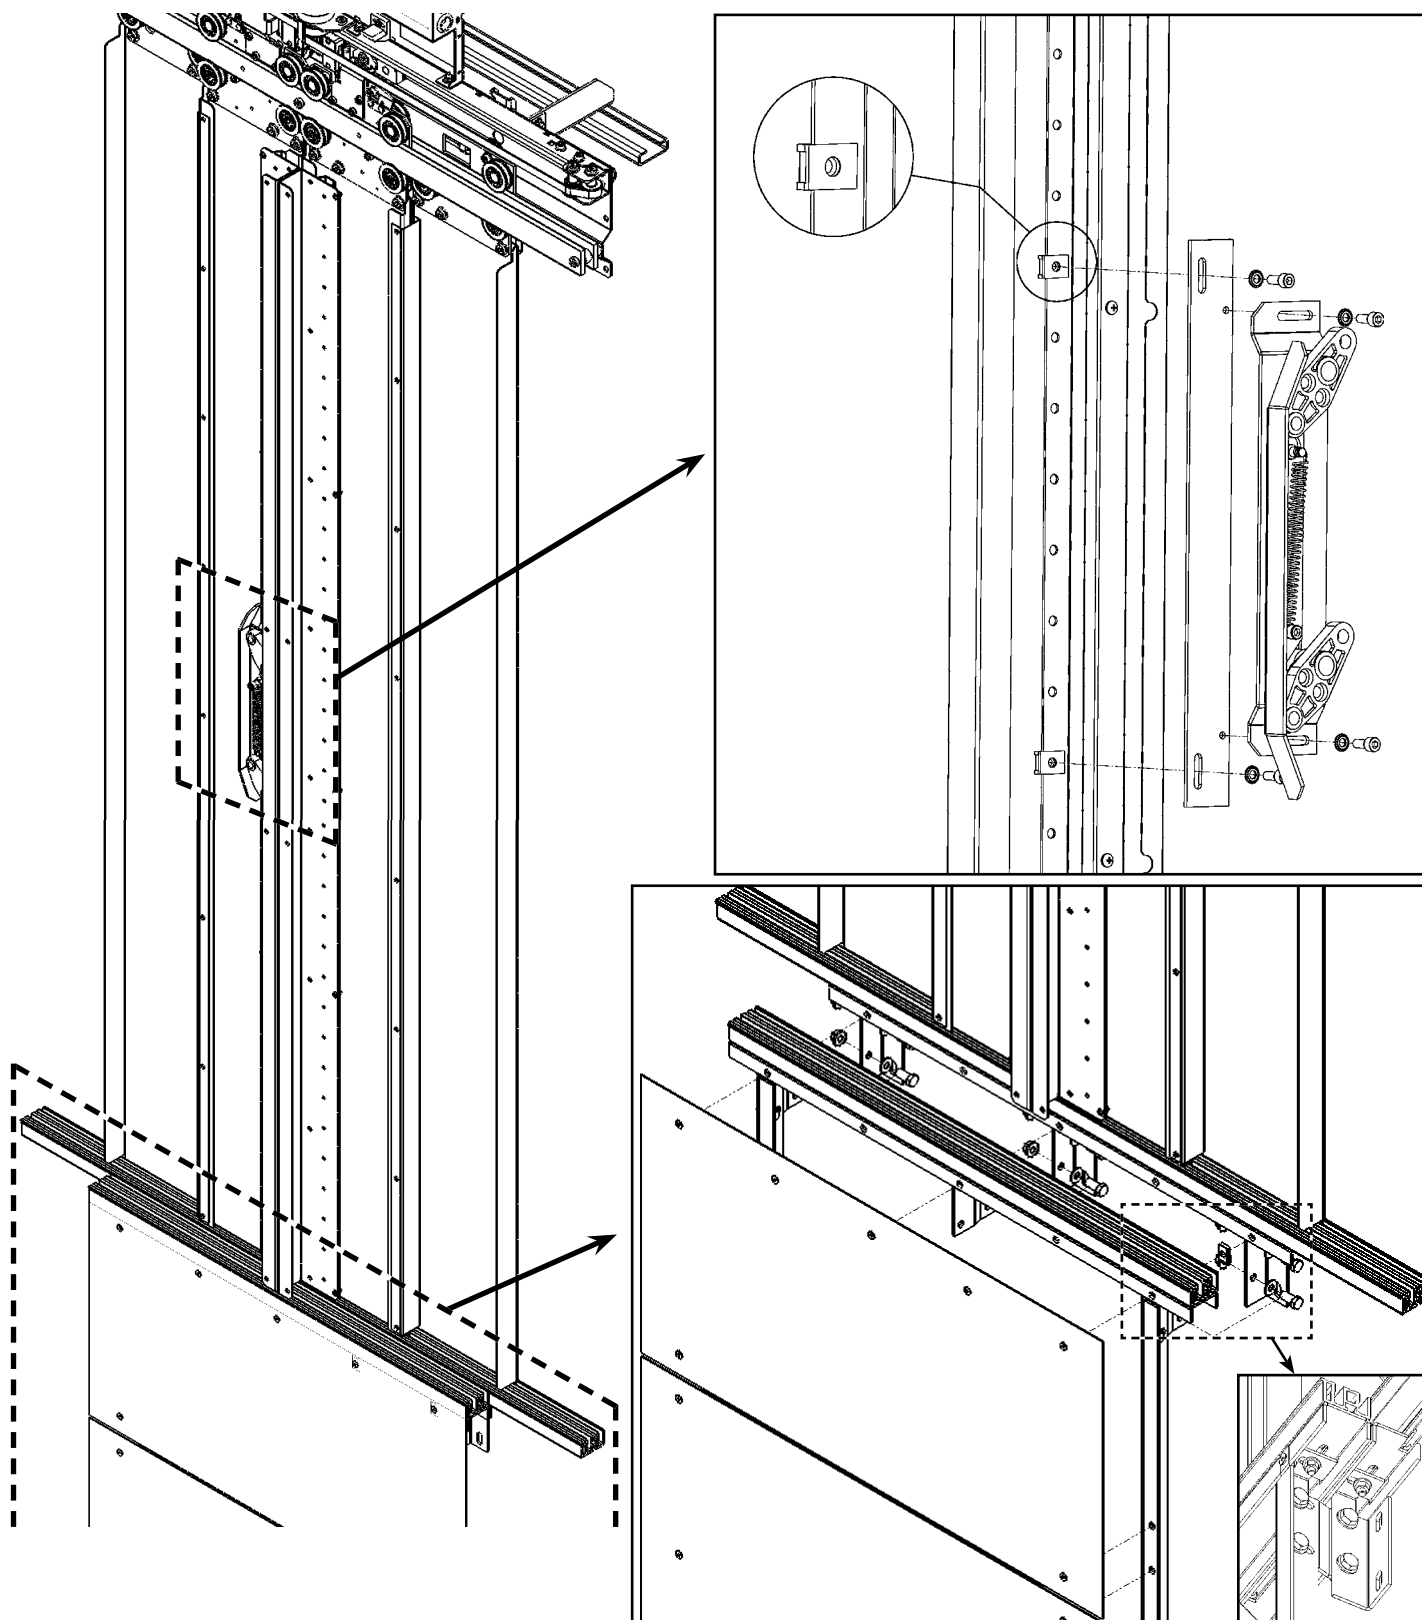


1.14 COUPLER WITH CAR DOOR LOCK

Car stops in door zone:

The landing rollers are detected. They operate the lock vane and the latch opens.


Car stops out of door zone:

No landing rollers are detected. The lock vane is not touched and the latch keeps closed.


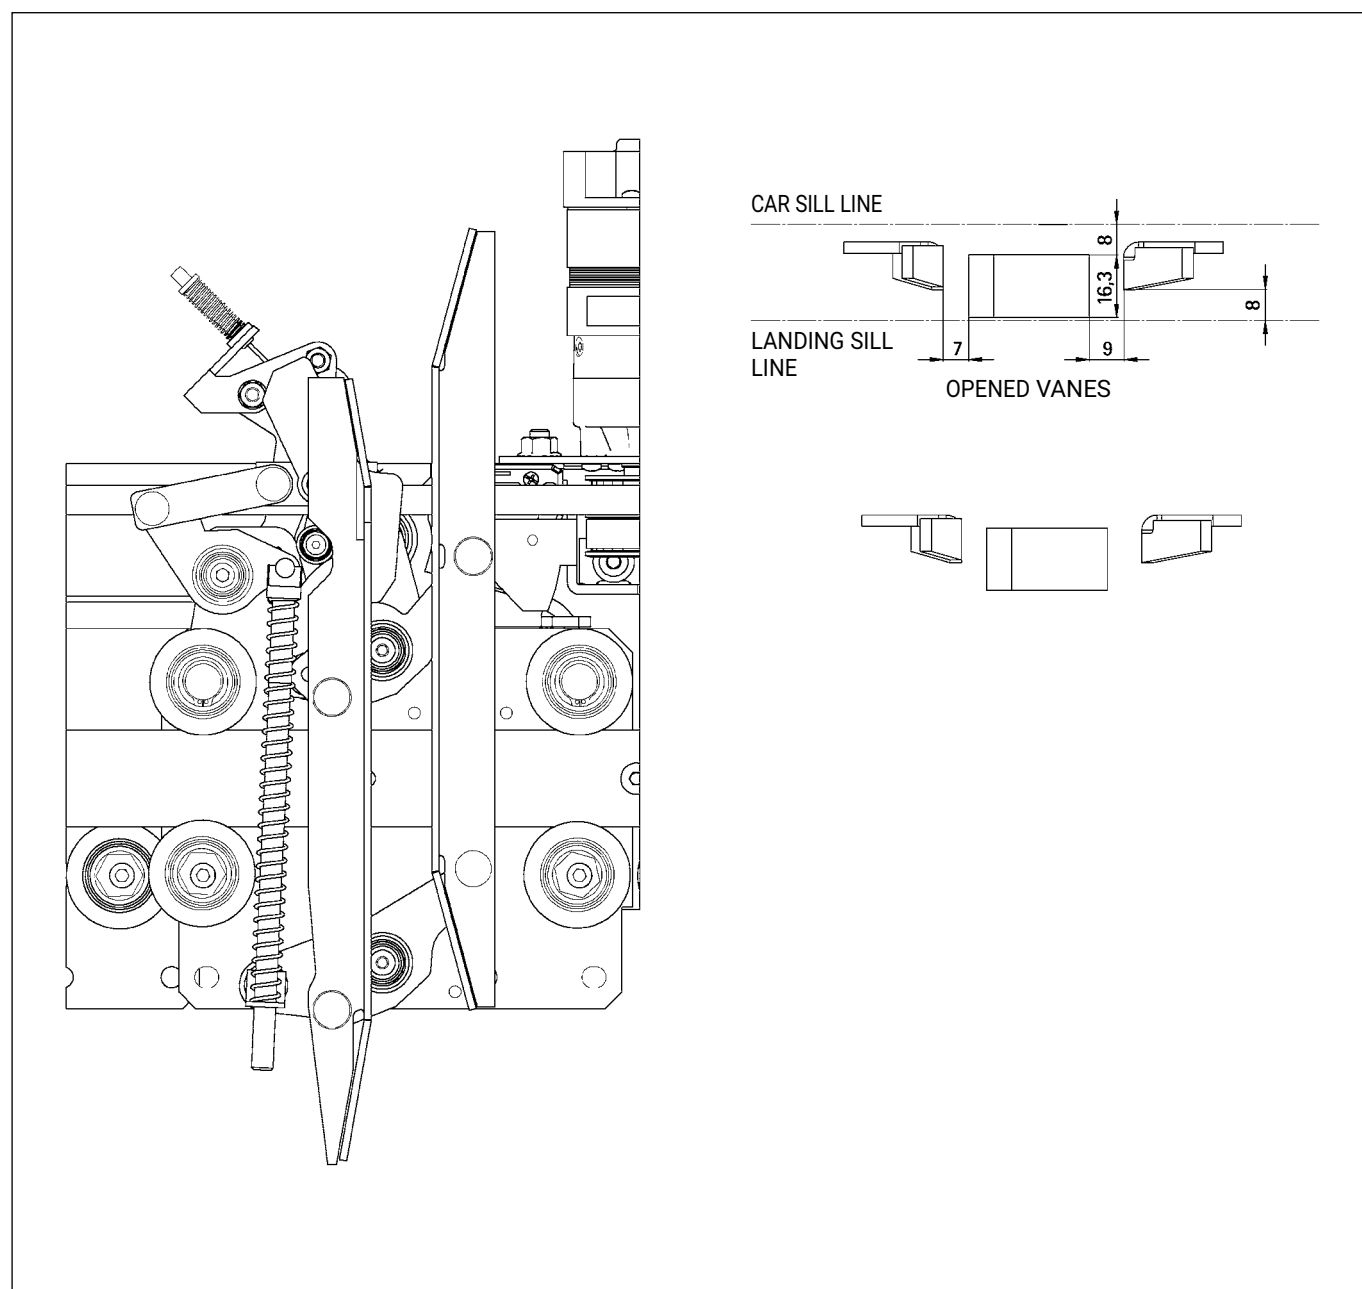


1.15 EMERGENCY OPENING DEVICE FOR COUPLER WITH CAR DOOR LOCK

The rope of the car door emergency opening device is fixed to the bottom end of the door panel. By pulling the rope, the car door lock is unlocked.

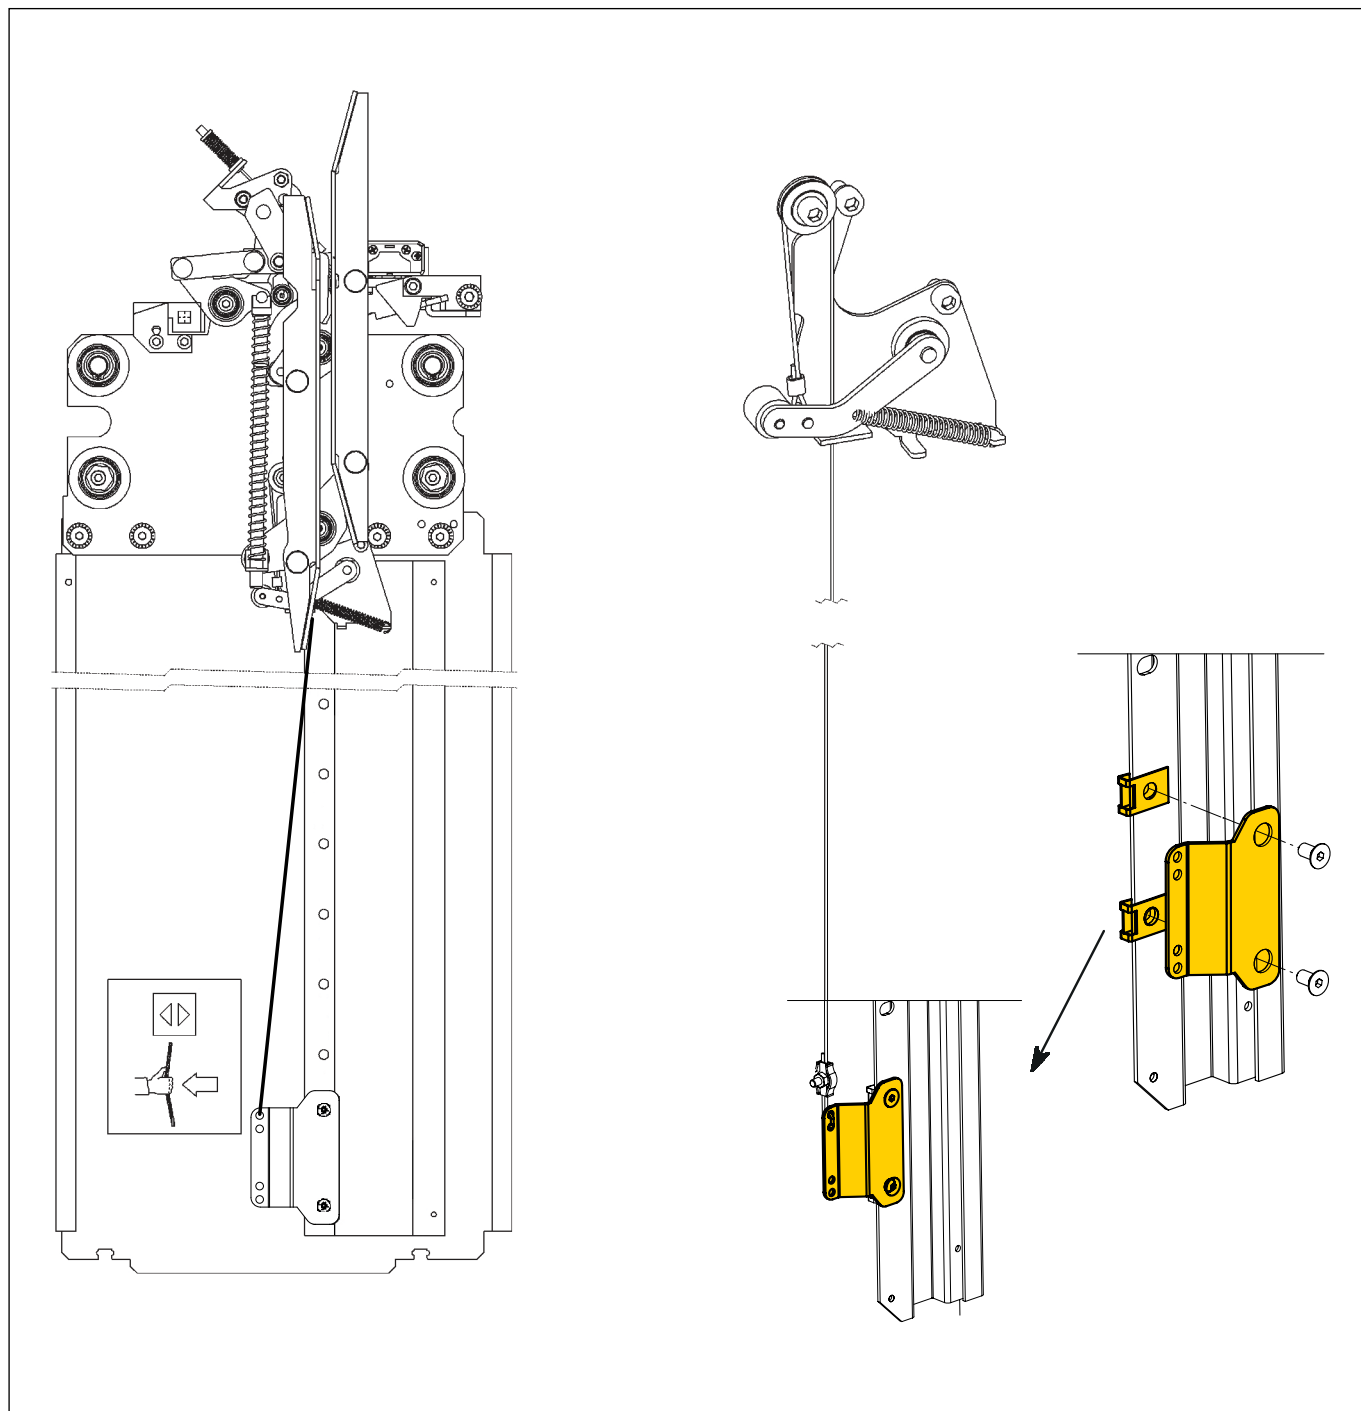

1.16 CAR DOOR LOCK

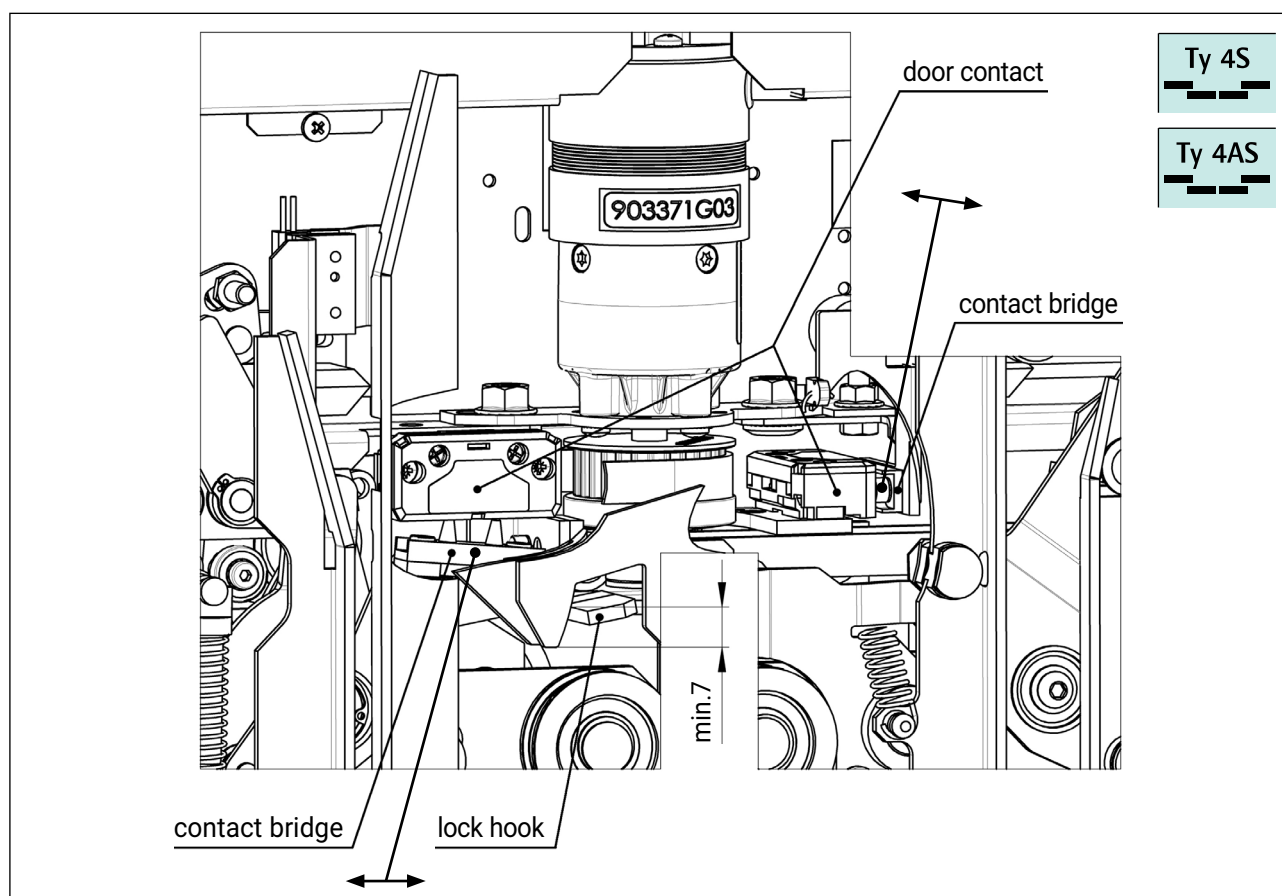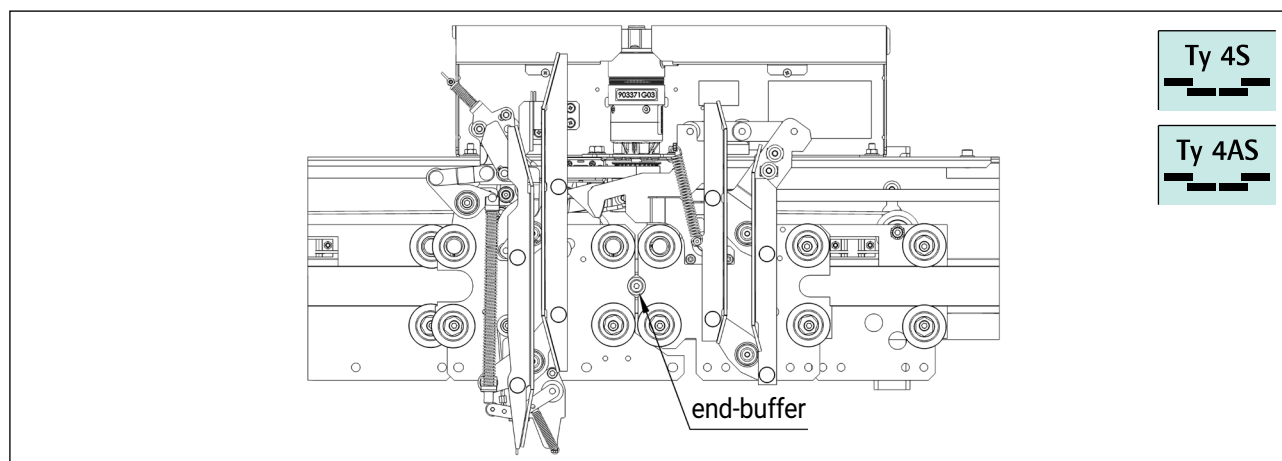

Check car door lock

- Both hanger plates must touch end-puffer in close end;
- Mechanical overlap between lock hook and lock notch must be min. 7mm when electrical close indicated.

Contact bridges must fit properly into the door contact

- Contact bridges can be adjusted (see picture).

Subject to change without notice!

1.17 INSTRUCTION ON HOW TO KEEP THE DOORS IN GOOD OPERATING CONDITIONS



To prevent failure or malfunction and keep the system efficient, it is necessary to regularly check for technical degradation and ensure that the conditions required by current regulations are maintained.



After ending the door assembly the running surfaces of the running rails and the guiding - and counter roller has to be cleaned.

Degradation can depend on a variety of factors, such as:

- Work intensity
- Age of product
- Volume of panels
- Weather and environmental conditions (xx)
- Cleanliness of the room
- Correct maintenance
- Etc.

And may involve:

- Play/interference between the panels and between panels and jambs in accordance with current regulations
- Play in coupling device
- State/condition of fixing and coupling elements
- Condition of parts subject to wear
- Efficiency of lock and associated contacts
- Anything else that may be affected by the type of application.

For these reasons, the schedule for part replacement cannot be set beforehand.

Ty 02/C

Ty 12/R-L


Ty 4S

Ty 4AS

1.18 TESTING THE FUNCTIONS

1.18.1 Door gap

Check the gap between the door panels, between frame and door panel and the gap to the lintel.

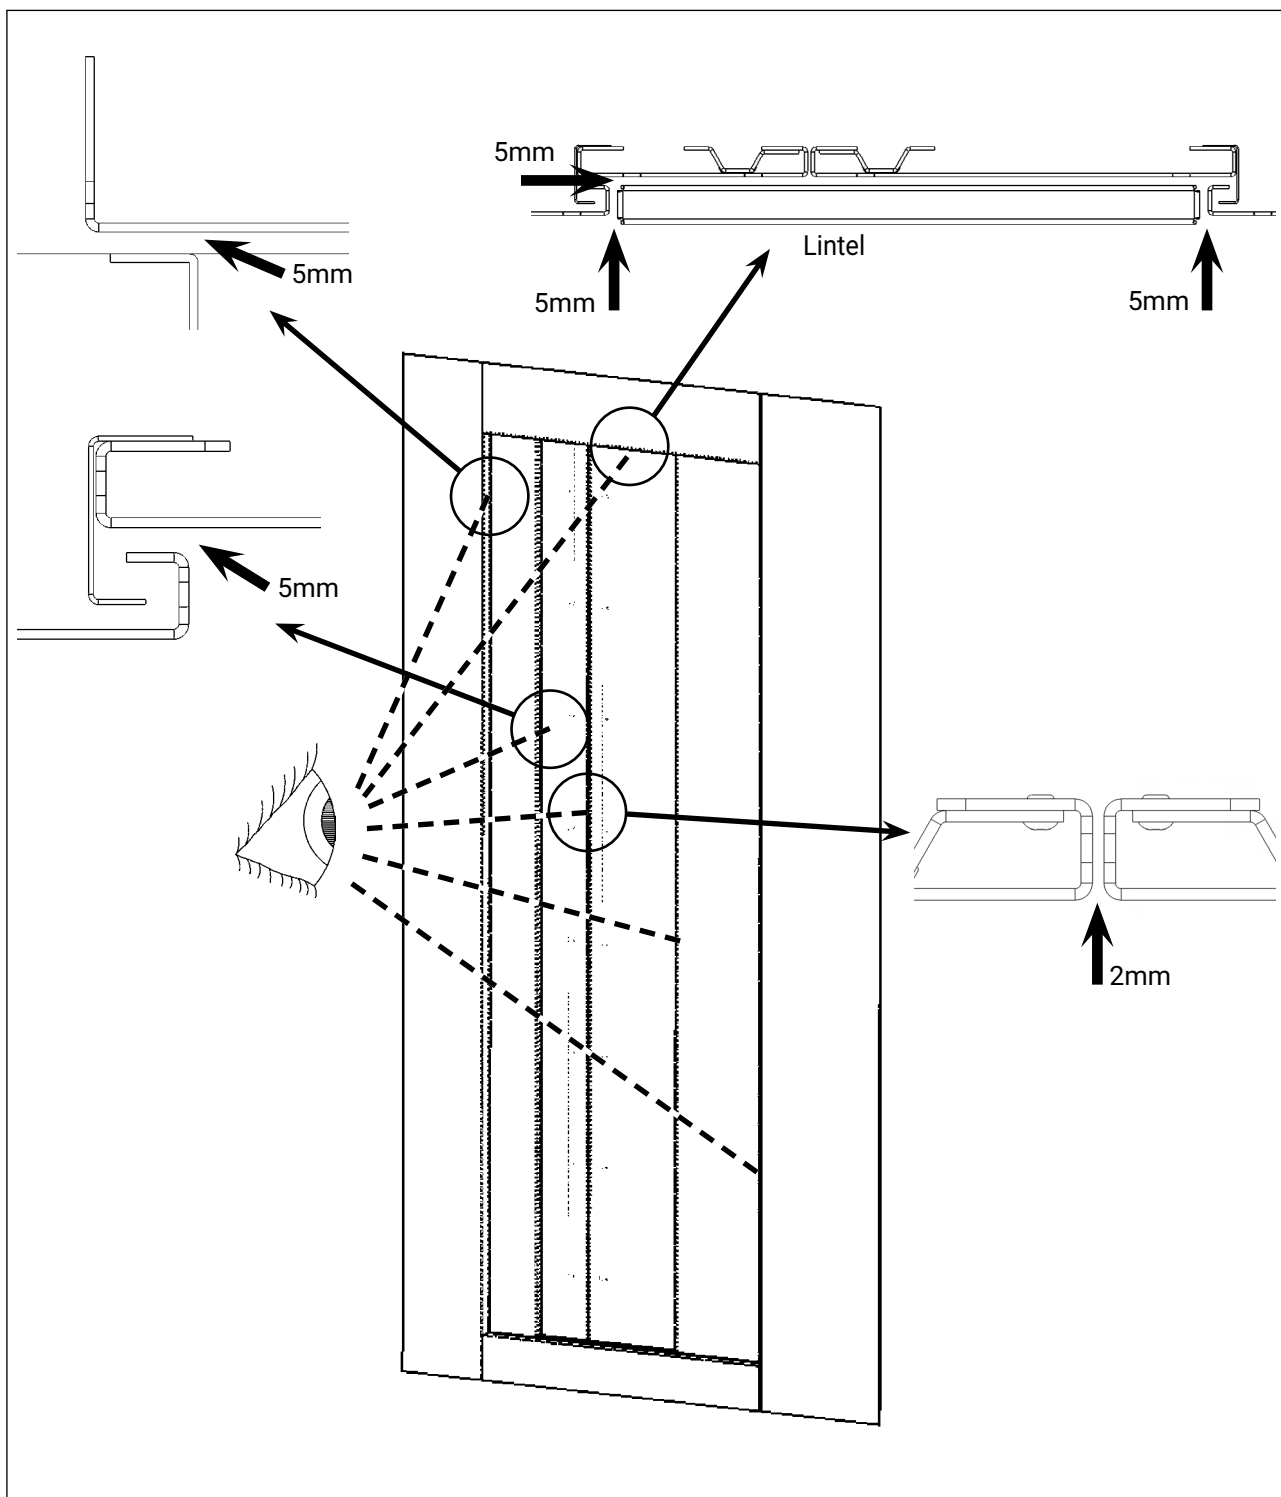

1.19 ADJUSTMENT OF THE OPEN-END POSITION



Ty 02/C


Ty 12/R-L

Ty 4S


Ty 4AS

After adjustment of the clear opening new learning process necessary (see 5.1).

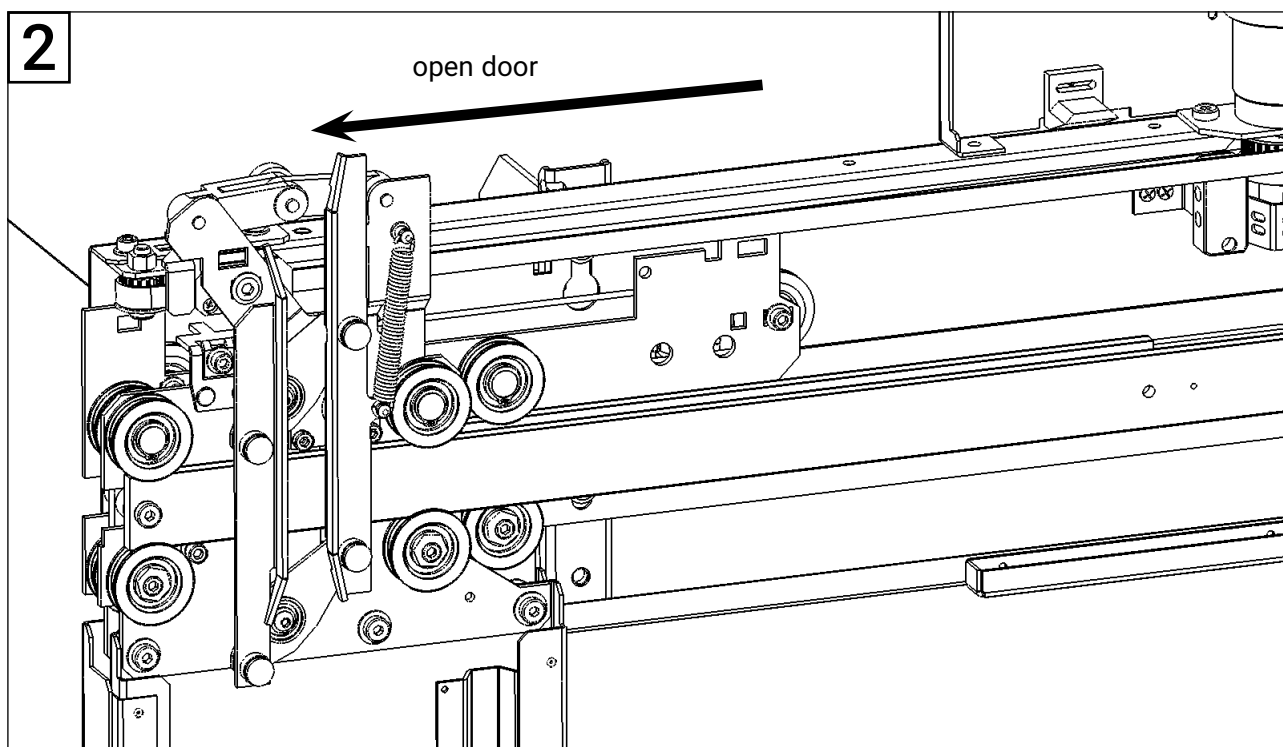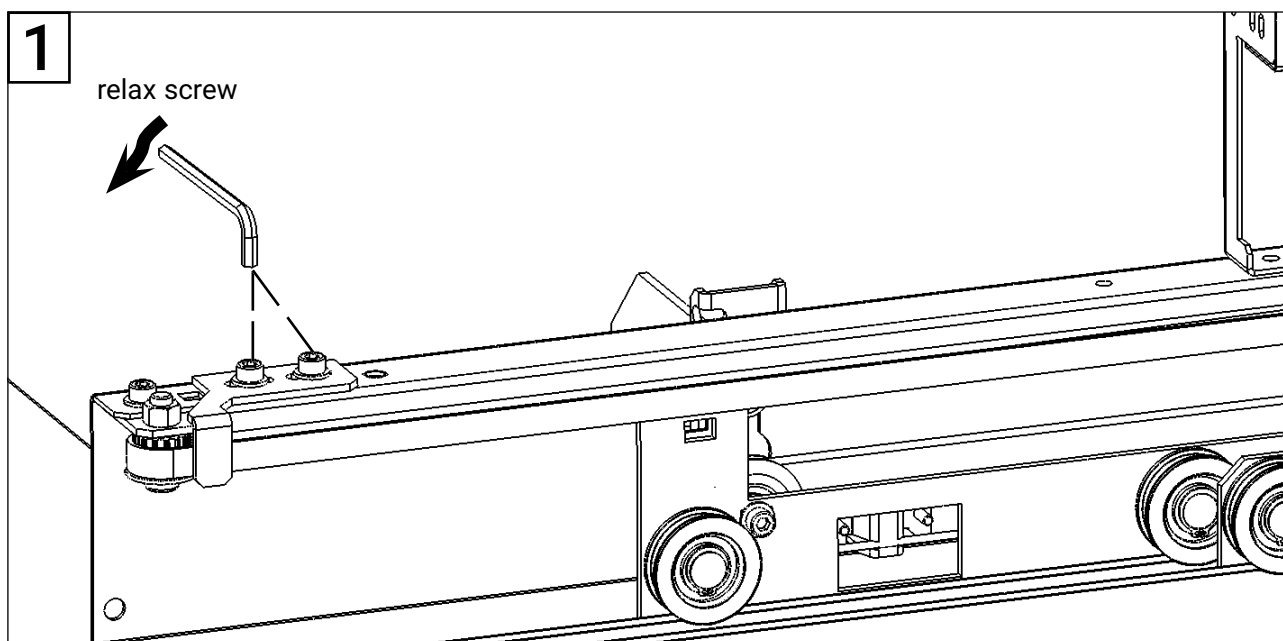

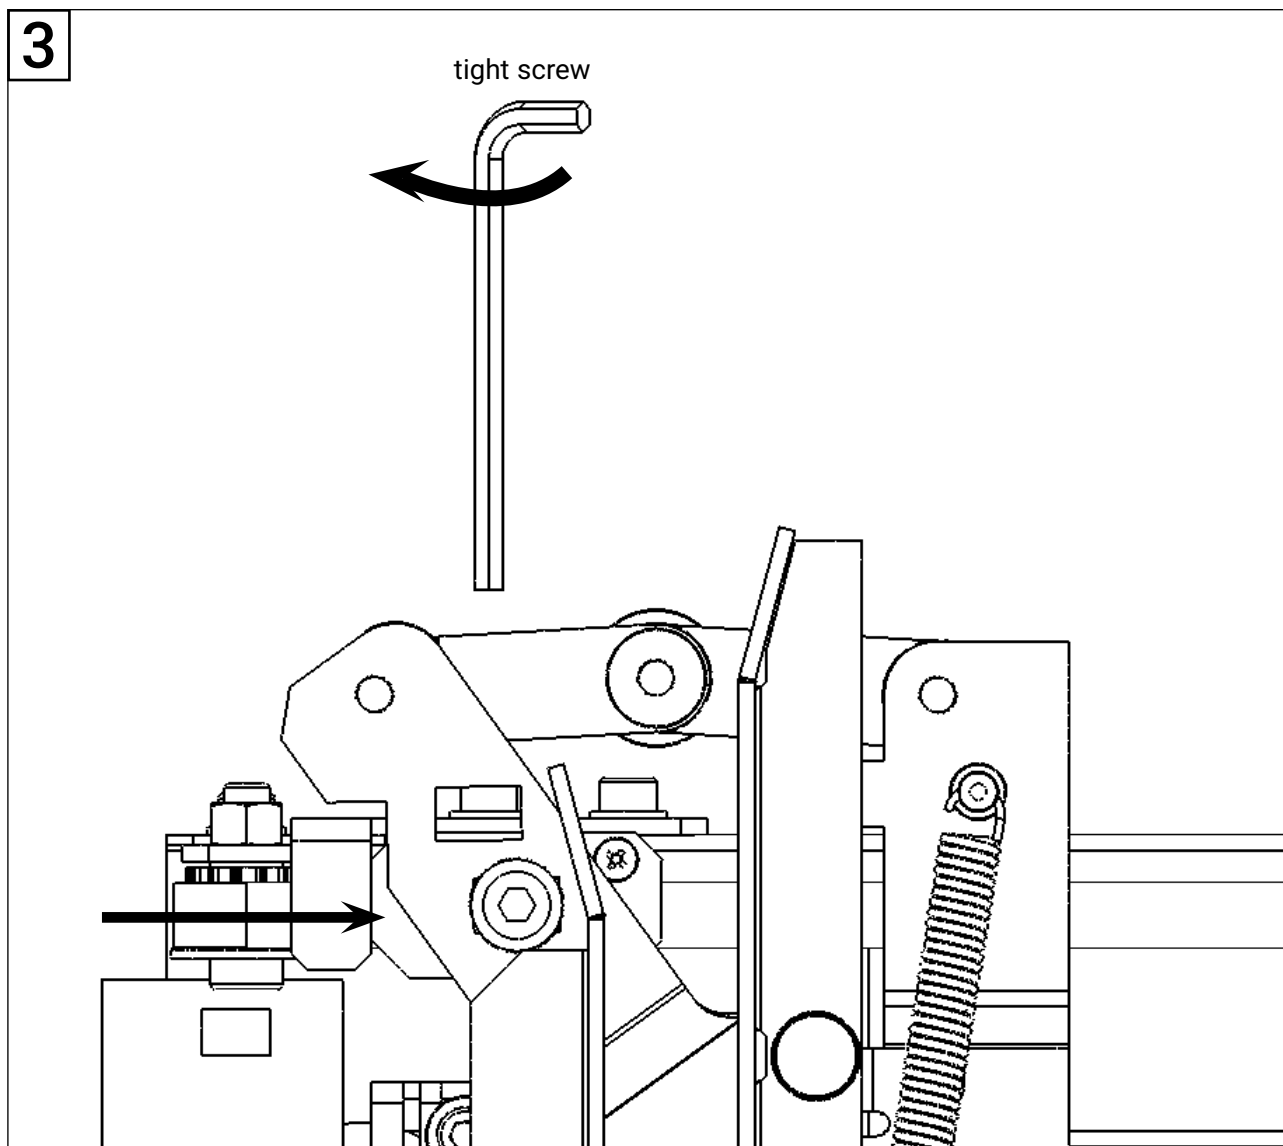

When the door is completely open put the open end bracket against the belt fixing and tight the srew.

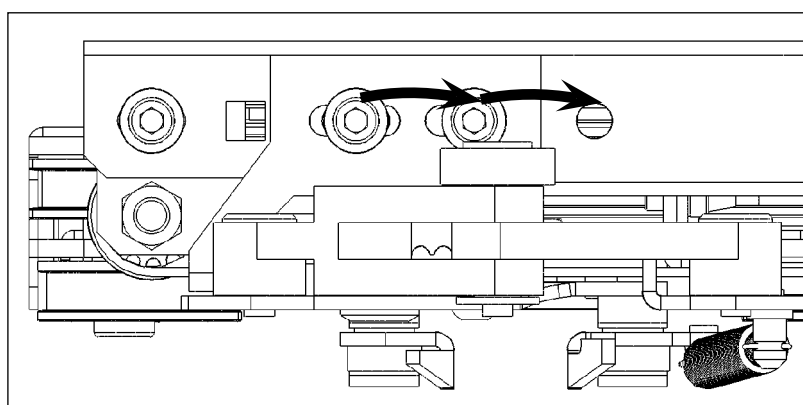

At clear opening 880 the open end bracket must be fixed on the 2 right fixing holes.

2. GENERAL INFORMATION PRIOR TO INSTALLATION

2.1 DESCRIPTION AND FUNCTION

Ty 02/C


Ty 12/R-L

Ty 4S

Ty 4AS

ECO+ door drives are used for low and mid duty elevators. The Drive can move panel masses up to 130kg complete door package weight.

3. ELECTRONIC ASSEMBLY LAYOUT

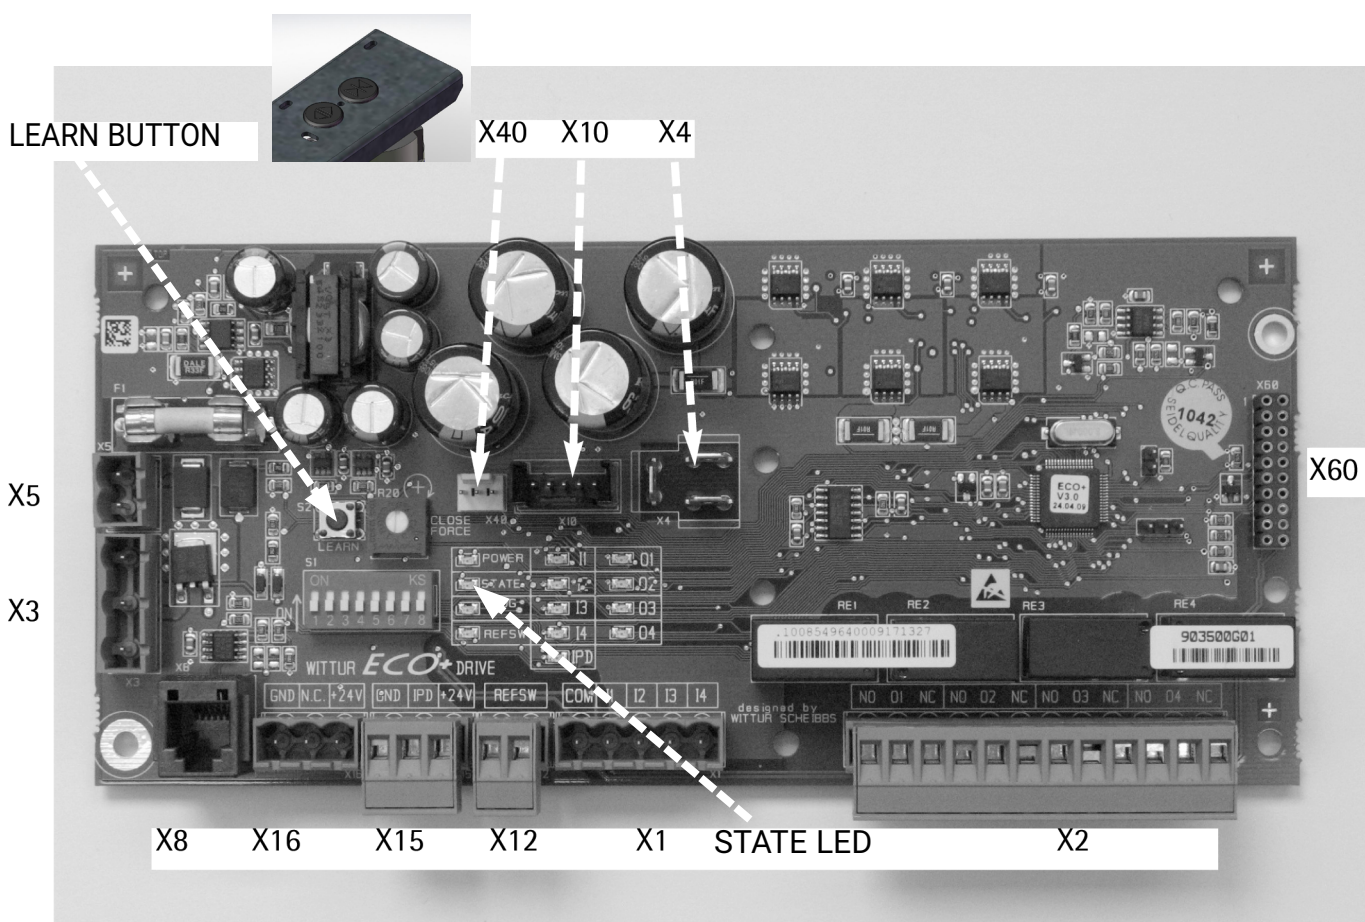

Plug description:

- | | |
|--|---|
| X1 - Inputs | X10 - Motor encoder |
| X2 - Outputs | X12 - Reference switch |
| X3 - Transformer secondary winding | X15 - Photo Cell (Curtain of light) Receiver |
| X4 - Motor | X16 - Photo Cell (Curtain of light) Transmitter |
| X5 - Battery supply | X40 - Test drive buttons |
| X8 - RS485 interface for WPT (Wittur Programming Tool) | X60 - Extension plug |

3.1 INSULATION TEST

 Caution: Before carrying out tests on system's insulation, connector X5 must be disconnected.

4. COMMISSIONING


-  The ECO+ electronic can be used as replacement for old ECO electronics using DC Motor.
The door operators supplied directly from the factory are pre-adjusted: it is not necessary to carry out the door CO (Clear Opening) learning.
The ECO+ drive at first installation or after switch-off /switch-on will use the first two complete closing / opening cycles to optimize door CO: STATE LED off → CO optimized.

4.1 POWER SUPPLY

- The ECO+ - drive provides transformers for both different voltage ranges and can supply with 127VAC or 230VAC.
- Select the recommended fuse for the nominal voltage range, see table

Nominal Supply Voltage Range:	127VAC	230VAC
Automatic fuse slow (in control panel)	2A	1A
Minimum cable required	1mm ²	0,75mm ²

- Line in supply is connected to a plug with screw terminals (D1).

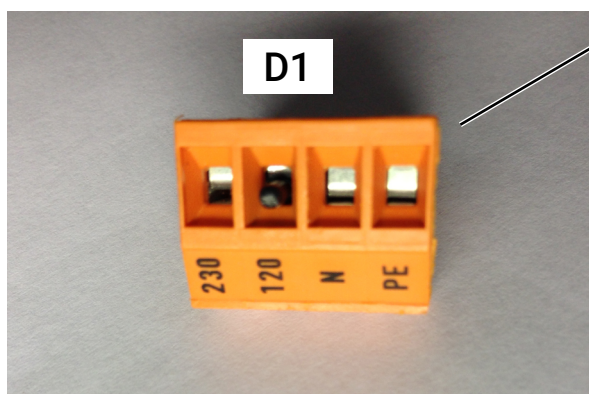


PE =	Connect ground wire
N =	Connect neutral wire
120 =	Connect 127 VAC phase wire
230 =	Connect 230 VAC phase wire
Remove the plastic block before connecting the terminal 120	

4.1.1 Emergency supply

Battery voltage	24VDC-4Ah
Min. cable sq. measure	1,5mm ²

- The battery's supply takes place through the X5 connector.

Pay attention: the battery has to be connected only in case of absence of the supply indicated on point 4.1.

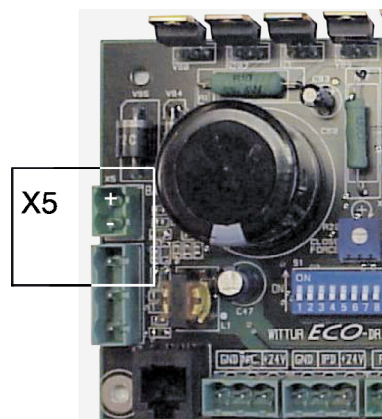

4.1.2 Emergency procedure in automatic mode (specialized technical staff not present):

If mains power is removed, to ensure correct operation of the emergency procedure in automatic mode via the control panel supplied by the buffer battery, it is necessary to supply the ECO+ drive with power from a battery (24 Vdc 4 Ah) via connector X5: the battery power must be supplied immediately after mains power is removed (the ECO+ drive must not be switched off).

The opening of doors for opening I1 (OPENING) will be managed by the control panel. Fig.1 shows the recommended wiring diagram.

Door opening will be automatic (without the help of the lift controller), if relay K3 is used to activate input I1 (OPENING), or the lift controller will have to manage input I1 (OPENING) to activate door opening: Fig.1 recommended wiring diagram.

NOTE:

1. Input I1 is activated via contact K3 by a micro-switch installed inside the shaft. The micro-switch is activated by the arrival of the car to the floor where it was installed and the ECO+ card will control input I1 via contact K3, only when powered by a battery.
2. If power is removed while the car is in line with the floor and the closing limit switch of the ECO+ card is not activated, it will be possible to open the door manually at that floor, as the ECO+ card will leave the motor unpowered.

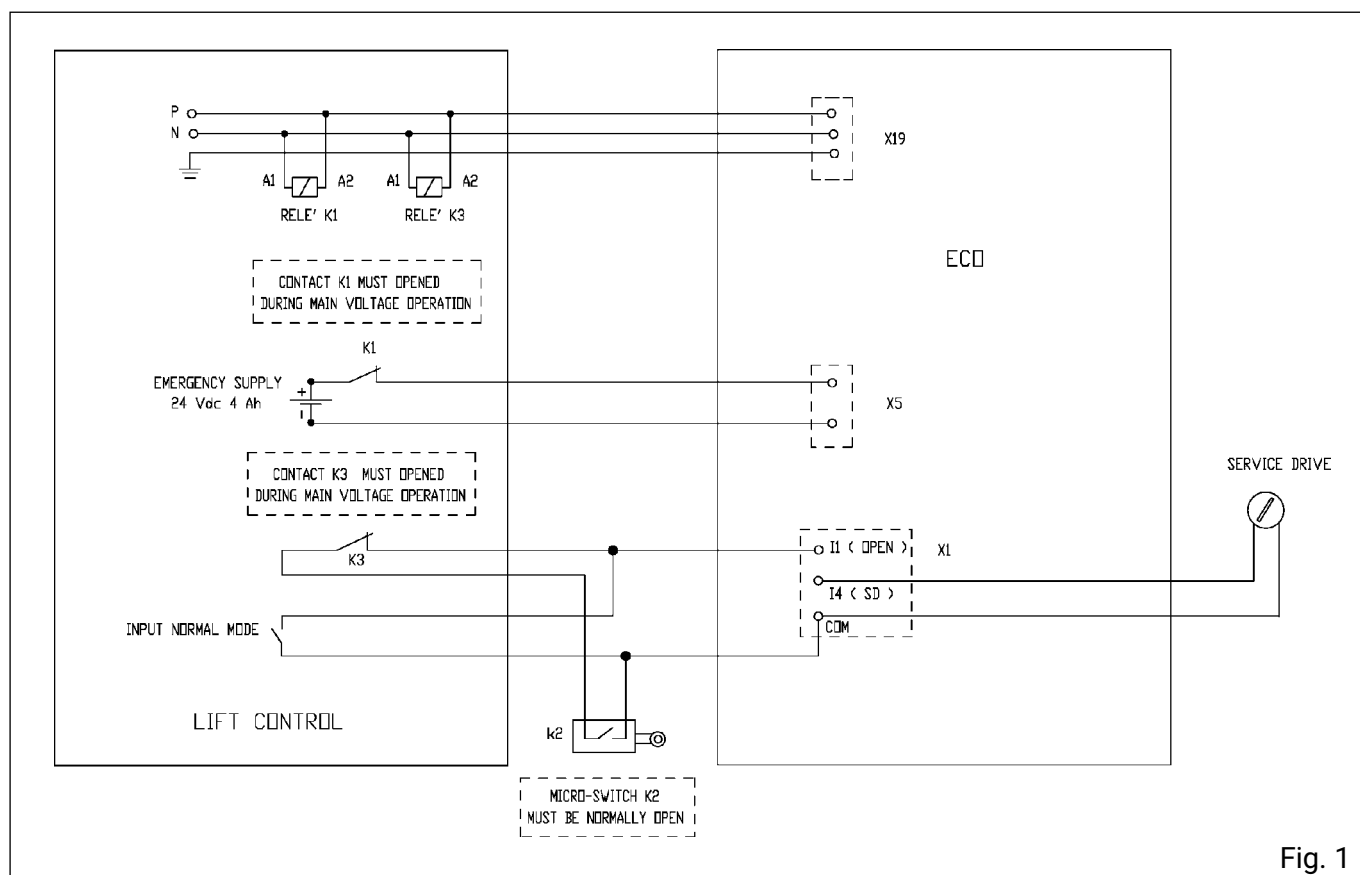


Fig. 1

4.1.3 Emergency procedure in manual mode (specialized technical staff present):

1. If mains power is removed, to ensure correct operation of the emergency procedure in manual mode, we recommend supplying the ECO+ drive with battery power (24 Vdc 4 Ah) via connector X5: the battery power must be supplied immediately after mains power is removed (the ECO+ drive must not be switched off). This way it will be possible to align the elevator cabin with the desired floor by means of a manual operation: the doors can only be opened manually: Fig.2 recommended wiring diagram.

NOTE:

If the operator is equipped with retractable cam with car door locking, to ensure correct operation of the emergency procedure in manual mode, we recommend the possibility of removing battery power (e.g. via a manual or time-operated switch) when the cabin has been aligned with the desired floor manually: it will then be possible to open the doors manually without any problem.

If the ECO+ card is not supplied with power from a battery (24 Vdc 4 Ah) via connector X5, the following situation will occur:

1. If there is an automatic operator with off-floor locking, the car can be manually aligned only to the nearest floor, as the floor lock will be opened by the retractable cams which will be extended to their maximum length due to the removal of power: the doors can only be opened manually.
2. If you have an automatic operator without off-floor locking, it will be possible to align the car with the desired floor using a manual procedure: the doors can only be opened manually. This is possible because the automatic operators without off-floor locking are fitted with a standard mechanic/magnetic device which allows the retractable cams to remain closed.


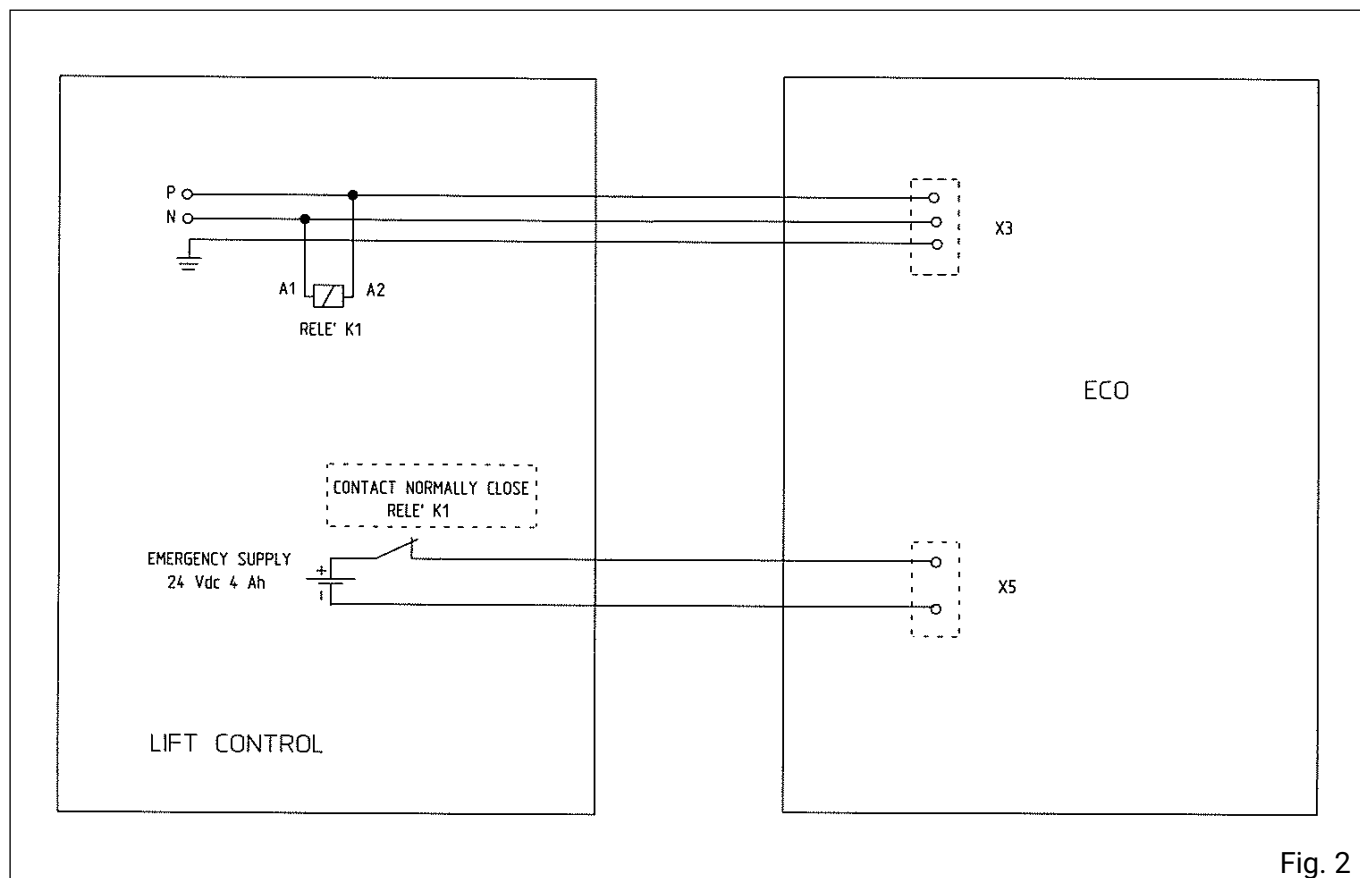


Fig. 2

4.2 SAFETY CIRCUIT

- The door contacts are prewired to a terminal plug with screw terminals D2.
- Safety contact ratings: Min. 5VDC - Max. 250VAC 2A.

PE =	Connect ground wire
1 & 2 =	Connect safety circuit wires

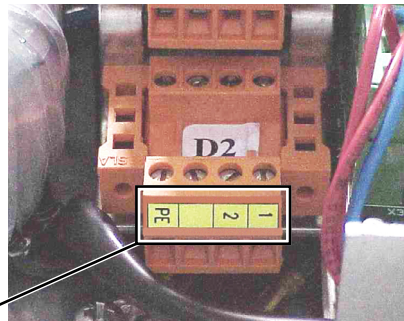


5. EXCHANGE OF ELECTRONIC BOX


5.1 PREPARATION AND LEARNING OF DOOR PARAMETERS

 Carry out only in event of replacement.

- 1 DIP-Switch setting has to be copied from the replaced board, see chapter 9: "DIP-Switches".
- 2 In case of need adjust the reference switch so, that switch and magnet are opposite one each other when the door panels are closed (clearance between switch and magnet should be 5÷6 mm).

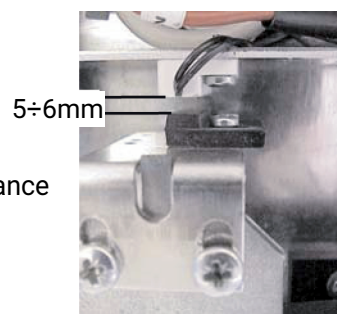


- 3 The DIP Switch S1/1 (Test Button Operation) must be activated.

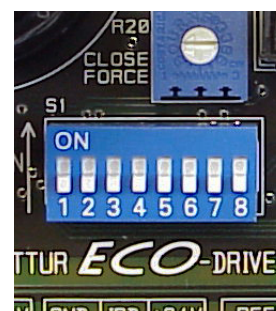

- ⚠ 4 Set the panels of the car door in closing position (1) and ensure that the cams are rigorously close (2). Therefore open the door panels by hand and push them manually to closed position. The hanger plate (truck) must touch the close end buffer. See picture below (1).

Strut-Coupler System

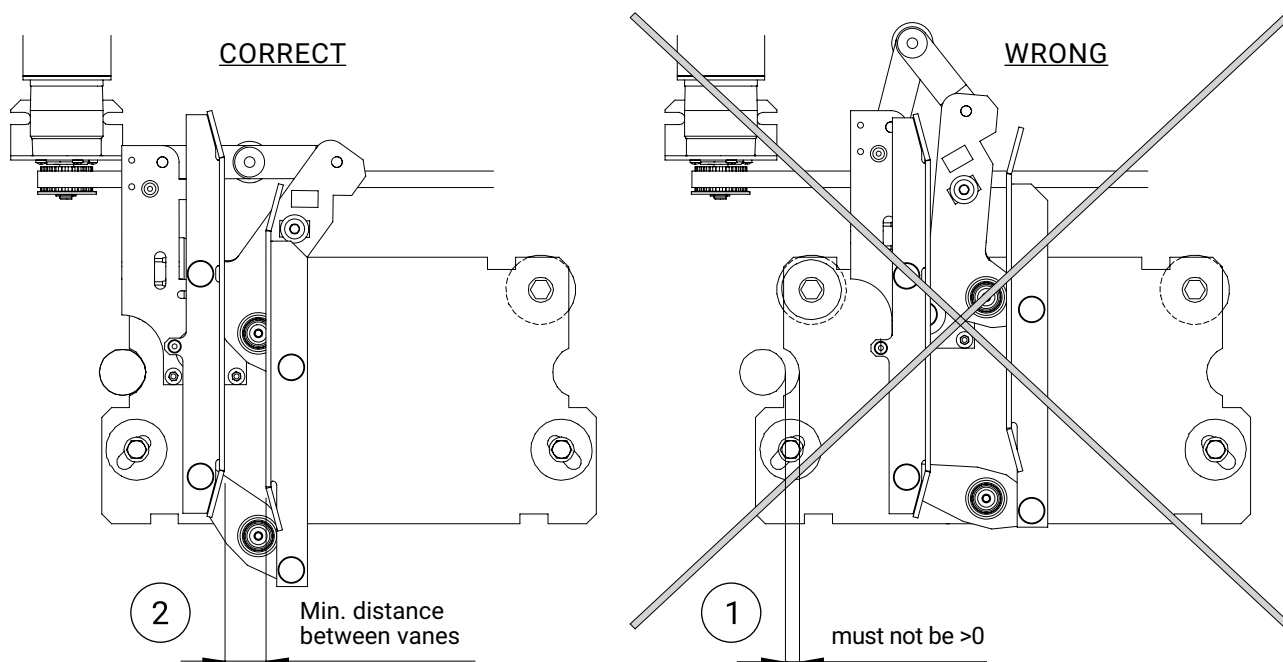

- 5 Activate the alimentation through the D1 connector as indicated at par. 4.1.

👉 Press the LEARN push-button **for one second only**, immediately after switching on.



- 6 Now the door must be driven in close direction by Test Drive Button.

- 7 The door might now run in wrong direction in respect to command. Use that test drive button which drives the door in close direction and drive until door panels are fully closed (REF SWITCH LED must be on).

- 8 If the motor is running in wrong direction the electronics rectifies the motor rotation direction when the "Ref Switch" is closed and a new learning procedure will re-start.

⚠ Is no reference switch available the direction of the motor rotation has to be changed by crossing the motor cables, if necessary (Press the LEARN button again).


- 9 Now the learning of door width is done during 2 consecutive full door width movement cycles (STATE LED off → learning done).

⚠ Take care, that the commands are available in end position for more than one second, that the electronic has time enough to detect the mechanical end position.

- 10 The parameters are stored automatically after learning procedure.

5.2 DRIVING THE DOORS WITH THE ELEVATOR CONTROLLER

- Connect the signals from the elevator controller to connector X1 and X2 of the door operator.
- Refer to the project delivery documents for the wiring diagram between the elevator controller and door operator (see also circuit diagram in chapter 11).
- Check if Test Button operation Switch is OFF S1/1.

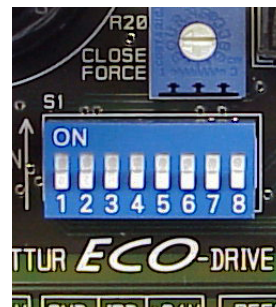

- If the door is not at the reference switch (near by close end) in power up and CLOSE is active (connected with COMMON) it will move at low speed as long as the reference (close end) position is found.
- After finding the reference switch the door drive will start with the next OPEN command in direction open with normal speed drive until the mechanical end is found.
- Then the door will drive with normal speed in both directions.
- Check that the safety devices (open button, photo cells and close force limiter) reopen the door (see DIP-switch description).
- According to the DIP-Switch adjustment (S1/2) the door is reopened by the elevator control or automatically by the door.

5.3 DRIVING THE DOORS BY THE SERVICE DRIVE BUTTONS

- The Test Buttons only work when the Test button operation switch (S1/1) is active.
- Check that the door is moving open and close when the test buttons are pressed.
- In this mode of operation the reopening of the door by a safety device is not activated (enables the adjustment of the closing force).

5.4 RESET OF COUPLER WIDTH

If the coupler parameter must be reset (e.g. remove or change of coupler system, coupler width wrong.....) continue like described below:

⚠ Before "Reset of coupler width" is done, do preparation for learning described in paragraph 5.1, item 1, 2, 3 and 4 (manual closing of door panels, but don't close coupler vanes!).

By pressing the learn button for at least 10 seconds (until State LED flashes fast) the coupler width is cleared and a new learning is started.


After resetting the coupler width, continue with start-up procedure like described in paragraph 5.1 "Learning of door parameter" starting with item 5.

5.5 RESET OF ALL DOOR PARAMETERS

(this function can only be activated by service tool, see item "12.4.2.2 Reset to default").

5.6 CONNECTION OF DC MOTOR (E.G: REPLACEMENT OF OLD ELECTRONIC)

The ECO+ electronic can be used as spare for the old ECO electronic. Connect the DC motor (blue) as shown in next picture.

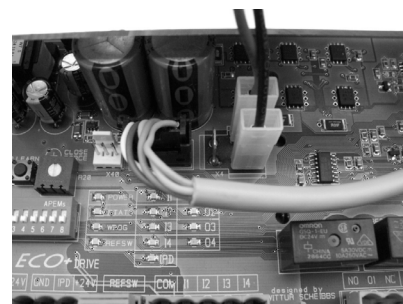

6. ADJUSTMENTS ALWAYS TO BE DONE

6.1 CLOSING FORCE ADJUSTMENT



An adjustment of too high closing force may cause serious injury to passengers. The max. allowed force can be found in the code valid for your country (EN81: max. 150N).




The adjustment must be done by use of a force measuring device.



Do not attempt to measure the force of a moving door, stop it first to avoid damage of the force measuring device!


- Open and close the door manually and check that there is no mechanical obstruction.
- Put a force measuring device between the door panels (center opening) or between door panel and slam post (side opening).

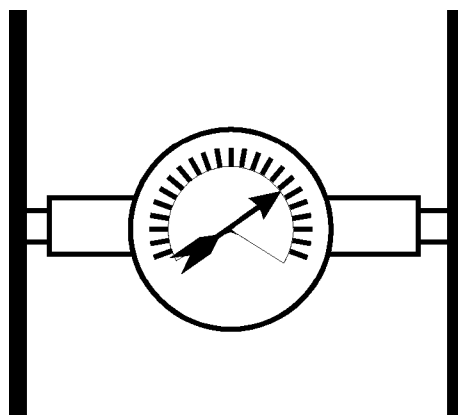

For centre opening the measuring device will show half of the actual close force. For side opening the measuring device will show the actual close force.

- Drive the door with the close button (or close command) to the close direction. The Test Buttons only function when the Test button operation DIP-Switch (S1/1) is ON.
- The close command should be applied for less than 10sec period's, than remove the close command for a short time, before continue the adjustment procedure.

- Adjust the closing force according codes using potentiometer CLOSE FORCE. The Closing Force will increase by turning the potentiometer clockwise!

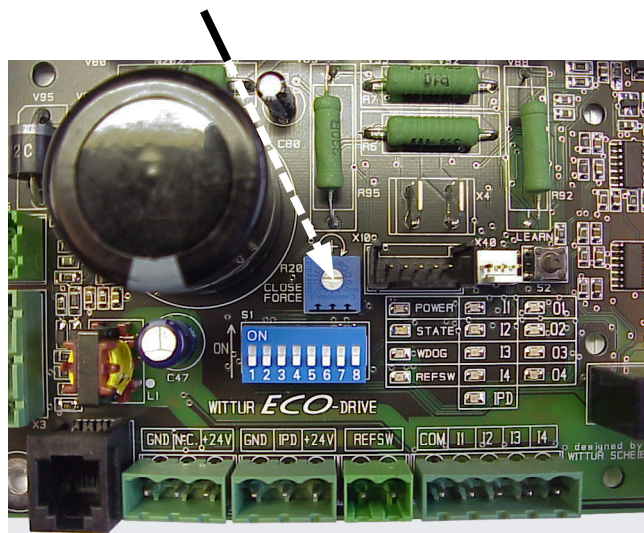


6.2 ADJUSTMENT OF THE SPEED

- The drive electronic offers to select one out of four different speed levels (for handicap elevators or other purpose).
- Look at DIP-SWITCHES description (chapter 9).


6.3 SETTING SPEED ACCORDING TO DISABLED PEOPLE REGULATIONS

- The DIP-SWITCHES S1/5 and S1/6 must be set to OFF.

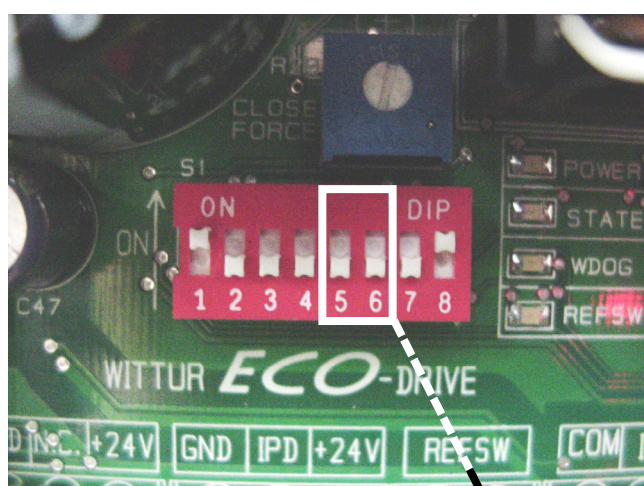

DIP-SWITCHES S1/5 and S1/6 SET TO OFF

7. DESCRIPTION OF LED'S

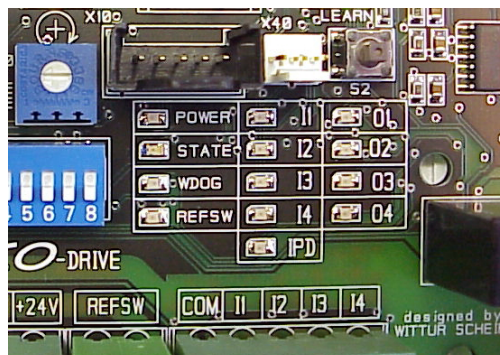

7.1 LED'S INPUTS

Name	LED illuminated if
I1	Input 1 is connected to COM
I2	Input 2 is connected to COM
I3	Input 3 is connected to COM
I4	Input 4 is connected to COM
IPD	Input Passenger- Protection Device (Photo cell.....)

7.2 LED'S OUTPUTS

Name	LED illuminated if
O1	Output 1 relay is operated
O2	Output 2 relay is operated
O3	Output 3 relay is operated
O4	Output 4 relay is operated

7.3 DIFFERENT LED'S

Name	LED illuminated if
POWER	the power supply is switched on
WATCH DOG	the microprocessor does not work
STATUS	Light: during start up and learning Flashes: if an error is detected 1x Motor / encoder fault 3x internal fault 4x abnormal operation 5x learning error Details see page 132, item 10.3 Off: normal operation
REFSW	the door is in Close end area

8. ELECTRICAL INTERFACES

8.1 INPUTS

The Inputs are activated if they are switched at COM.

Terminal	Symbol	Name of the terminal	Explanation
COM	COM	COMMON	Common line for I 1..4
I1		OPEN	This command will drive the door in open direction until the open position is reached. Depending on the setting of DIP-Switch S1/8 the door is kept open by motor torque also without command.
I2 *		CLOSE	This command will drive the door in close direction until close position is reached and coupler is opened. Depending on the setting of DIP-Switch S1/8 the door is kept closed by motor torque also without command.
I3	NDG	NUDGING	Nudging input, puts the door to slow speed drive in close direction. Smoke sensitive devices like photo cell or light barrier (Input IPD) will be ignored.
I4	SD	SERVICE DRIVE	If set to TEST it enables the service keys. If set to RUN it enables the lift controller commands.

★ Attention:

- 1) To comply to new EN81-20 (5.3.15.1) standard it is mandatory that the elevator controller removes the "CLOSE COMMAND (I2 = OFF)" when parking/resting on floor level.
As a consequence the door operator motor is unpowered and ensures that the car door lock is in unlocked state.
- 2) While moving the elevator car it is mandatory that the "CLOSE COMMAND (I2 = ON)" is active to ensure that car door lock is in locked state.

SERVICE DRIVE SWITCH



- RUN position: accepts commands from operation panel,
- TEST position: accepts commands from service keys (X40).

N.B.: The **SERVICE DRIVE SWITCH** can be adjusted with a screwdriver; rotate clockwise/anticlockwise.

The DIP-SWITCH S1/1 must be strictly set in the OFF position.

Optical couplers are mounted on the inputs, supplied directly from the ECO+ drive:

Technical data:

- Voltage: 24 VDC $\pm$ 10 %
- Power: 12 mA each input

INSTRUCTION HANDBOOK CAR DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 133.161

8.2 PASSENGER PROTECTION DEVICE INPUT AND SUPPLY

The Input is activated if put at GND. For parameterset xE (EN81-20) the IPD input have to be active if no obstacle is detected by the detection device. See 10.3 Wiring Diagram for EN81-20.

Terminal	Symbol	Name of the terminal	Explanation
+24V	PH+	+24V	+24V DC supply for photo cell or curtain of light (max. 150mA)
IPD	REV	PHOTO CELL	Input for Photo Cell or curtain of light, light barrier or other passenger protection device
GND	PH-	GND	Ground for supply of photo cell or curtain of light (light barrier)
N.C.	L		Can be used as terminal for light barrier

8.3 OUTPUTS

The outputs are relais where the 3 connections of the contacts are feed to the terminals.
(O1 to O4: COMMON = COM, normally open contact = NO, normally close contact = NC)

Terminal	Symbol	Name of the terminal	Explanation
O1		OPEN END	The open end output indicates the fully open position of door panels.
O2		CLOSE END	The close end output indicates the fully closed position of door panels
O3	REV	REOPEN	The reopen output indicates if a reopen request, coming from photo cell or close/open force limiter is pending or an automatic reopen/close is done.
O4 *	POS	Position	This Output shows the reference switch signal. Output is On in Referenceswitch area. * With Parameter set E (EN81-20) the output O4 is set in reference area.

Technical data:


- Voltage: 230 VAC / 30 VDC
- Power: max 2A continuous load

Subject to change without notice!


9. DIP-SWITCHES

	ON	OFF
S1/1	Test Button operation (buttons active)	Normal operation (command inputs on X1 active) Activate SERVICE DRIVE SWITCH
S1/2 *****	Automatic reopen on obstruction or IPD (Reopen O3 is switched)	No automatic reopen/reclose (only Reopen O3 is switched)
S1/3 **	Electric shoe operation (swing door mode)(*)	Normal operation (command inputs on X1 active)
S1/4	Not used	
S1/5	Speed selection, binary coded, see figure	
S1/6		
S1/7 ****	Open force limitation active	No open force limitation
S1/8 ***	Automatic end keeping	Hold open/closed only on active open/close command


(*) Mode 1:

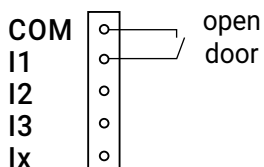I1 = ON -> door opens
I1 = OFF -> door closes


(*) Mode 2:

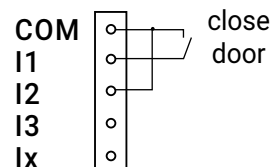I1 = ON -> door closes
I1 = OFF -> door opens


SPEED ADJUSTMENT

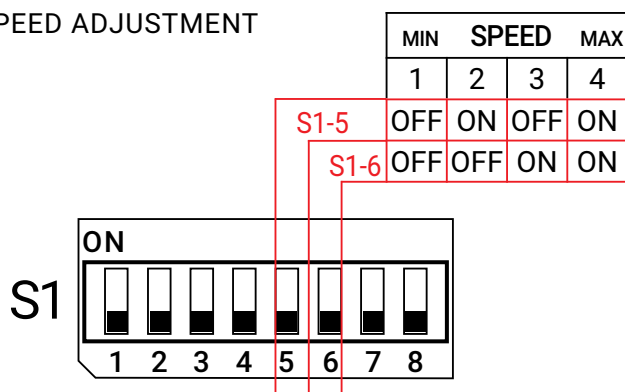

** For the compliance to EN81-20 (part. 5.3.15.1) the switch S1/3 must be OFF

*** For the compliance to EN81-20 (part. 5.3.15.1) the switch S1/8 must be OFF

**** For the compliance to EN81-20 (part. 5.3.6.2.2.1 only glass doors) the switch S1/7 must be ON

***** In case of automatic reopen/reclose, O3 is set if an obstacle is detected and switch off after reopen/reclose
In case of no automatic reopen/reclose, O3 switch on when an obstacle is detected and switch off when the obstacle is removed or a reopen/reclose command is applied from the liftcontroller.

INSTRUCTION HANDBOOK CAR DOOR


Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 135.161

9.1 DIP SWITCH FOR ECO BUS 2.0 DOORS

	ON	OFF
S1/1	Test Button operation (buttons active)	Normal operation (command inputs on XI active)
S1/2	Automatic reopen/reclose on obstruction or IPD (Reopen 03 is switched)	No automatic reopen/reclose (only Reopen 03 is switched)
S1/3	Electric shoe operation (swing door mode)(*)	Normal operation (command inputs on XI active)
S1/4	POS. Function on Output 04	
S1/5	Close pulse (Medium) (Only on when Dip-Switch 51/7 is on)	Close pulse (Strong) (Only on when Dip-Switch 51/7 is on)
S1/6	Doorspeed slow (0,27m/s)	Doorspeed fast (0,4m/s)
S1/7	Close pulse off (For W-Folding Doors)	Close pulse on (see 51/5)
S1/8	Hold open/close only on active open close command	Automatic end keeping


(*) Mode 1:

I1 = ON -> door opens
I1 = OFF -> door closes

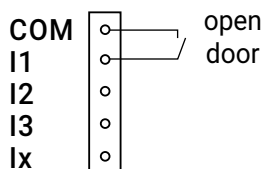

(*) Mode 2:

I1 = ON -> door closes
I1 = OFF -> door opens

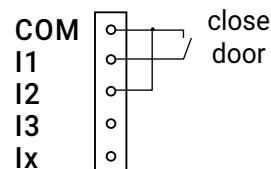

10. TROUBLESHOOTING

There is a fault if the State LED is blinking. The faults can be read by WPT.

10.1 THE DOOR DOES NOT MOVE

10.1.1 The door does not move at all

- Check that the power is ON. The POWER LED H80 must light up if D1 is connected and the circuit breaker in the elevator control panel is ON
- Check WATCHDOG LED H20, switch OFF/ON or replace board in case it lights up.
- Check that the motor and encoder wires are connected correctly (plug X4 and X10) and the motor is not overheated ($\leq 60^{\circ}\text{C}$).
- Check that the control panel is sending an Open or Close command (I1-I2/X1, Led I1, I2).
- Check if there is too high friction if door is moved manually. If the state LED flashes read the faults by using WPT, switch ON/OFF or replace board in case it flashes.
- Check if the open force limitation is deactivated (S 1/7 OFF).

10.1.2 The door does not open

- Check that the OPEN command LED I1 lits up when an open command is present (I1/X1 low).
- Check that the CLOSE command LED I2 does not light up (I2/X1 not low). A close command overrides the open command.
- Check that the landing door lock is not jammed.
- Check if the open force limitation is active (S 1/7 ON) and the friction is too high.

10.1.3 The door does not close

- Check that the CLOSE command LED I2 lits up or the Input I2/X1 is switched on COM.
- The closing force may be too low (or friction too high). Turn CLOSE FORCE potentiometer slightly clockwise to increase the closing force, but watch the maximum allowed force!

10.1.4 The door only partly opens or closes

- Check that the open and close signal times (LEDs I1, I2) from the elevator controller are long enough. The door moves only as long as command is set.

10.2 THE DOOR DOES NOT REOPEN/RECLOSE

- If no automatically reopen/reclose is selected (DIP Switch S1/2 is OFF):
 - To reopen/reclose the door, the elevator controller must receive either a reopen/reclose request signal from the door electronics (REOPEN) or from an independently wired safety device (e.g. Photocell or Curtain of Light).
 - For reopening/reclose the elevator controller must remove the close/open command and activate the open/close command
- If automatic reopen/rerclose is selected (DIP Switch S1/2 is ON):
 - An automatic reopen/reclose process is caused by the Input IPD or by the closing force limiter.

 Check the following reopen devices

- Photocell or light cell (defect or dirty).
- Closing force limiter (force adjusted too high).

10.3 FAULTS CAUSING RESET OR SWITCH OFF (STATE LED IS BLINKING, BLINKCODE (X))


- Over current (power stage short circuit).
- motor or encoder short circuit, open wires and/or missing signals.
- Internal electronic fault.
- Under voltage (supply voltage is measured and the power stage switches off if the voltage is too low).
- mechanical end not found ($\geq 5\text{m}$).
- door mechanically blocked.

10.4 FAULTS DECREASING PERFORMANCE OF DOOR


- Motor and/or power stage temperature too high. The software reduces the power of the motor (power stage). If temperature is nevertheless exceeding a higher limit, power stage is shut down for cooling down a certain time.
- Low voltage supply like battery drive or low line voltage supply.
- Reference switch faulty.

11. ECO+ WIRING DIAGRAM DRIVE


11.1 WITH DETECTOR (NO EN 81-20)

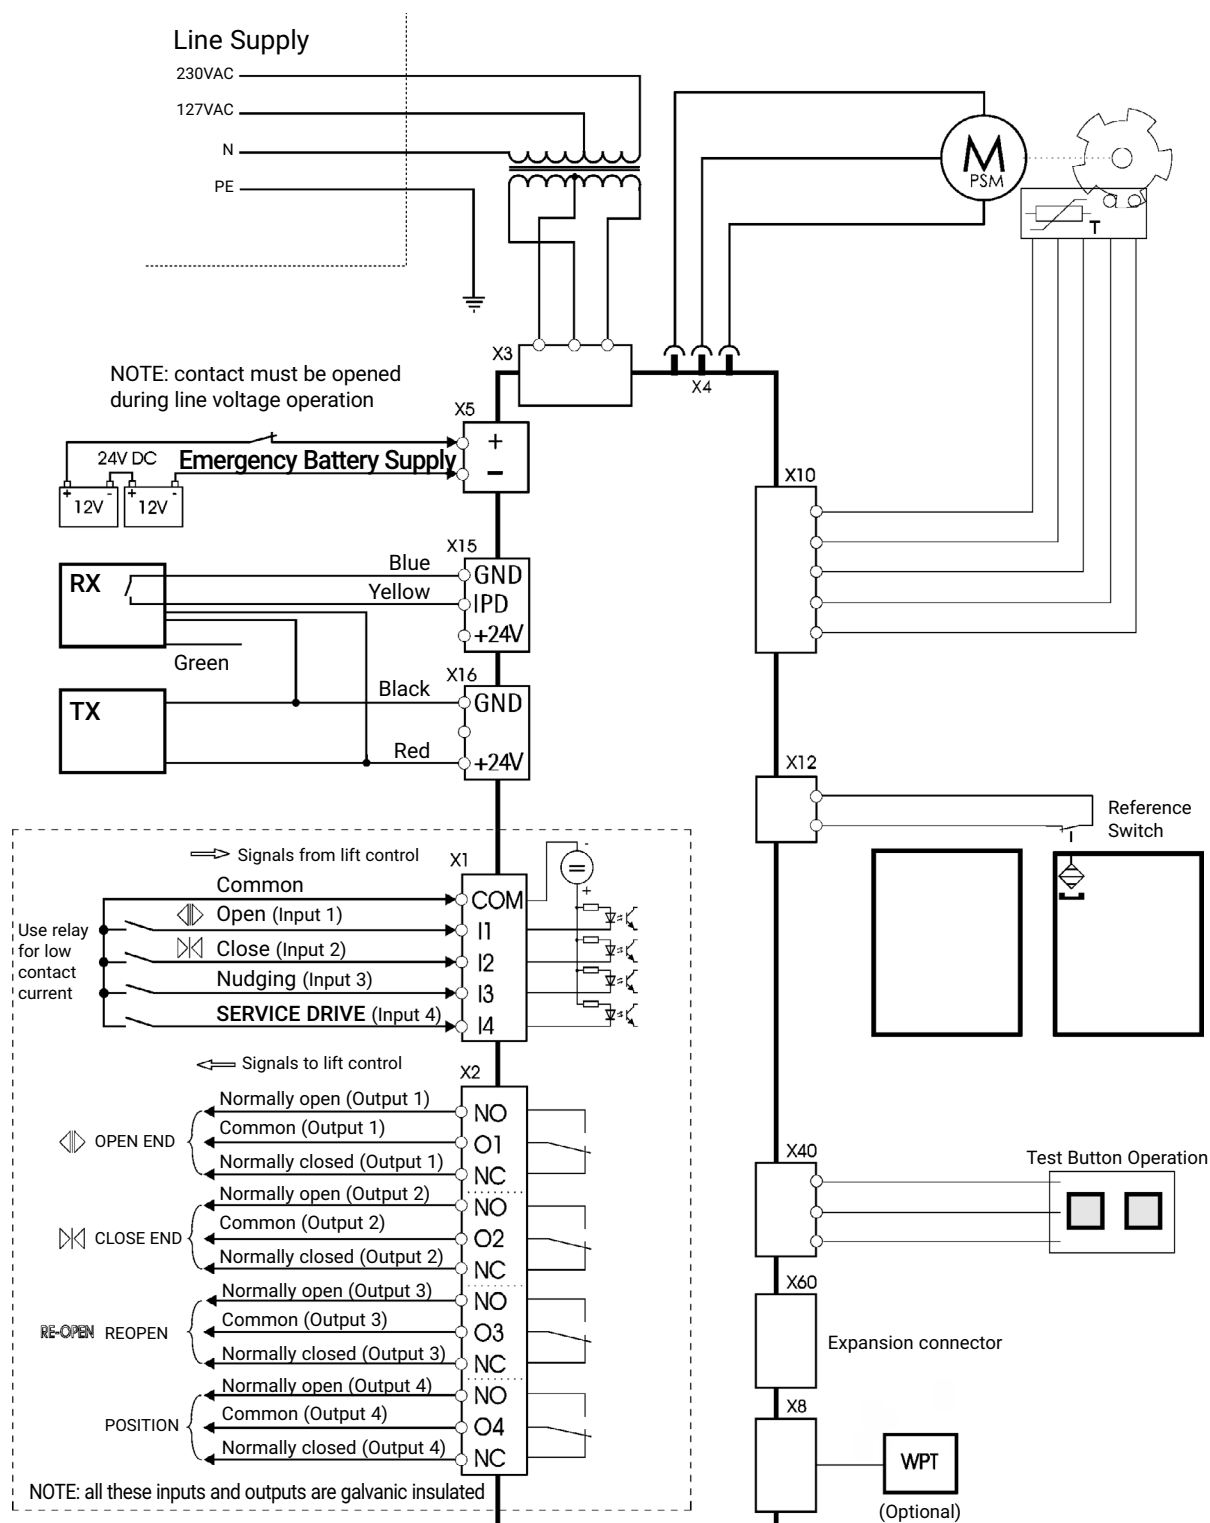

11.2 WITH W2D PHOTOCELL (NO EN 81-20)

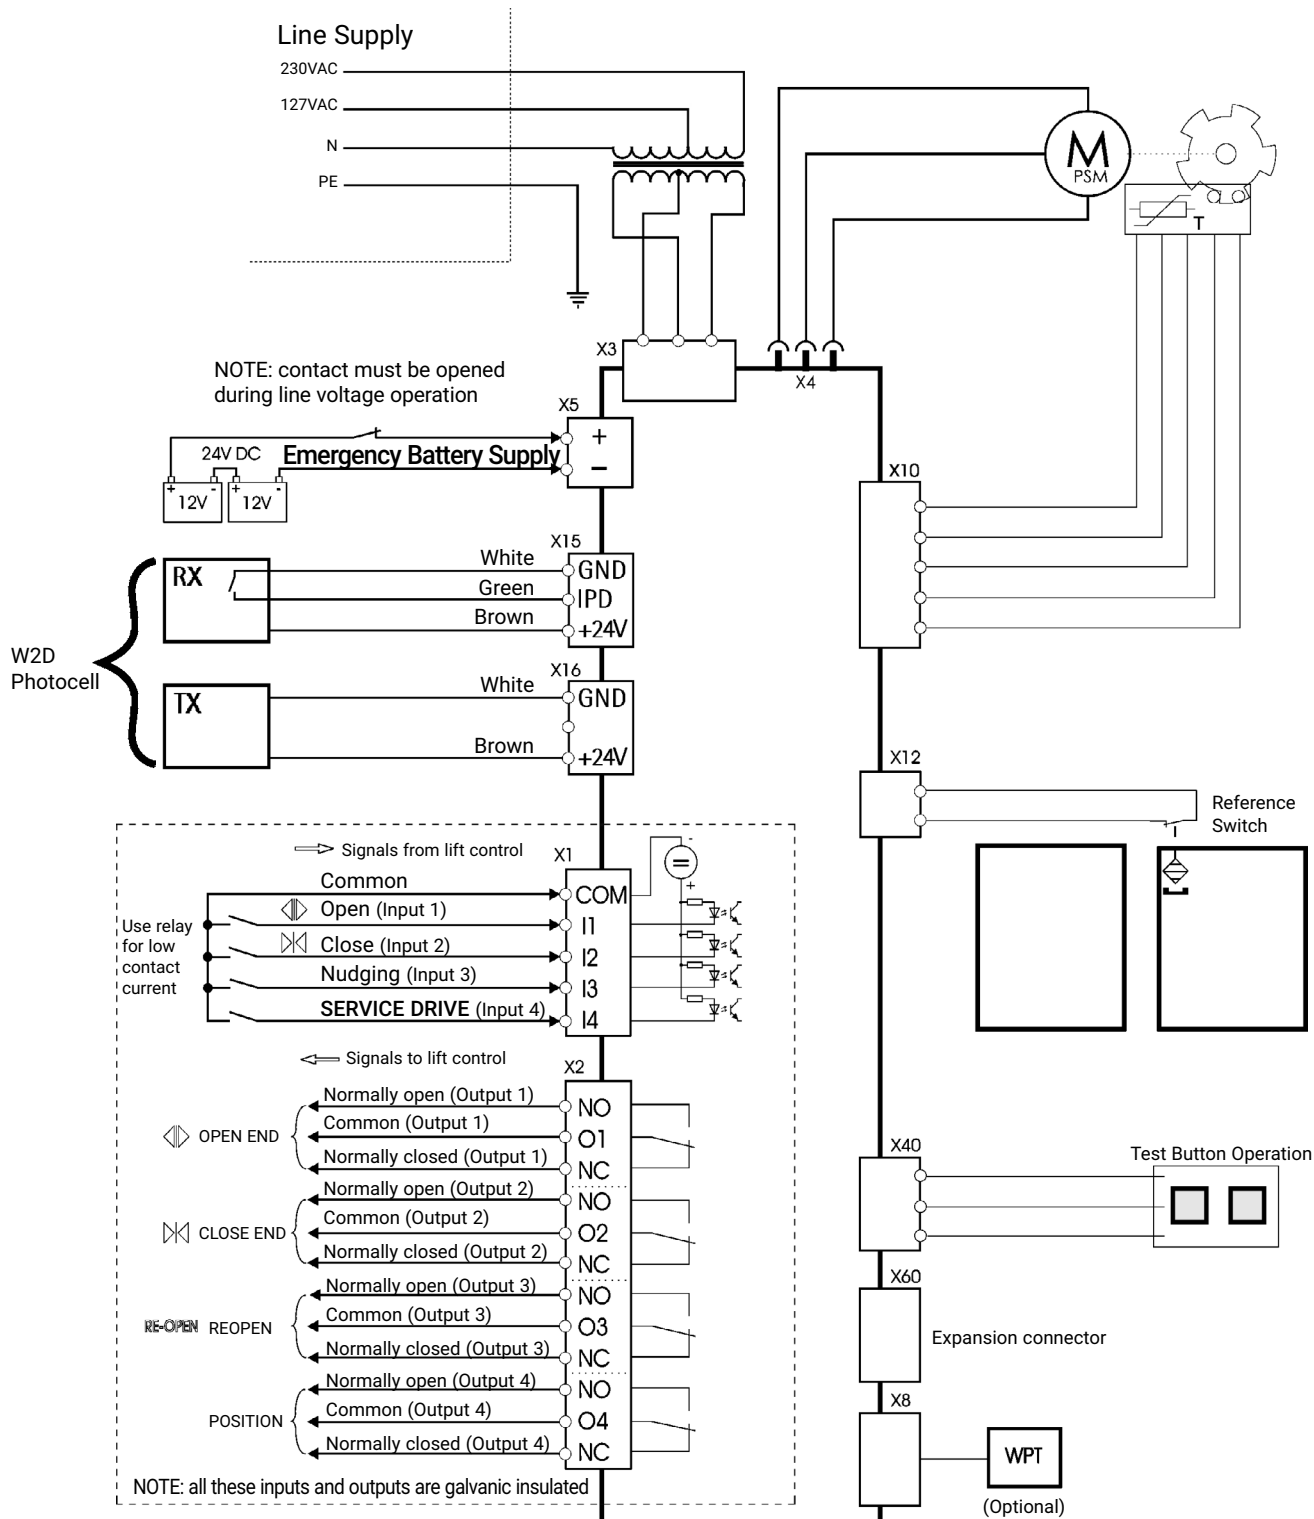

11.3 WITH DETECTOR EN 81-20

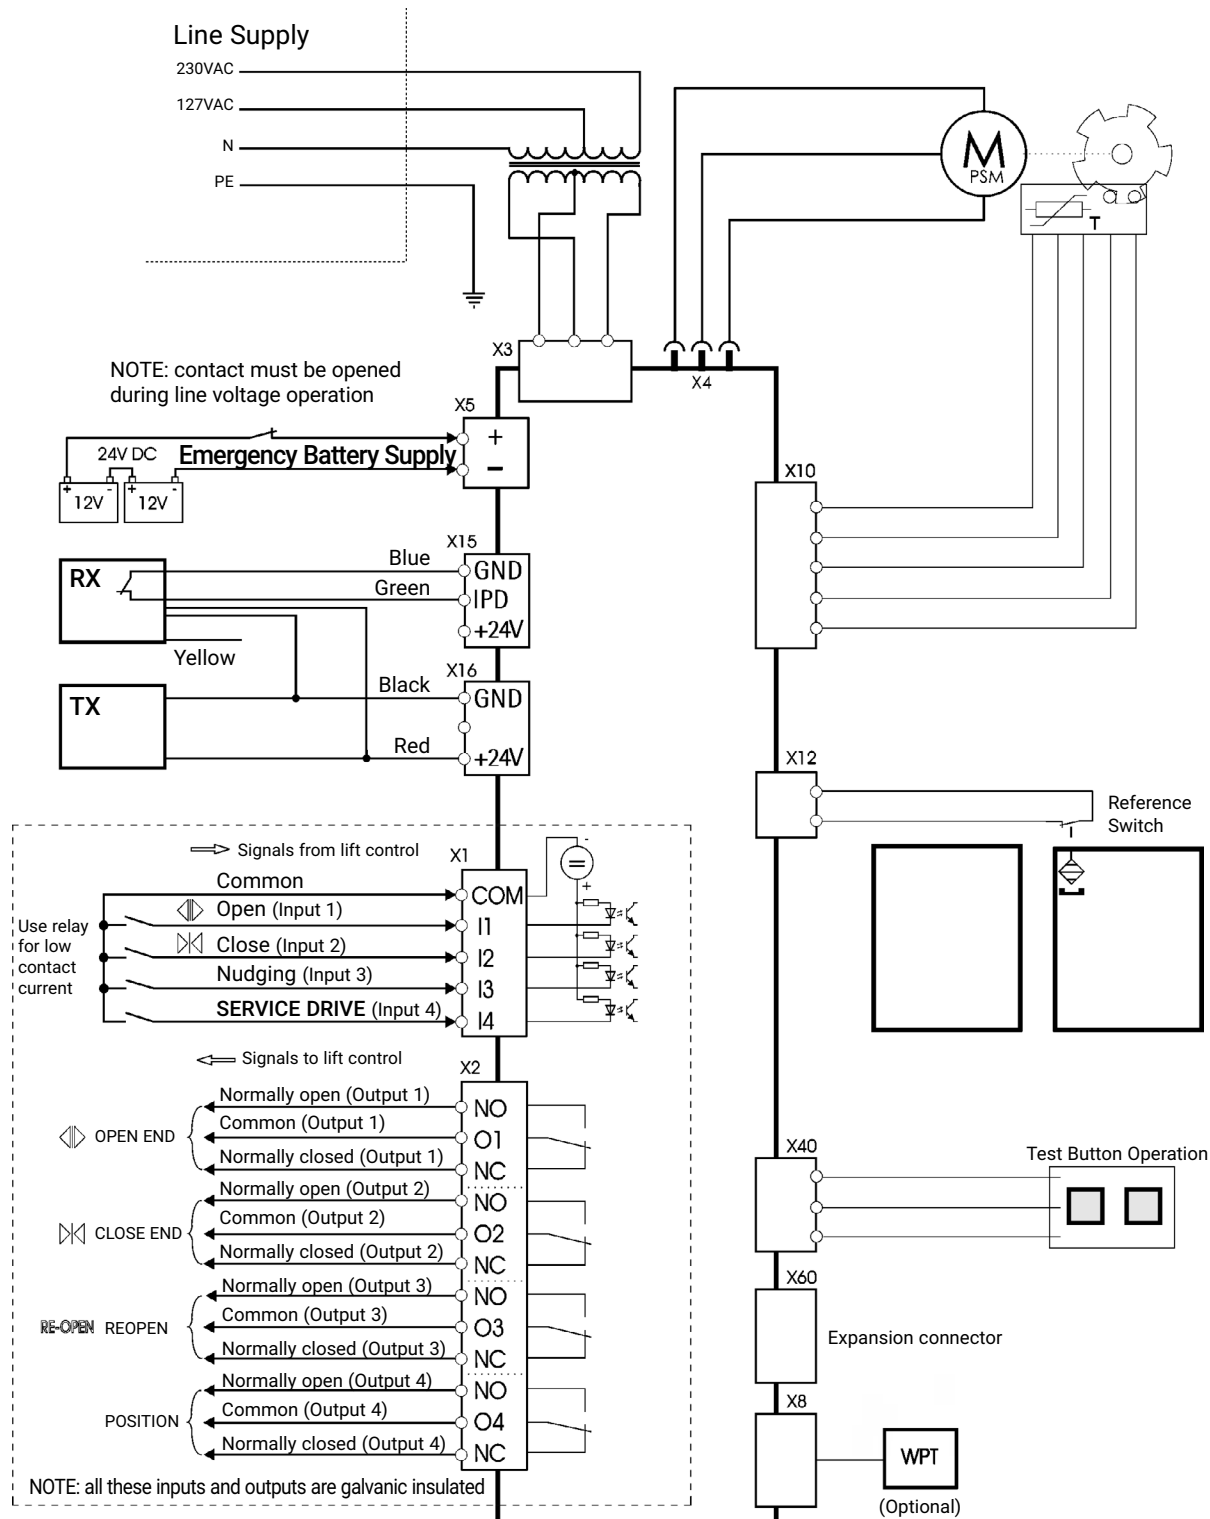

For Parameterset xE (EN81-20) the IPD input have to be always active for noraml operation.
If no detection device is connected to the door drive, the IPD input have to be activated by a wire bridge from IPD to GND.
If a detection device is used, a normal close contact have to be connected from GND to IPD, to work with parameter set xE (EN81-20).

Subject to change without notice!

12. WITTUR PROGRAMMING TOOL INTERFACE SOFTWARE DESCRIPTION

Valid for software revision starting from „WHD ECO+ Vx.x, dd.mm.jjjj“

12.1 INTRODUCTION

The ECO+ - electronic is equipped with a serial communication interface RS 485 to watch/modify data stored in the electronic. Some data (for example the speed values) are stored in a memory which is independent from power supply, this memory is called EEPROM. For use of the Wittur programming Tool see Operating instructions D276Mxx.




Wrong adjustments may damage the door mechanic.

12.2 CONNECTING THE WITTUR PROGRAMMING TOOL TO THE ECO+ - ELECTRONIC

The Programming Tool can be connected directly to the ECO+ platine at the plug X8, there are no further adjustments necessary. Switch off the WPT before connecting to door drive.

12.3 MENU STRUCTURE OF PROGRAMMING TOOL

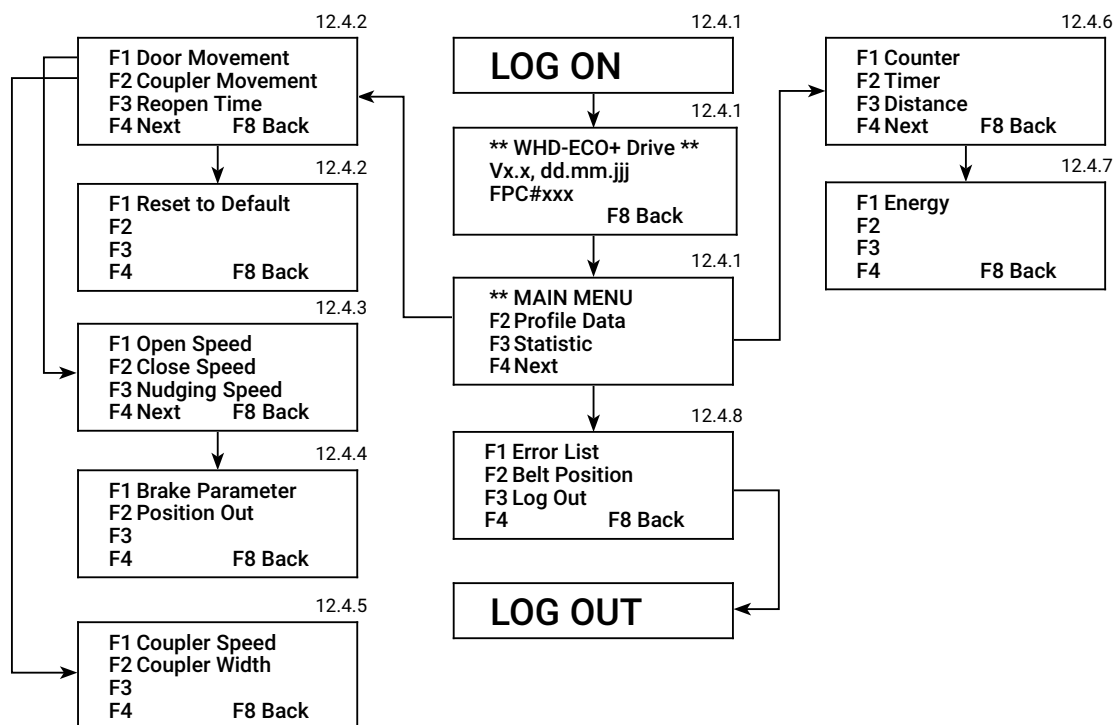

12.4 DOOR ADJUSTMENT WITH THE PROGRAMMING TOOL

12.4.1 Login of the Programming Tool

- Press the 'ON'-button longer than 2 seconds until you can see the Log-in Display.

```
WPT software V1.3  
19.09.2001, 11:15  
  
Logging on .
```

- The screen after power on login shows the door drive software revision and date.

```
** WHD-ECO+ DRIVE **  
  
Vx.x, dd.mm.jjjj  
FPC#xxx      F8 Back
```

- After pressing 'F8' the initial menu screen appears.

```
** MAIN MENU  
F2 Profile Data  
F3 Statistic  
F4 Next
```

- Press 'F1' to 'F3' to select one of the menu items or use 'F4' to view additional screens

```
F1 Error List  
F2 Belt Position  
F3 Log Out  
F4          F8 Back
```

- 'F8' jumps back to last screen.

12.4.2 'F2': Profile Data

```
F1 Door Movement
F2 Coupler Movement
F3 Reopen Time
F4 Next      F8 Back
```

This menu allows you to call up 2 further cascading menus: 'F1' Door Movement (12.4.3) and 'F2' Coupler Movement (12.4.5).

12.4.2.1 'F3': Reopen Time

Reopen Time is the waiting period after the reopen in open end, before the door close again.
By pressing 'F3' the parameter Reopen Time can be watched and changed.

```
Reopen Time:
0000.0 s

ENTER Ch.  F8 Back
```

To enter a new value press the number keys, after that press 'ENTER'. This value is taken over in a buffer and carried out.

```
Reopen Time:
0001.5 s

ENTER Ch.  F8 Back
```

By leaving this menu with 'F8' you will be asked if the entered value shall be stored permanently to the memory

```
Use changed Value?

YES/NO      F8 Back
```

By pressing the keys 'YES' / 'NO' the value can be used / rejected.

12.4.2.2 'F4': Next (Profile Data)

```
F1 Reset to Default
F2
F3
F4          F8 Back
```

The door parameter are resetted to its initial value by pressing the button 'F1'.

12.4.2.3 'F1': Reset to default

Reset to Default?

YES/NO F8 Back



By pressing the 'YES' button all the factory adjusted parameters are cleared and overwritten by default values.

Before resetting the door electronic to default values the two items 5.1, clause 3 and 4 must be followed (manual closing of door panels without opening of coupler!).

After the "Reset to Default" is done, continue the start-up procedure like described in item 5.1 clause 6 to 10.

12.4.3 'F1': Door Movement

F1 Open Speed
F2 Close Speed
F3 Nudging Speed
F4 Next F8 Back

This menu allows you to watch/modify values described in the following chapters by pressing the corresponding function key.

See chapter 12.4.2.1 how to enter values.

All these variables are stored in the EEPROM. Speed values for speed setting 1-3 are calculated from values of speed setting 4 by multiplying with fix constants (see chapter 13).

12.4.3.1 'F1 Open speed' - Open speed

Top speed for open movement; speed setting 4.

12.4.3.2 'F2 Close speed' - Close speed

Top speed for close movement; speed setting 4.

12.4.3.3 'F3 Nudging speed' - Close speed for nudging

Top speed for close movement with nudging command; speed setting 4.

12.4.4 'F4': Next (Door Movement)

```

F1 Brake Parameter
F2 Position Out
F3
F4          F8 Back
  
```

This menu allows you to watch/modify values described in the following chapters by pressing the corresponding function key.

See chapter 12.4.2.1 how to enter values.

This value is stored in the EEPROM.

12.4.4.1 'Brake Parameter'

Because of the adjustment of this parameter the delay and creep to the open/close end is influenced (pre-adjusted at '5'). The possible adjustment is '0'..'9', but the earliest brake is reached with parameter '0' and the latest delay is reached with parameter '9'.

12.4.4.2 'Position Out' Relay output

By entering this parameter the Position relay can be adjusted to switch at any door position. Standard adjustment is 0 (deactivated).

12.4.5 'F2': Coupler Movement

```

F1 Coupler Speed
F2 Coupler Width
F3
F4          F8 Back
  
```

This menu allows you to watch/modify values described in the following chapters by pressing the corresponding function key.

How to enter values see in chapter 12.4.2.1.

This value is stored in the EEPROM.

12.4.5.1 'F1 Coupler Speed'

Adjustment of the maximum speed in the coupler area. It is the same for open and close.

12.4.5.2 'F2 Coupler Width'

The parameter coupler width shows the distance which the belt is moving in close end without moving the door panels.



If this value is changed the door is stopped until the learn button is pressed!

12.4.6 'F3': Statistic

F1	Counter
F2	Timer
F3	Distance
F4	Next
F8	Back

This menu allows you to watch values described in the following chapters by pressing the corresponding function key.

12.4.6.1 'F1 Counter'

This counter shows the number of the driven door cycles.

12.4.6.2 'F2 Timer'

This counter shows the power-on time of the door electronic.

12.4.6.3 'F3 Distance'

This counter measures the absolute movement of the drive belt in meter, but not the coupler movement.

12.4.7 'F4': Next (Statistic)

F1	Energy
F2	
F3	
F4	
F8	Back

This menu allows you to watch values described in the following chapters by pressing the corresponding function key.

12.4.7.1 'F1 Energy'

This counter counts the electric power feed to the drive in KWh.

12.4.8 'F4': Next (Main Menu)

```
F1 Error List
F2 Belt Position
F3 Log Out
F4          F8 Back
```

This menu allows you to watch values described in the following chapters by pressing the corresponding function key.

12.4.8.1 'F1 Error List'

Errors are coded with numbers or letters. The Error List can be deleted with the key 'F5'.

Possible Faults are:

- 'EC' : Fault by Encoder
- 'EE' : EEprom writing or reading fault
- 'OC' : Over current
- 'RS' : Faulty reference switch
- 'IE' : Internal software fault
- 'AP' : Fault by position counter, door width > 5m
- 'TS' : Faulty temperature sensor
- 'NE' : Encoder not connected
- 'CF' : Closing force potentiometer defect
- 'ME' : Fault by motor or encoder
- 'SS' : Standstill fault, door is blocked
- 'TH' : temperature of the electronic or motor too high
- 'FE' : is set during manual change of coupler movement parameter.
- 'BM' : mechanical balancing error, rotor position can not be found.
- 'MD' : wrong motor movement direction.

12.4.8.2 'F2 Belt Position'

Actual position of the belt, positive- door panels open (then it is the door panel position), negative - coupler area

12.4.8.3 'F3 Log Out'

By pressing F3 the communication between door drive and WPT is stopped and the WITTUR Programming Tool switches off.

13. DEFAULT ADJUSTMENT OF ECO+ SOFTWARE

The max. close (nudging) speed must always be set according codes. EN81 requires the energy limit of $E = 10J$ for closing ($E = 4J$ for nudging), this must be calculated by the formula:

$$E = \frac{m_{equ} * v_{belt}^2}{2}$$

Because of the different speeds of door panels (e.g. for telescopic doors) the mass m_{equ} has to be calculated as virtual mass seen from belt.

$$m_{equ} = m_{antr} + \text{sum of } (m_{panel} * (v_{panel} / v_{belt})^2)$$

m_{antr} virtual mass of operator

m_{panel} mass of the panel

v_{panel} speed of the panel

v_{belt} speed of the belt

The operator mass $m_{operator}$ is about 10kg including motor, hanger plate and coupler.

The table below shows the default parameters for different speed settings. Close and nudging speeds are calculated according EN81 energy limitation (Max. mass = m_{equ}).

Speed settings (acc. EN81)	Max. Mass [kg]	Open speed [m/s]	Close speed [m/s]	Nudging speed [m/s]
1	130	0,25	0,2	0,12
2	130	0,33	0,26	0,17
3	130	0,42	0,33	0,21
4	130	0,5	0,39	0,25

The max. door speed setting is calculated with mass m_{equ} of 130kg. The close and nudging speed is then limited to the panel energy of 10J and 4J respectively.

This door times will also vary depending on:

- Door masses.
- Friction.
- Mechanical adjustments.
- Alignment of landing doors.
- User Interface SW parameters.

The time for coupler and lock movement is about 0.7 sec. in open and close direction.

14. MAINTENANCE


14.1 OPERATOR-AND PANEL FIXATION

Ty 02/C


Ty 12/R-L

Ty 4S

Ty 4AS

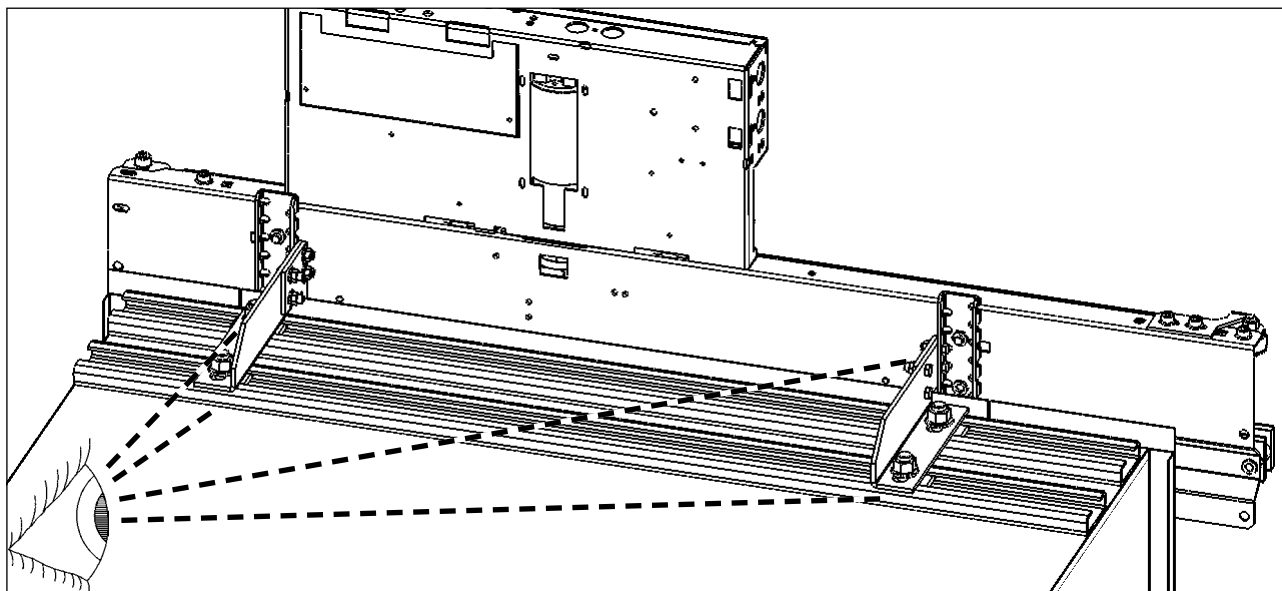

Visual inspection of the fixation on following characteristics: break, failure and correct installation.

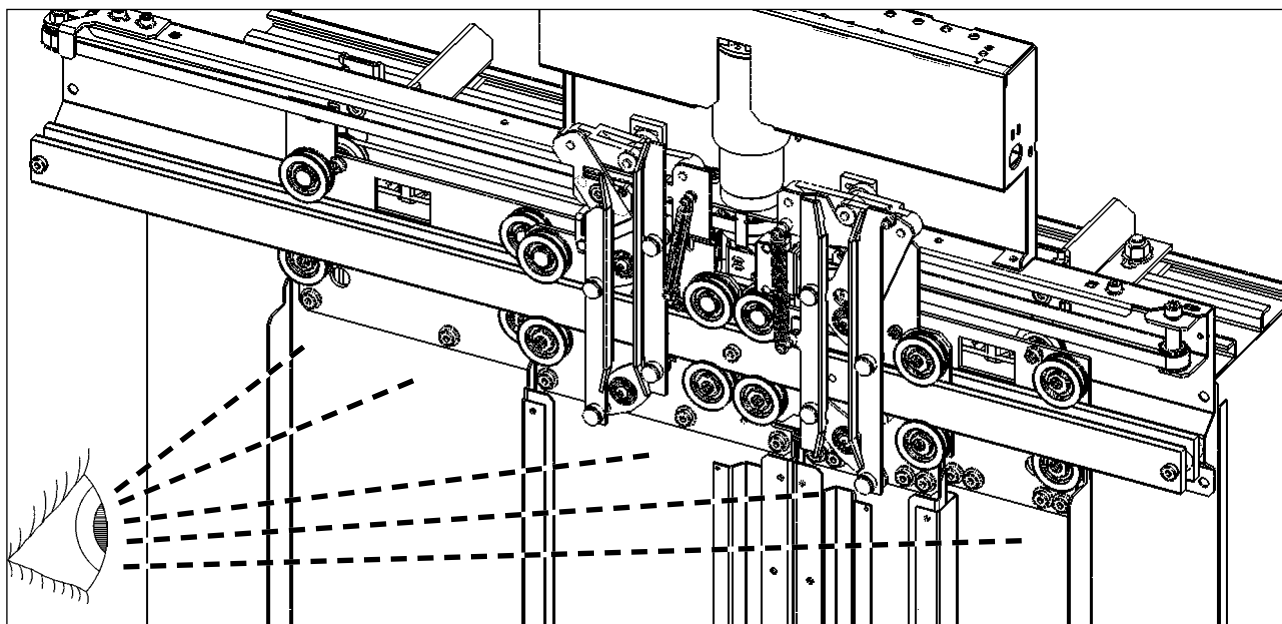

14.2 CHECKING THE DOOR GAP

See paragraph 1.18.


14.3 SYNCHRONISATION ROPE

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

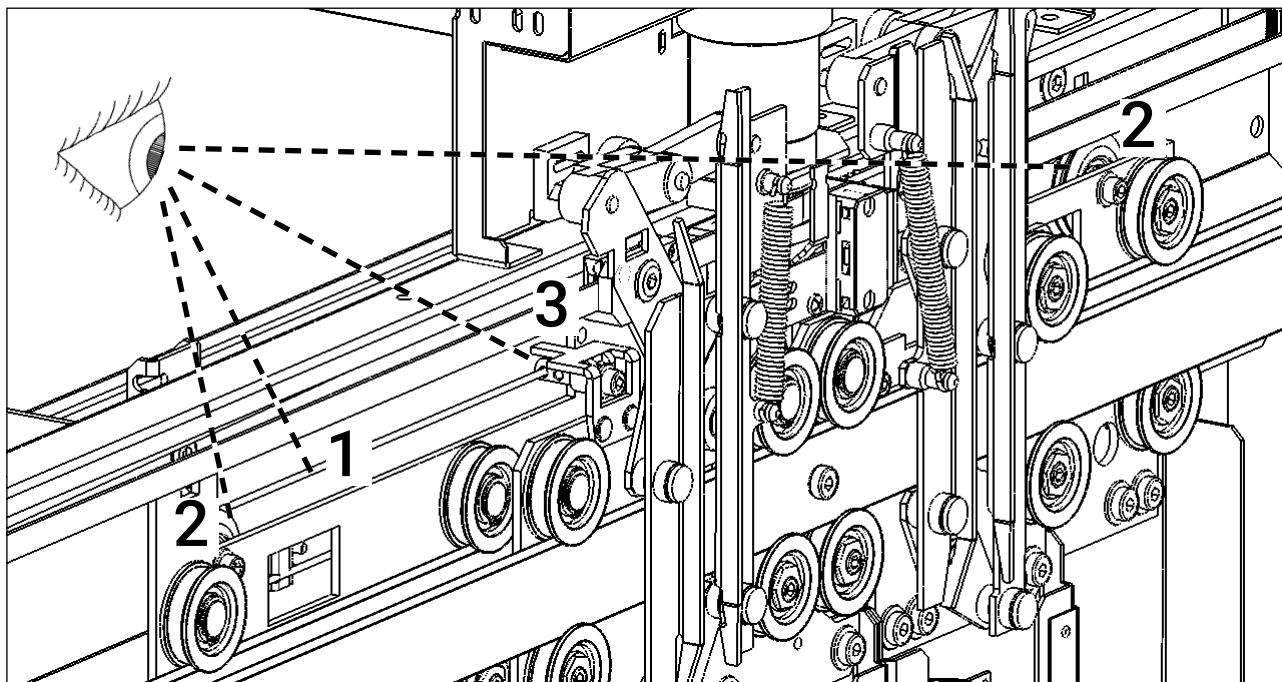

Visual inspection of the synchronisation rope (1), the synchronisation roller (2) and the rope fixing bracket (3).



14.4 EMERGENCY DRIVE

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

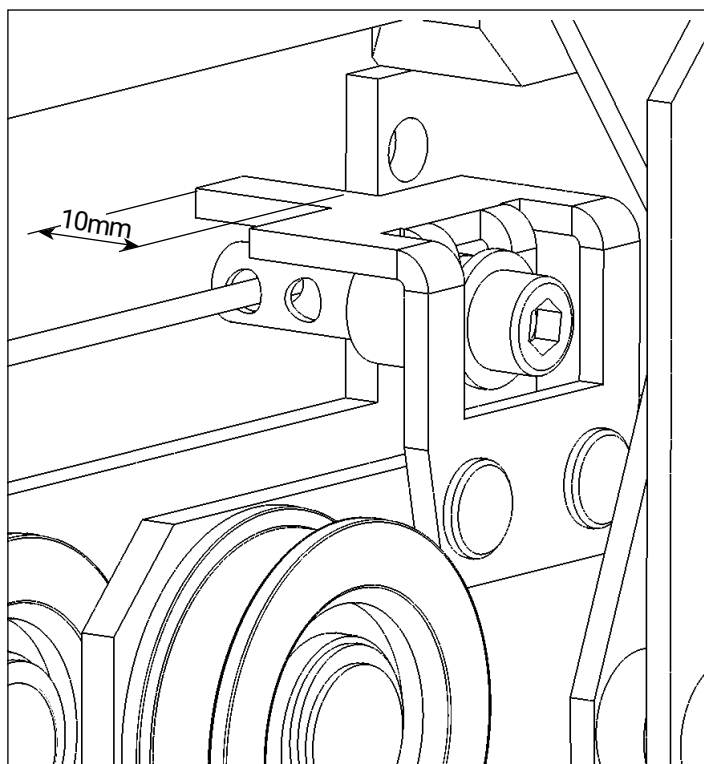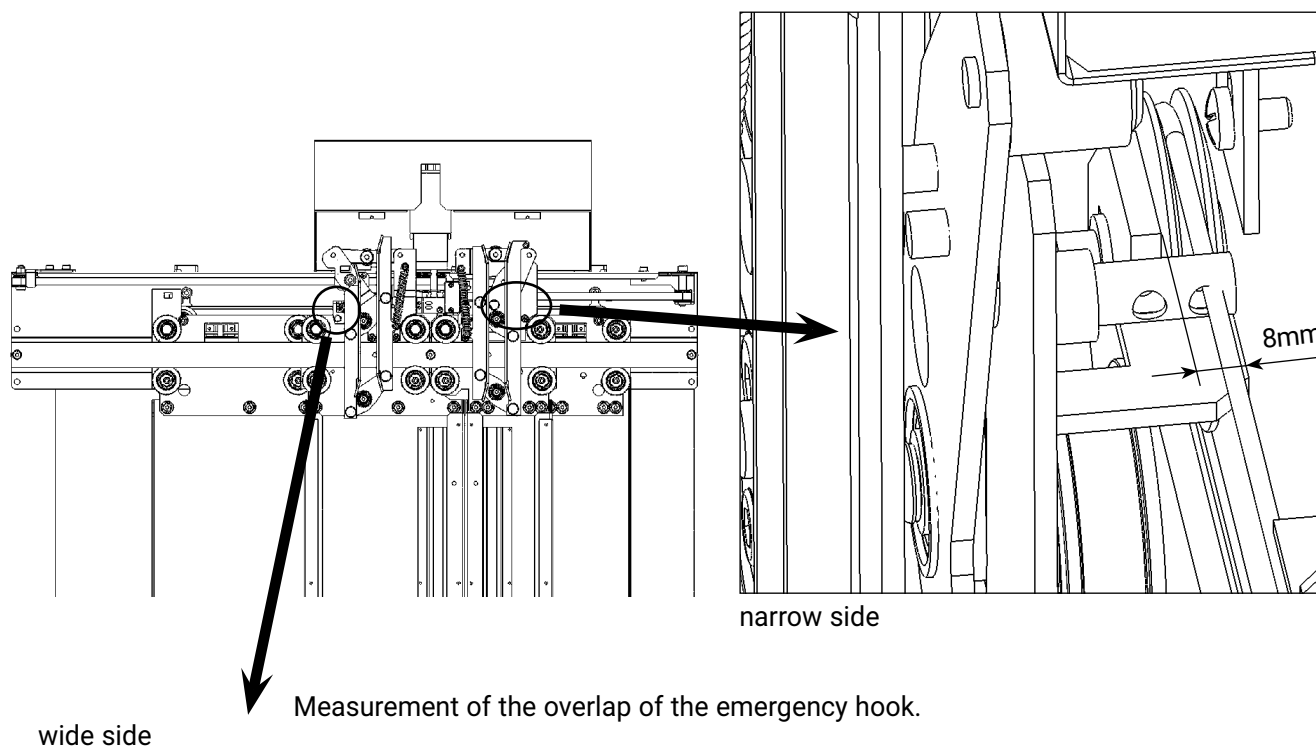

14.5 HANGER PLATE GUIDING


Ty 02/C

Ty 12/R-L


Ty 4S

Ty 4AS

Visual inspection of the roller on following characteristics: break, crack, abrasion, failure and correct installation. Deposits and dirt on the running rail and rollers must be removed.

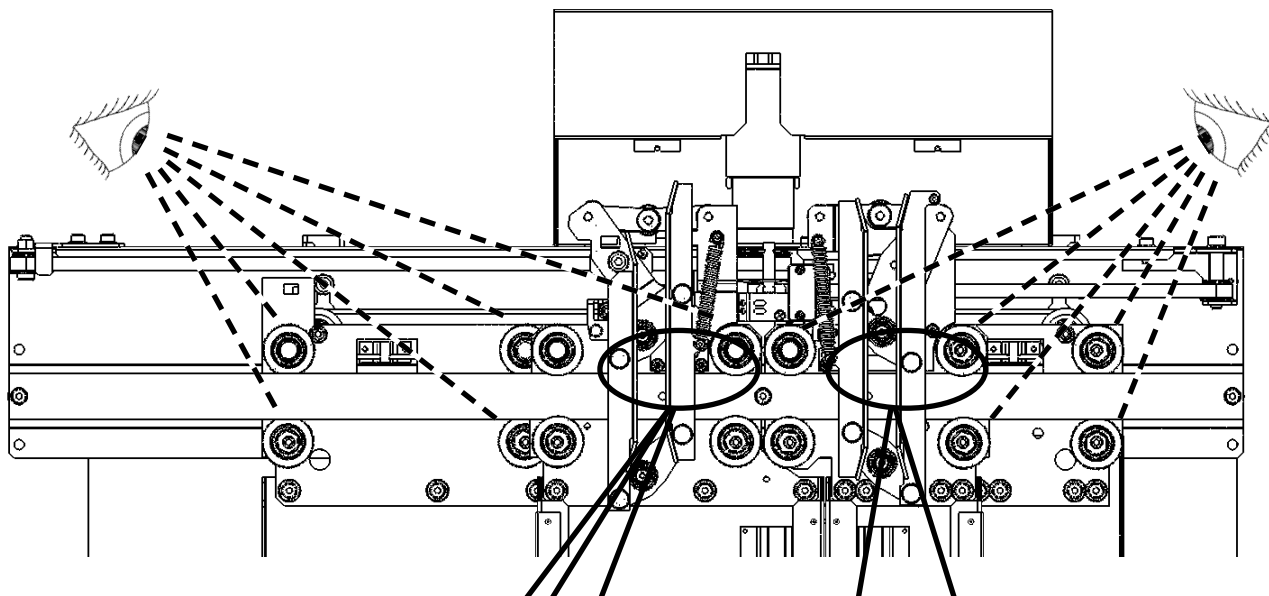

Visual inspection of the Emergency guiding on following characteristics: break, failure and correct installation

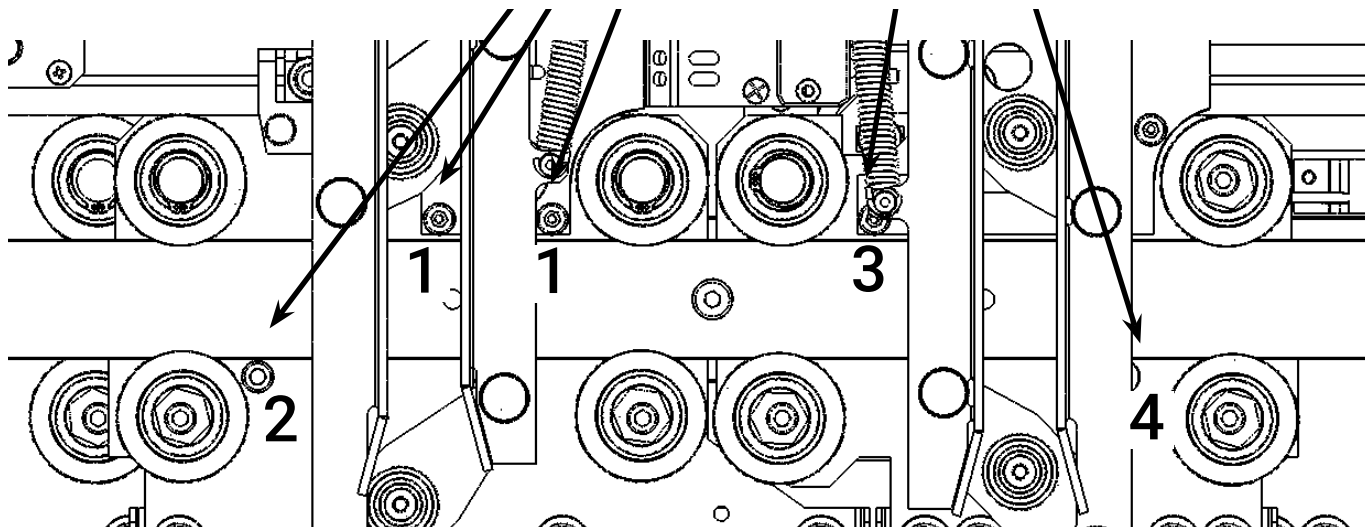

Emergency guiding left side: hexagon screw (1) and lift-out guard (2).
Emergency guiding right side: hexagon screw (3) and lift-out guard (4).

14.6 ASSEMBLY OF THE SPARE PARTS



14.6.1 Replacement of the sliding shoes

Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

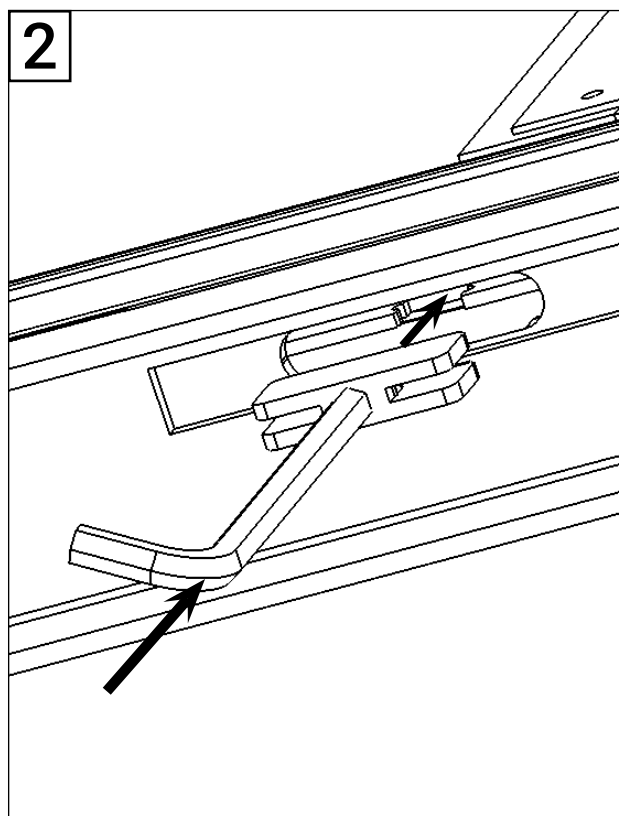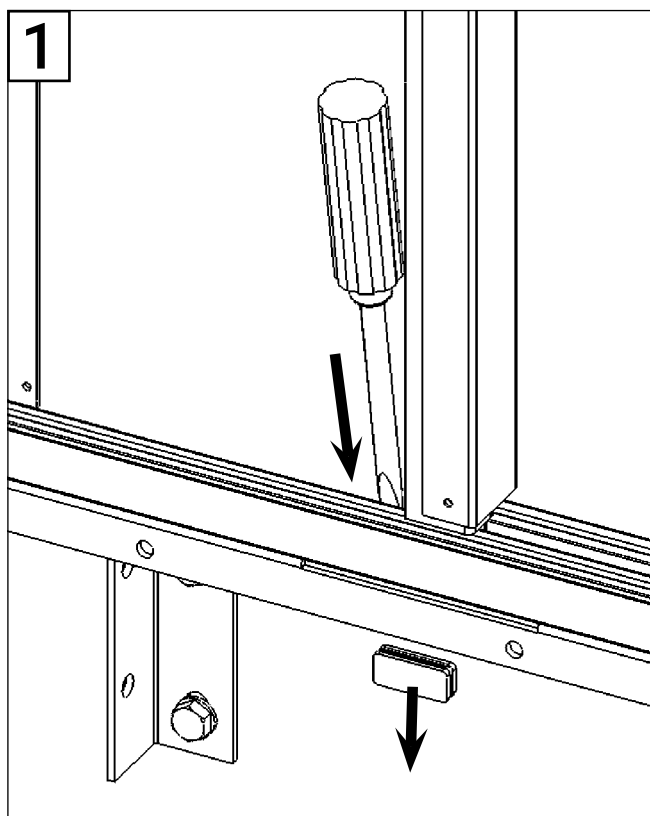

Check failures, break or abrasion.


14.6.2 Replacement of the roller


Ty 02/C

Ty 12/R-L

Ty 4S

Ty 4AS

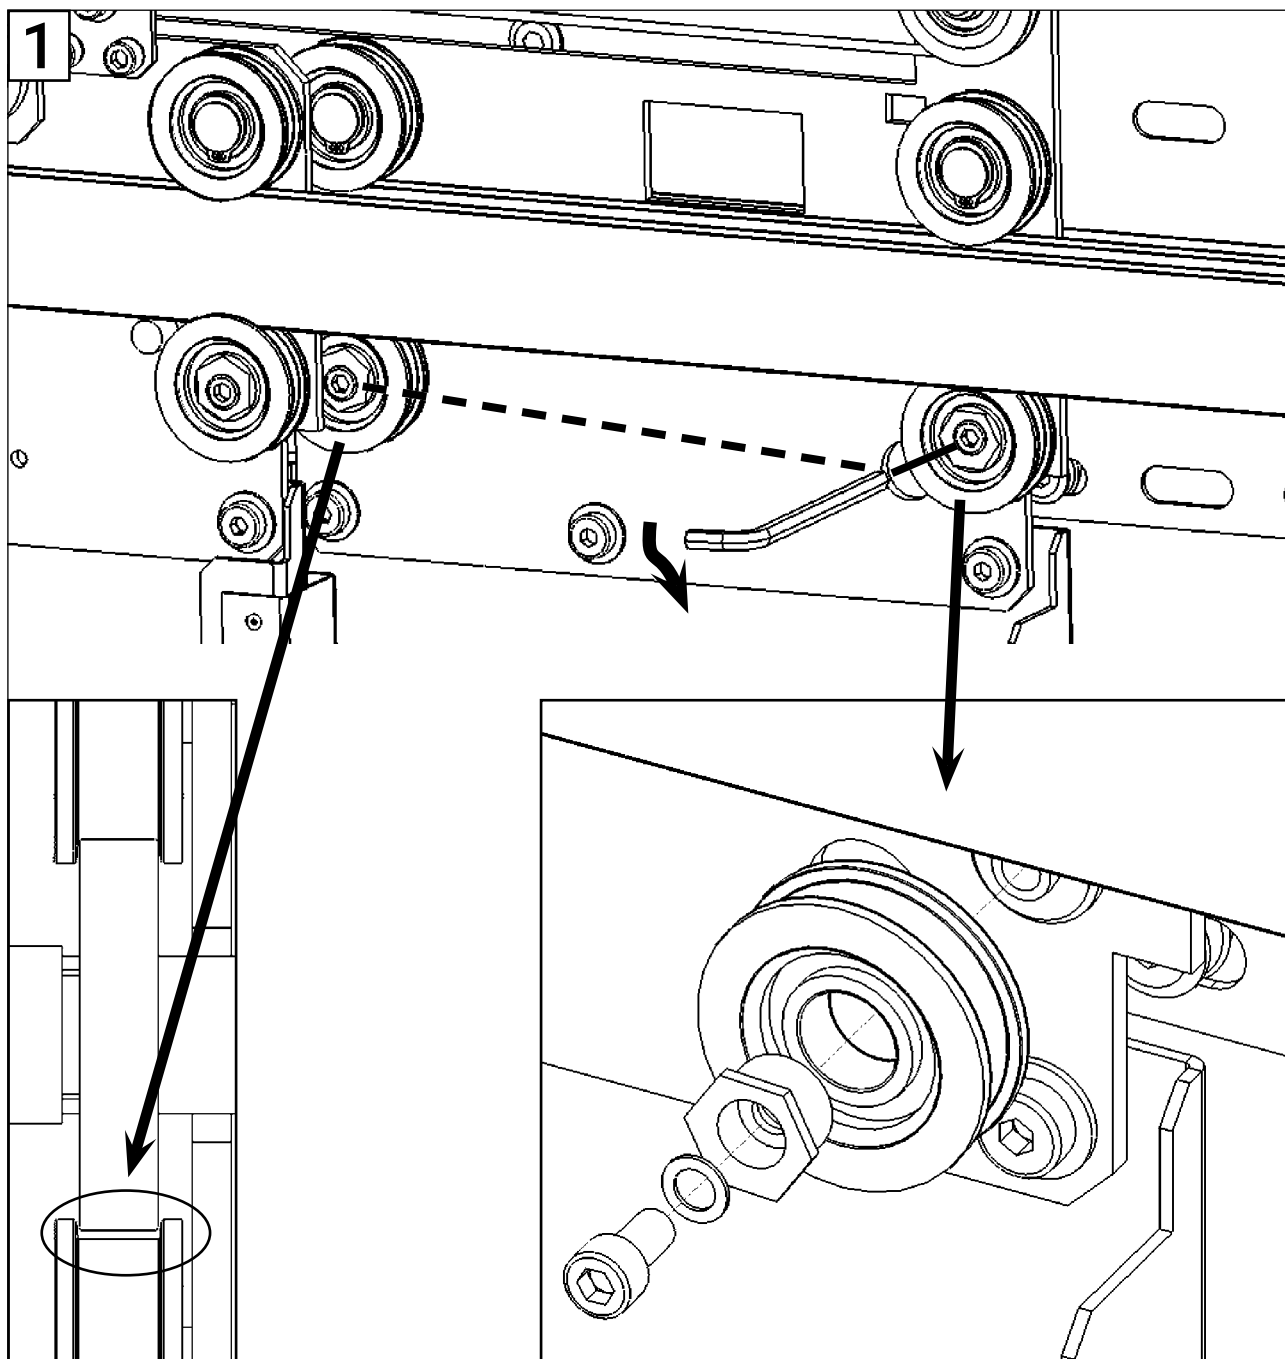


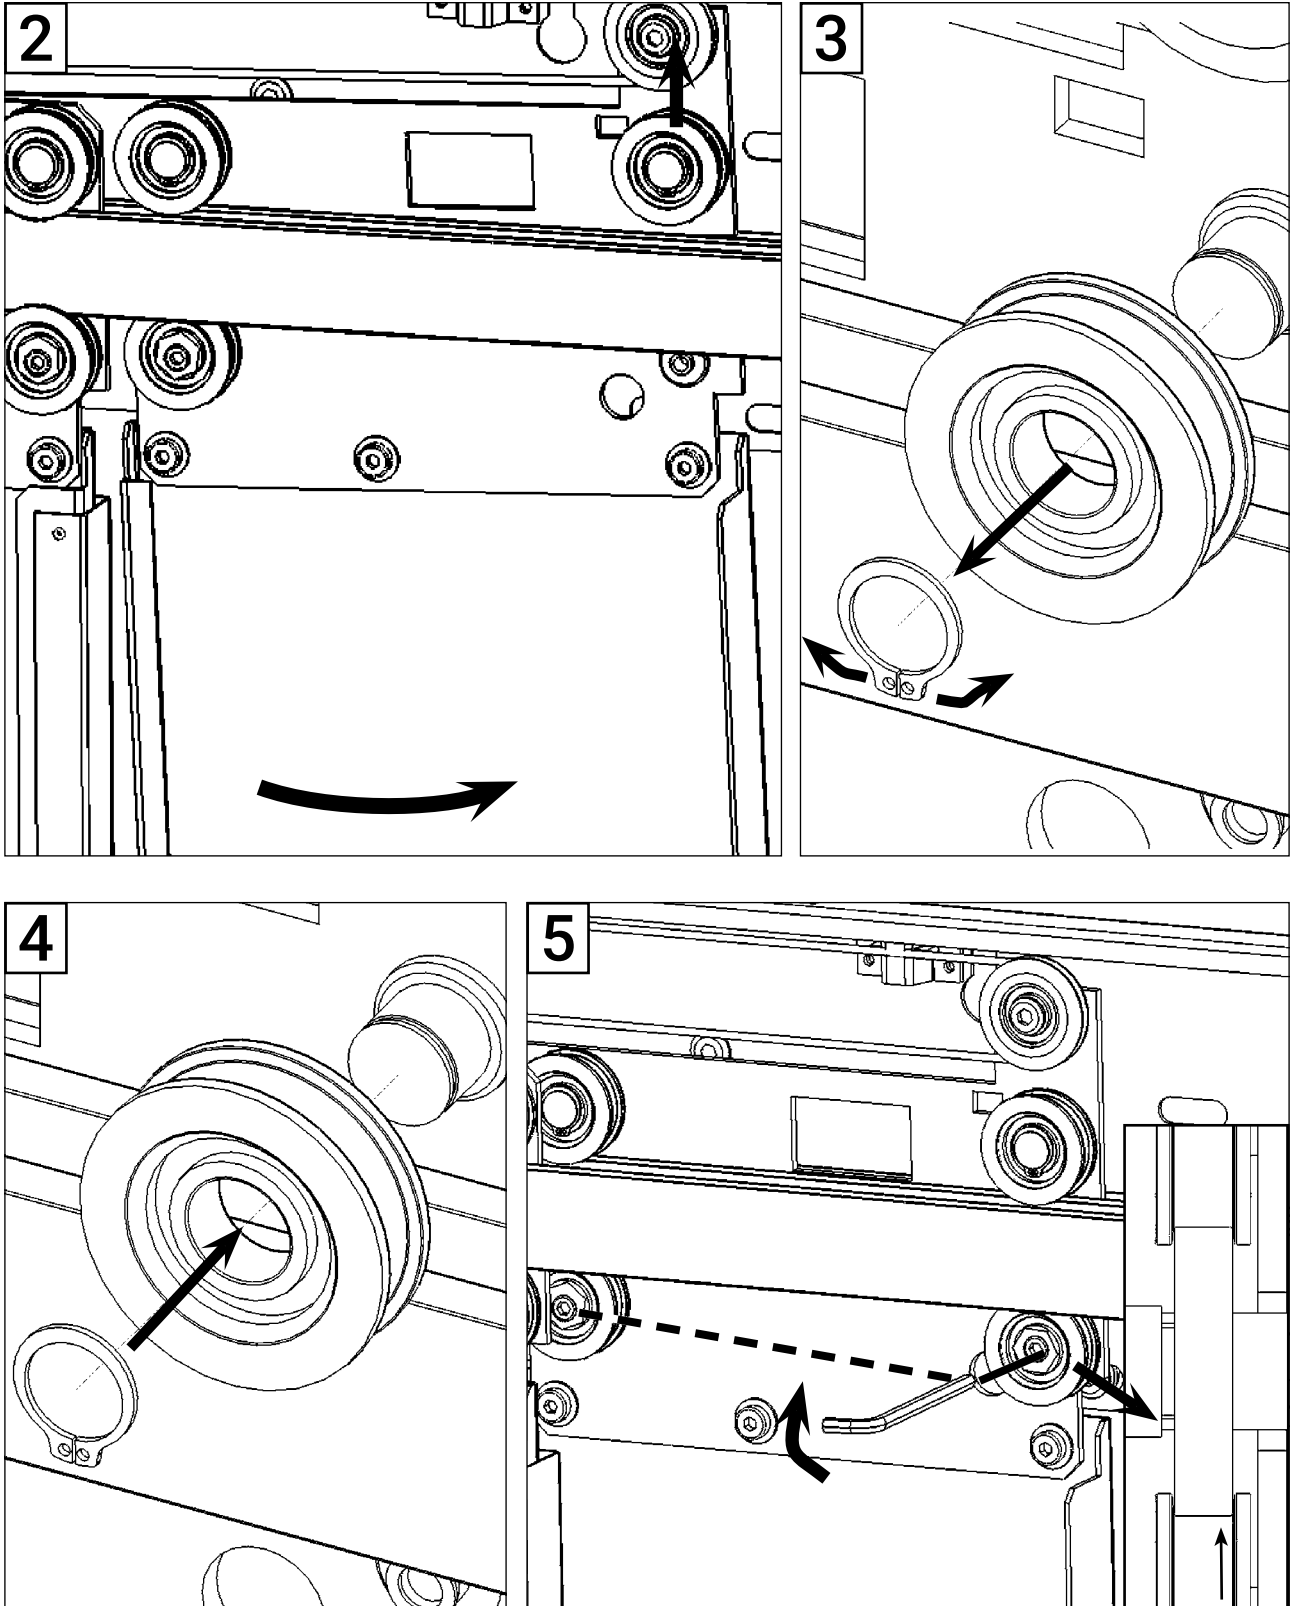


Ty 4AS

14.6.3 Belt exchange

14.6.3.1 Remove short belt

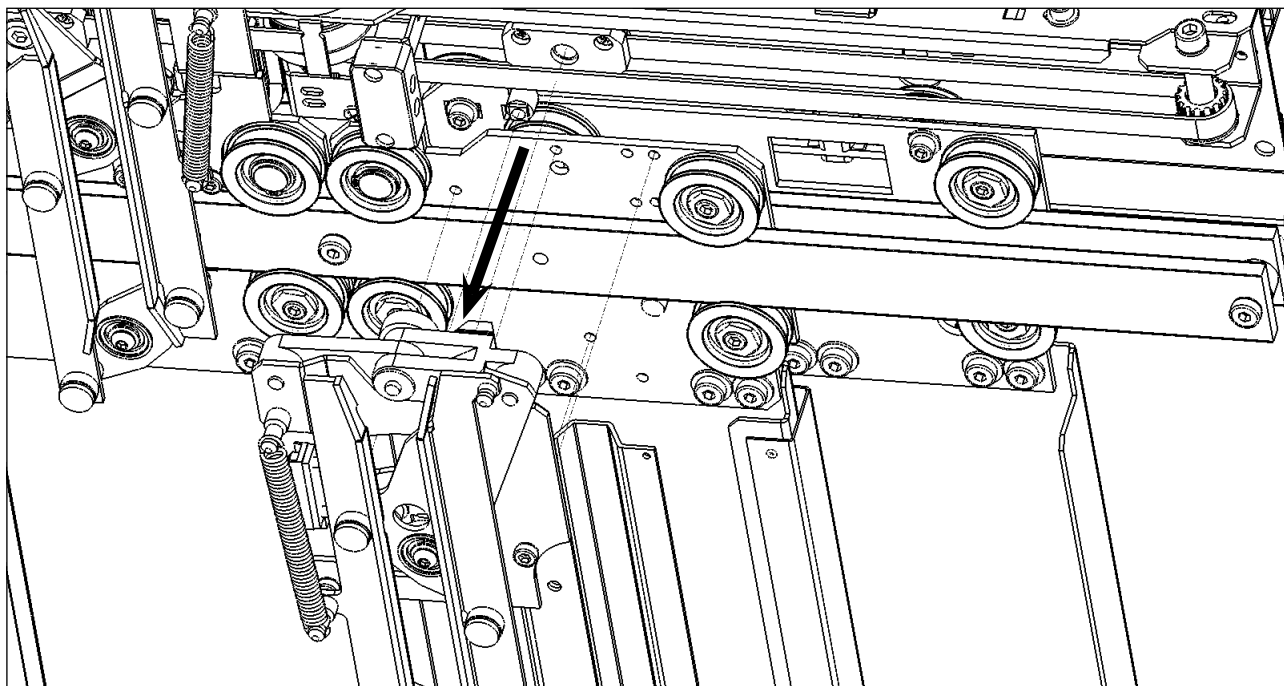

Loosen the screws (1) without removing them completely in order to loosen the belt (4). Loosen the 2 screws (2) from the belt fixing to loose the belt completely.

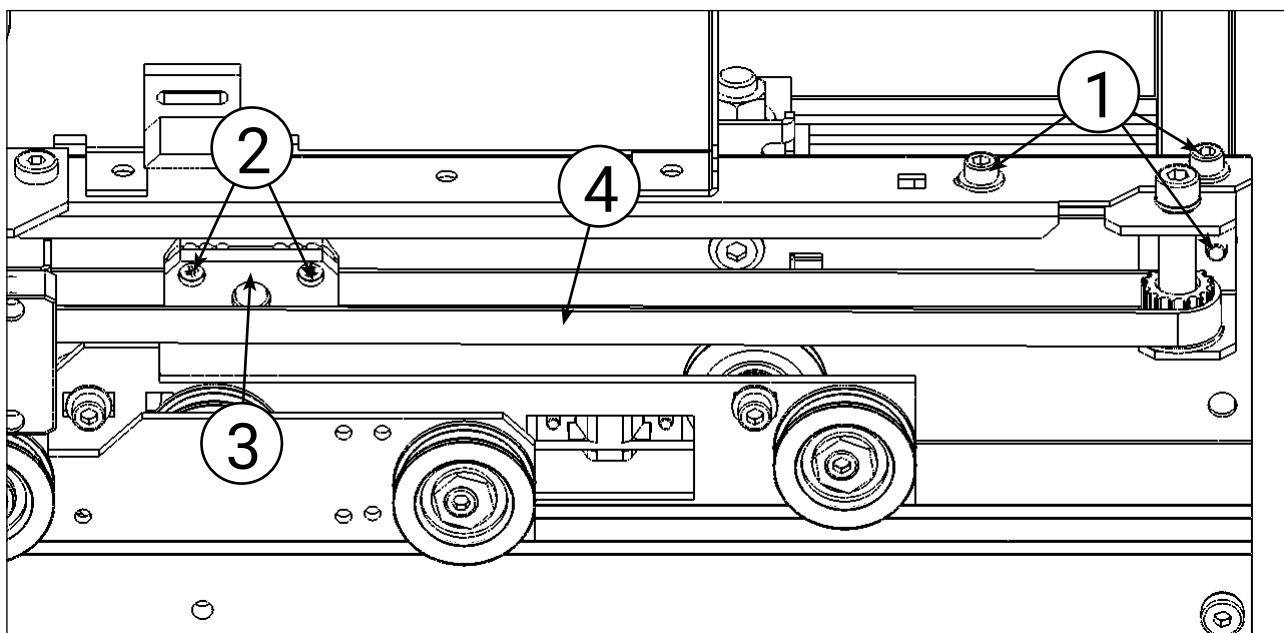


14.6.3.2 Remove long belt

Ty 02/C

Ty 12/R-L

Ty 4S


Remove the screw (1). Loosen the screws (2) without removing them completely in order to loosen the belt (4). Loosen the 2 screws (3) from the belt fixing to loose the belt completely.

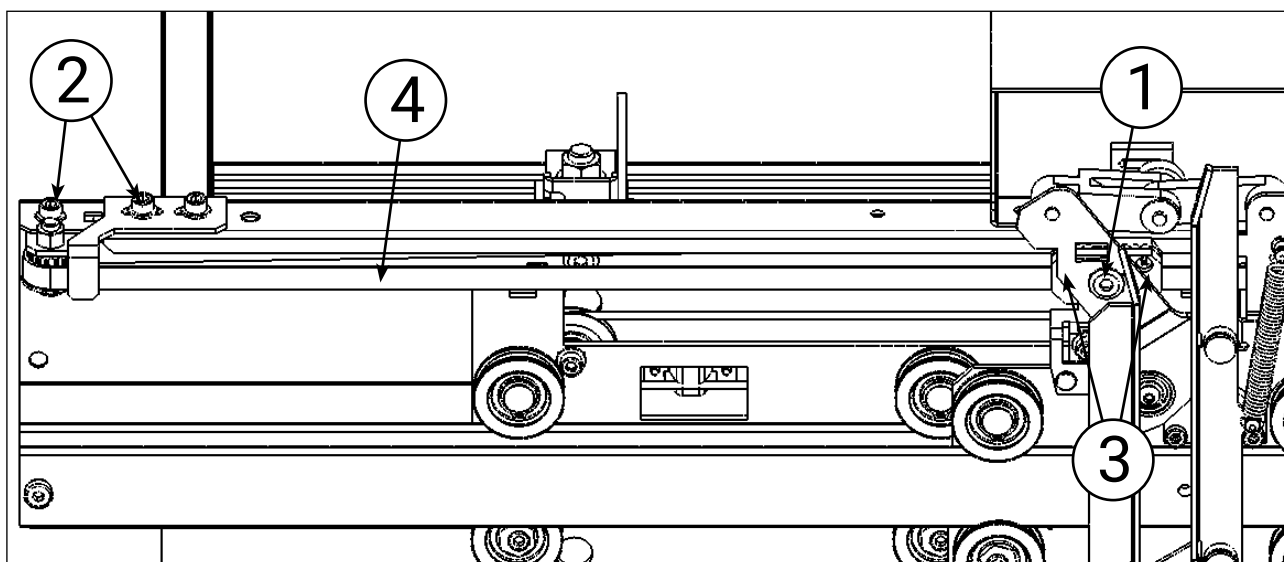

Ty 4AS

14.6.3.3 Mounting the short belt

Put in the Belt (1) and fix the belt fixing (5) with the screws (6). To adjust the toothed belt tension, it is necessary to press the belt with your finger (see picture) and use the screwdriver (2) to adjust the belt diverting pulley (3). Tight the screws (4) and mount the coupler.

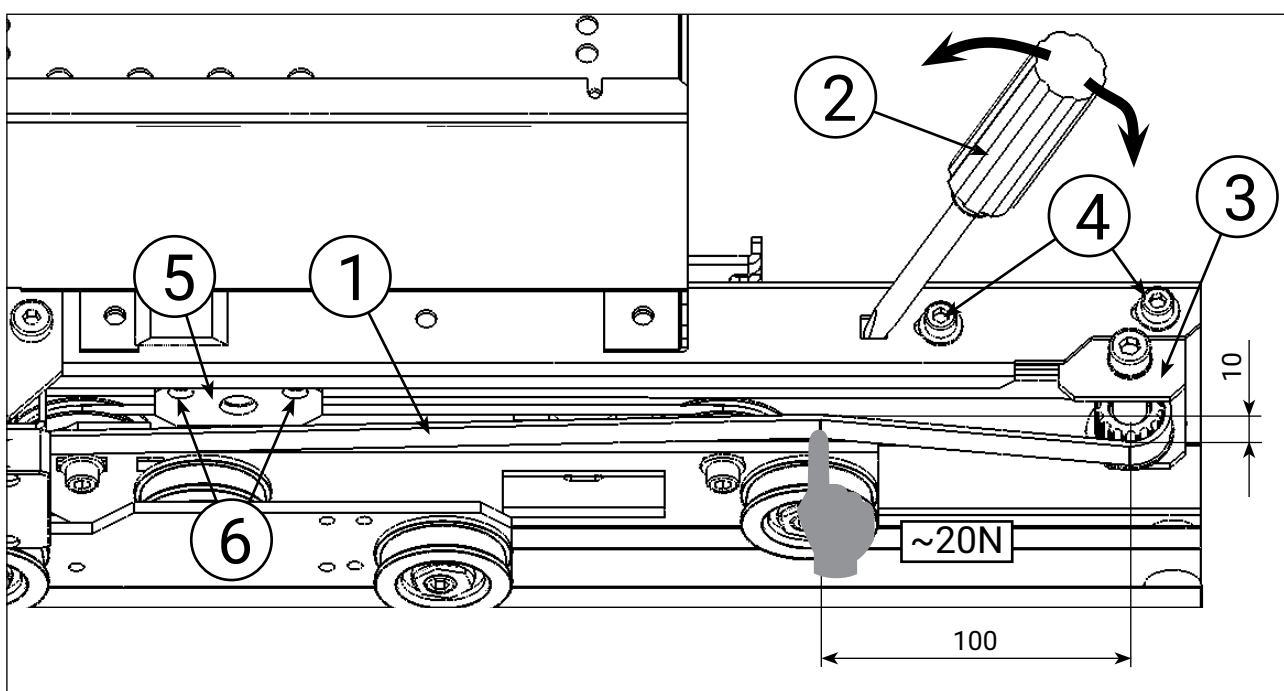


14.6.3.4 Mounting the long belt

Ty 02/C

Ty 12/R-L

Ty 4S

Put in the belt and adjust the belt fixing so that it is in the middle of the rectangular hole when the door is closed. To adjust the toothed belt (1) tension, it is necessary to press the belt with your finger (see picture) and use the screwdriver (2) to adjust the belt diverting pulley (3). Tight the screws (4) and the belt fixing with the screws (5).

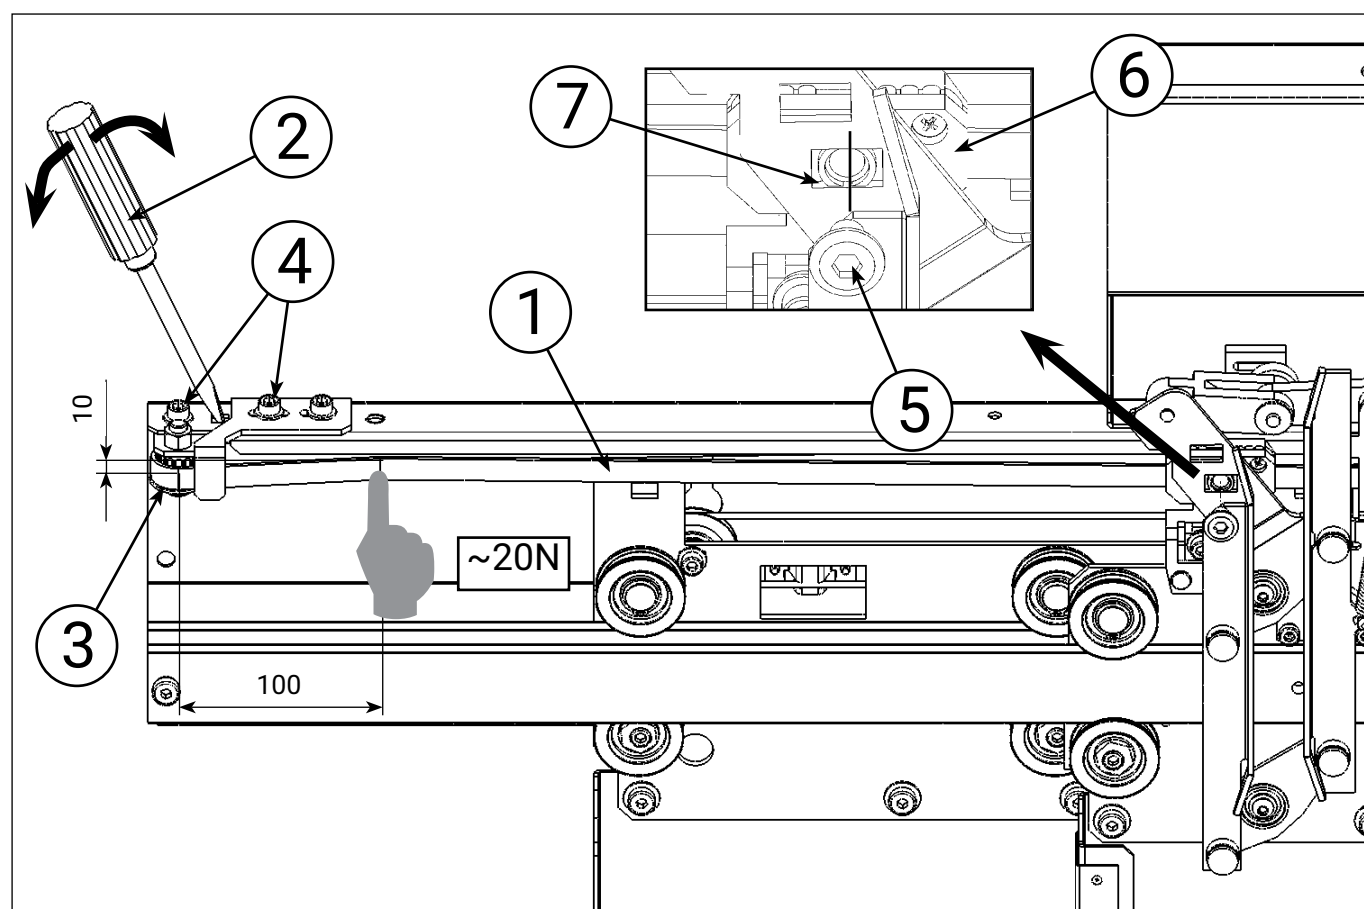

14.7 REPLACEMENT OF THE SYNCHRONISATION ROPE



Ty 02/C

Ty 12/R-L

Ty 4S

14.7.1 Removing the synchronisation rope

Relax the rope pulley (1) and the rope fixing (2), then remove the rope actuator (3). To remove the rope it is necessary to relax the headless pin in the rope actuator.

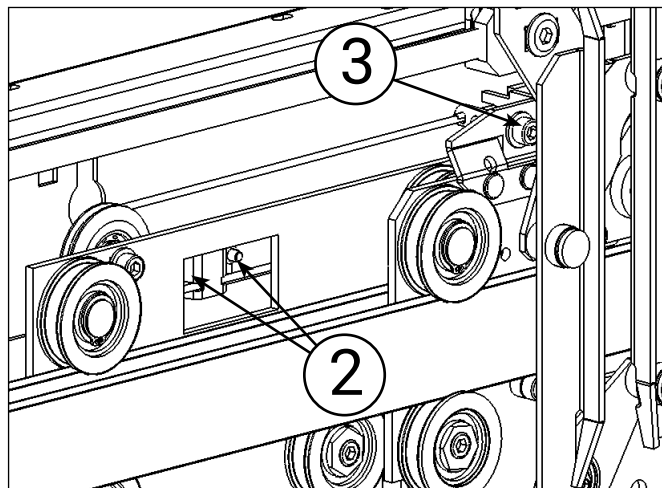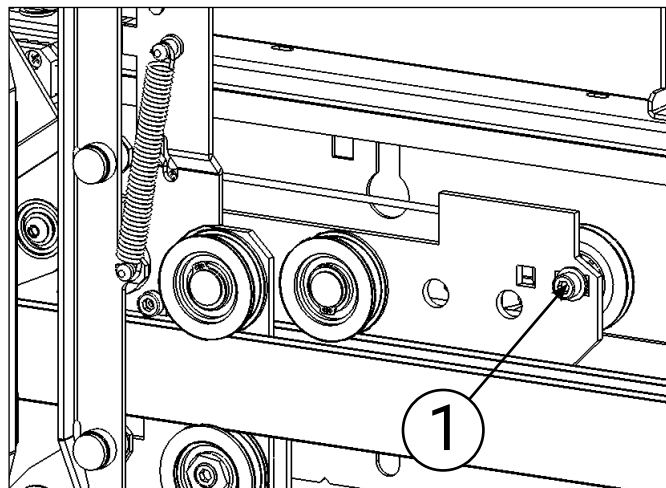


Ty 02/C

Ty 12/R-L


Ty 4S

14.7.2 Synchronisation rope assembly

Mount the synchronization rope on the rope pulleys (1) and arrange it through the rope fixing (2).

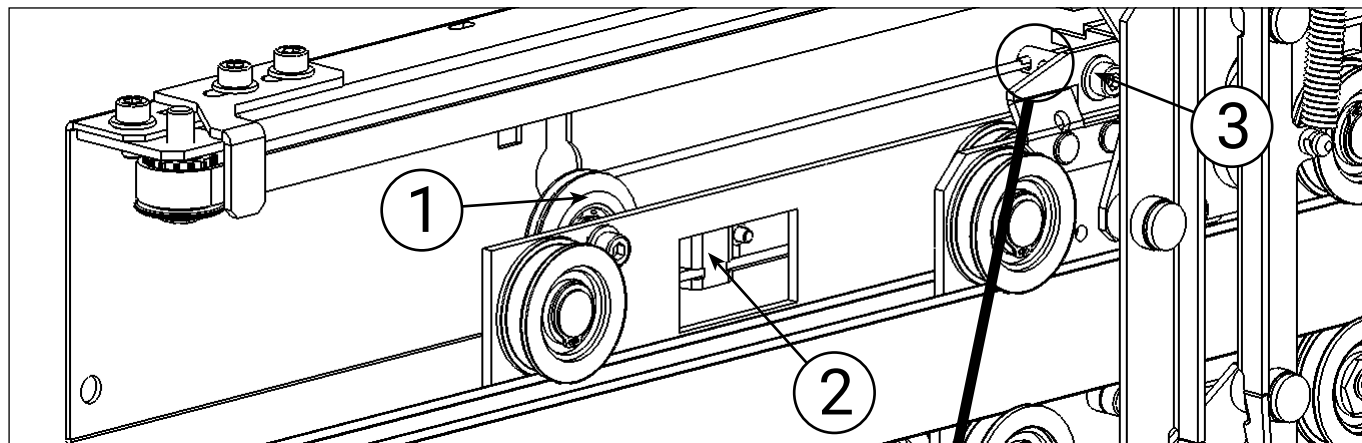

Adjust the rope endings in the rope actuator (3) so that when the door is open the end of the rope is bending down and it doesn't contact the rope pulley. Then fix the rope endings with the headless pin (4) and mount the rope actuator.

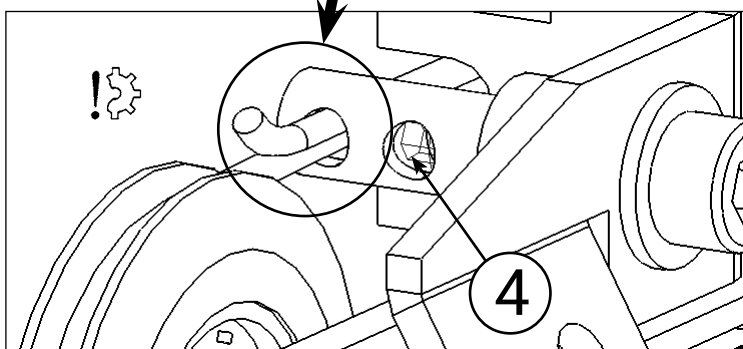


Ty 12/R-L

Ty 4S

Ty 4AS

14.7.3 Clamping the synchronisation rope

Clamp the inner rope pulley with the screw driver (1) and fix the hexagon screw (2).

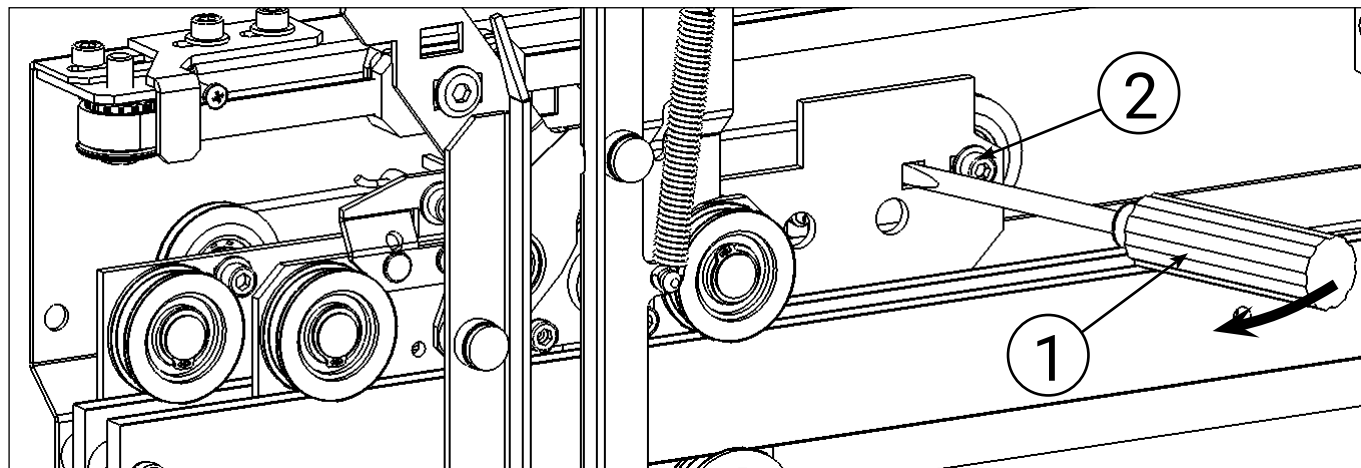


Ty 12/R-L

Ty 4S

Ty 4AS

14.7.4 Synchronizing the door

Open the door as far as the outer edge of the hanger plate has a distance to the mechanism of 12mm. Then fix the rope fixing (3).

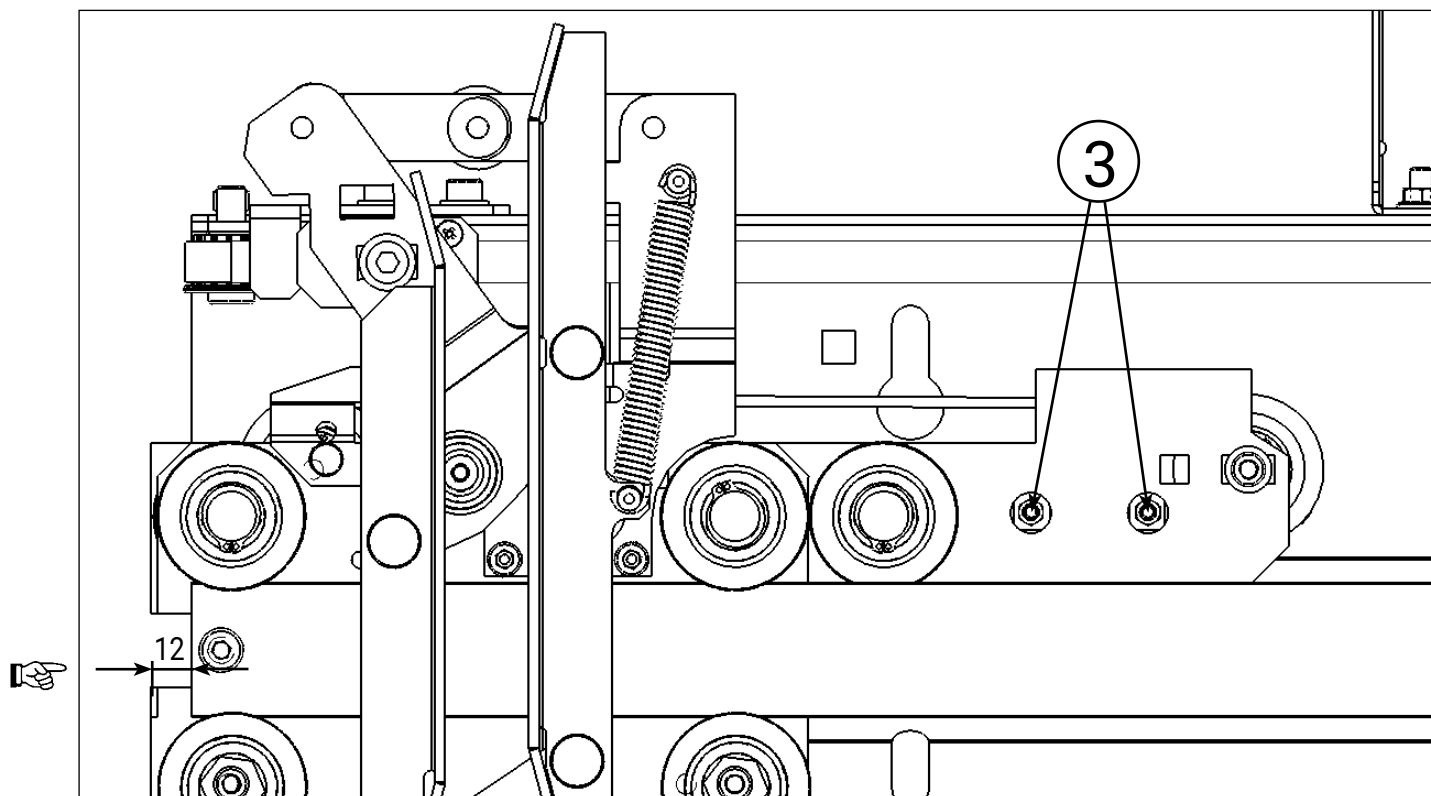

INSTRUCTION HANDBOOK CAR DOOR

Code GM.2.001049.EN
Version Q
Date 17.04.2025
Page 161.161

WARNINGS ON HOW TO KEEP THE DOORS IN GOOD OPERATING CONDITIONS



In order to prevent failures or incorrect operation and to maintain the system in good conditions, the technical efficiency of the system should periodically be checked, to ensure compliance with the applicable laws.

The technical efficiency depends on various factors such as:

- Work load
- Years of operation
- Door weight
- Climatic and environmental conditions
- Cleanness of environment
- Correct maintenance
- Etc.

And it can affect:

- Clearance/interference between the doors, and between the doors and posts according to the applicable laws
- Clearance of coupling device
- Status/conditions of fixing and coupling elements
- Conditions of parts affected by wear
- Efficiency of the lock and relevant contacts
- Any other parts that may be affected by the type of application.

For these reasons it is not possible to establish a general part replacement programme beforehand.



All screws used for the assembly of our product are screwed by means of a tightening torque as shown on following table:

Screw	Max torque (Nm)	Min torque (Nm)
M3	1,1	0,9
M4	2,6	2,1
M5	5,1	4,1
M6	9	7
M8	21	17
M10	42	34
M12	71,4	57,1

In case of need please refer to above table.



WITTUR

YOUR GLOBAL PARTNER FOR COMPONENTS,
MODULES AND SYSTEMS IN THE ELEVATOR INDUSTRY



2 L 1 H 3 2 0 2 3 0 E N I

WITTUR.COM



ADVANCING THE ELEVATOR INDUSTRY®